


WP8024ADAM

User's Manual

Version 1.42A

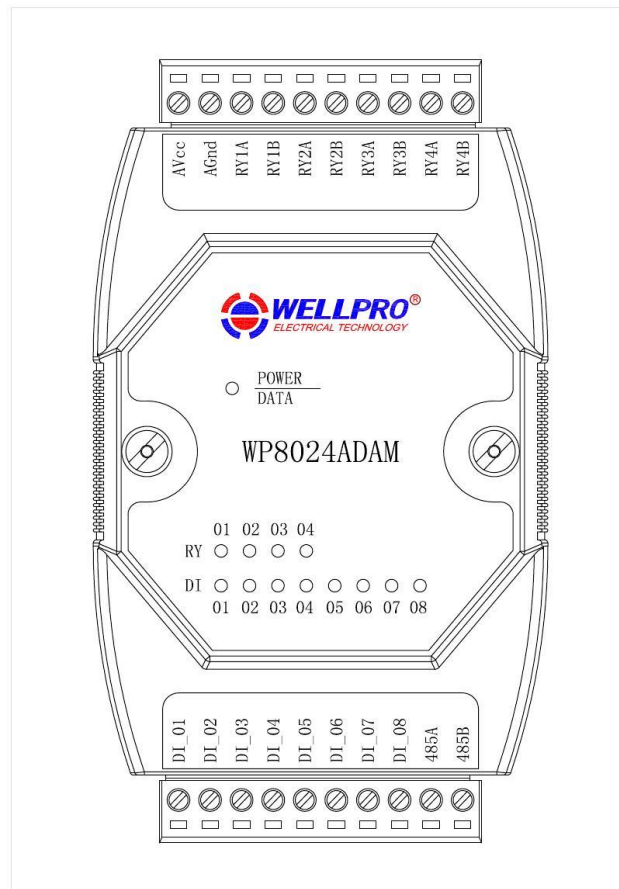

1、 Product description

- Eight optoelectronic isolation digital input channel (Low level input)
- Four relay output channel (SPST)
- RS485 MODBUS RTU standard communication protocol
- Netted with configuration software, PLC or industry touch panel
- Communication, digital input and digital output status LED
- Communication circuit designed for thunder protection and interference immunity
- Used for signal collection and control in industrial field

2、 Specification


- Digital input channel 8ch (Low level input)
- Relay output channel 4ch (SPST)
- Relay contact capacity 2A/250VAC 2A/30VDC
- Working temperature -20~70°C
- External power supply DC9V~30V/5W
- Isolation protection DC1500V
- Installation method Standard DIN slide rail or screw
- Dimension 125×73×35mm

3、 Interface description


AVcc	External power supply input positive
AGnd	External power supply input negative / Power ground
RY1A	Relay output channel 1 normally open contact A
RY1B	Relay output channel 1 normally open contact B
RY2A	Relay output channel 2 normally open contact A
RY2B	Relay output channel 2 normally open contact B
RY3A	Relay output channel 3 normally open contact A
RY3B	Relay output channel 3 normally open contact B
RY4A	Relay output channel 4 normally open contact A
RY4B	Relay output channel 4 normally open contact B
DI_01	Digital input channel 1
DI_02	Digital input channel 2
DI_03	Digital input channel 3
DI_04	Digital input channel 4
DI_05	Digital input channel 5
DI_06	Digital input channel 6
DI_07	Digital input channel 7
DI_08	Digital input channel 8
485B	RS485 signal B-
485A	RS485 signal A+

4、 Digital application diagram

4.1、 Digital input application diagram

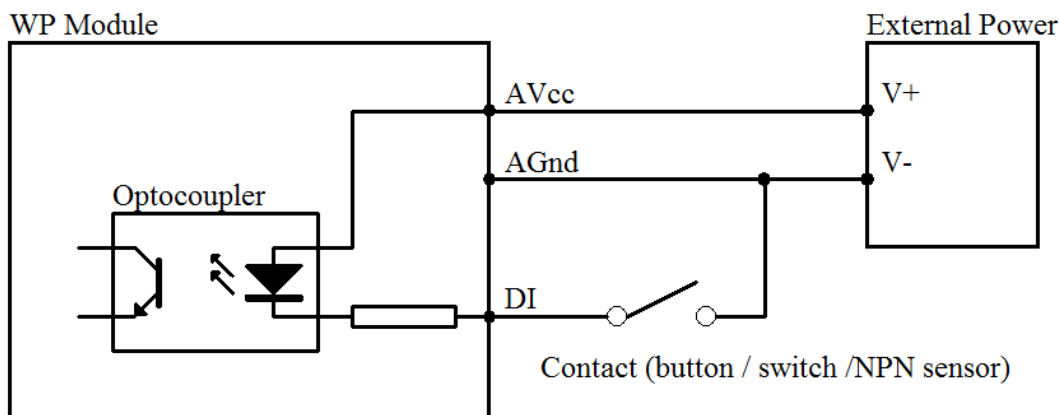

4.2. Digital output application diagram

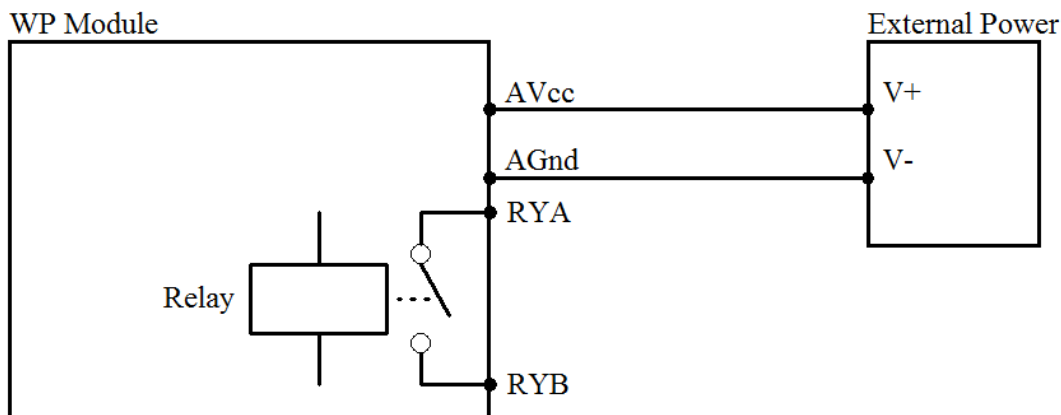

5. Communication description

5.1. Communication parameter: 9600, None, 8, 1 (default setting)

Parameter	Description
9600	baud rate
None	check bit
8	data bit
1	stop bit

5.2. Command for digital input data reading

Send: 01 02 00 00 00 08 79 CC (example/hex)

data	byte	data description	remark
01	1	module address	address range:01-FE
02	1	function code	02-read digital input register
0000	2	register address (1X type)	0000-starting register address
0008	2	register number	0008-read 8 registers
79CC	2	CRC check code	CRC check code for all data

Receive: 01 02 01 C2 20 19 (example/hex)

data	byte	data description	remark
01	1	module address	address range:01-FE
02	1	function code	02-read digital input register
01	1	byte of data	01-read 1 byte
C2	1	read data	C2-digital input data
2019	2	CRC check code	CRC check code for all data

This command reads module's digital input data.

The data of the digital input is "C2", it will be "11000010" after converting to binary data. The eight bits of data correspond to DI_08~DI_01. It means DI_08, DI_07 and DI_02 are ON.

5.3. Command for digital output data setting (Control of multiple channels)

Send: 01 0F 00 00 00 04 01 03 7E 97 (example/hex)

data	byte	data description	remark
01	1	module address	address range:01-FE
0F	1	function code	0F-write multiple digital output register
0000	2	register address (0X type)	0000-starting register address
0004	2	register number	0004-write 4 registers
01	1	byte of data	01-write 1 byte
03	1	write data	03-digital output data
7E97	2	CRC check code	CRC check code for all data

Receive: 01 0F 00 00 00 04 54 08 (example/hex)

This command sets module to output multiple channels.

The data of the digital output is "03", it will be "00000011" after converting to binary data. The last four bits of data correspond to RY4~RY1. It means RY2 and RY1 are ON.

When module receives correct command, it will send response back to the master.

5.4. Command for digital output data setting (Control of single channel)

Send: 01 05 00 00 FF 00 8C 3A (example/hex)

data	byte	data description	remark
01	1	module address	address range:01-FE
05	1	function code	05-write single digital output register
0000	2	register address (0X type)	0000-digital output channel 1 register 0001-digital output channel 2 register 0002-digital output channel 3 register 0003-digital output channel 4 register
FF00	2	write data	FF00-ON, 0000-OFF
8C3A	2	CRC check code	CRC check code for all data

Receive: 01 05 00 00 FF 00 8C 3A (example/hex)

This command sets module to output single channel.

When module receives correct command, it will send response back to the master.

5.5. Command for digital output data reading

Send: 01 01 00 00 00 04 3D C9 (example/hex)

data	byte	data description	remark
01	1	module address	address range:01-FE
01	1	function code	01-read digital output register
0000	2	register address (0X type)	0000-starting register address
0004	2	register number	0004-read 4 registers
3DC9	2	CRC check code	CRC check code for all data

Receive: 01 01 01 03 11 89 (example/hex)

data	byte	data description	remark
01	1	module address	address range:01-FE
01	1	function code	01-read digital output register
01	1	byte of data	01-read 1 byte
03	1	read data	03-digital output data
1189	2	CRC check code	CRC check code for all data

This command reads module's digital output data.

The data of the digital output is "03", it will be "00000011" after converting to binary data. The last four bits of data correspond to RY4~RY1. It means RY2 and RY1 are ON.

5.6. Command for module address setting

Send: 00 06 00 64 00 01 08 04 (example/hex)

date	byte	data description	remark
00	1	module address	00-broadcast address
06	1	function code	06-write single holding register
0064	2	register address (4X type)	0064-module address register
0001	2	write data	0001- module address, range:0001-00FE
0804	2	CRC check code	CRC check code for all data

Receive: 00 06 00 64 00 01 08 04 (example/hex)

This command sets module address (slave address) as “01” (default setting). This setting could be saved when power off. This is a broadcast command. It needs to ensure that only one module is connected to the master. When module receives correct command, it will send response back to the master.

5.7. Command for communication parameter setting

Send: 01 06 00 65 00 02 18 14 (example/hex)

data	byte	data description	remark
01	1	module address	address range:01-FE
06	1	function code	06-write single holding register
0065	2	register address (4X type)	0065-communication parameter register
0002	2	write data	0001- 4800, None, 8, 1 0002- 9600, None, 8, 1 0003- 19200, None, 8, 1 0004- 38400, None, 8, 1 0005- 4800, Even, 8, 1 0006- 9600, Even, 8, 1 0007- 19200, Even, 8, 1 0008- 38400, Even, 8, 1
1814	2	CRC check code	CRC check code for all data

Receive: 01 06 00 65 00 02 18 14 (example/hex)

This command sets communication parameter as “9600, None, 8, 1” (default setting). This setting could be saved when power off. When module receives correct command, it will send response back to the master.


6. POWER/DATA LED description

- When module powered on, LED is green.
- When module is under communication, LED is twinkling.
- When module receives correct command, LED is green.
- When module receives incorrect command or other module's command, LED is red.

7、PC debugging description

We provide a debugging software for function testing and parameter setting. Please follow the steps below:

- Connect computer to module with RS485 converter.
- Connect DC12V or DC24V power to module and power on. To avoid any unnecessary damage, please make sure the power positive and negative terminals are correctly connected before power on.
- Open the software and select the model of module, you will see the window of function testing or parameter setting.
- Set communication parameter and open the serial port.
- Select corresponding setting and click “Read” or “Write” button.

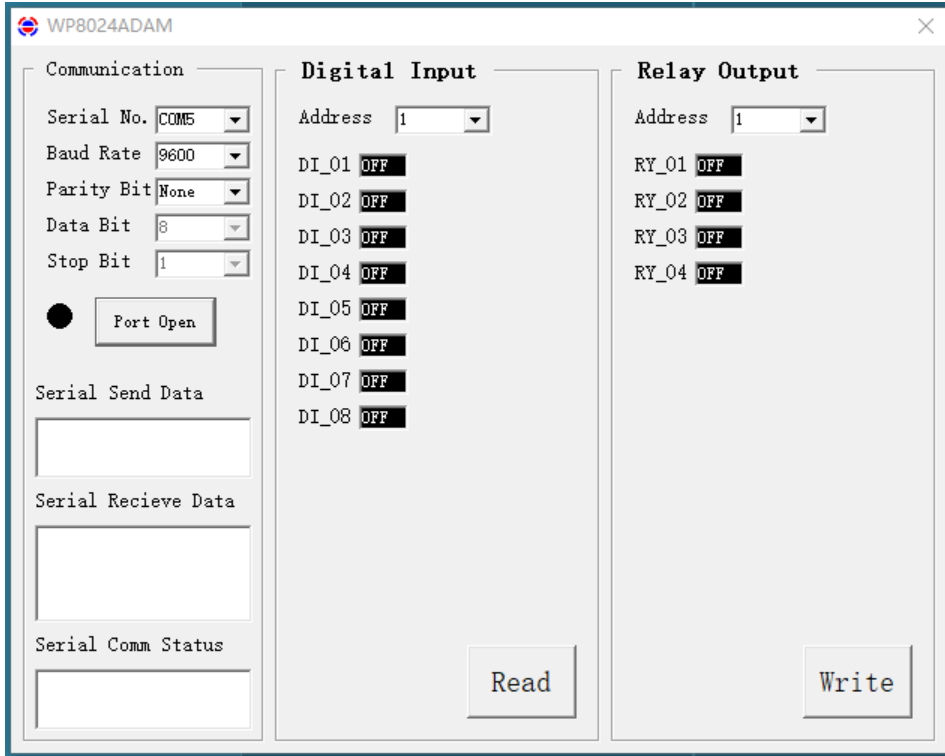

8、RS485 network diagram

