





BAT1

16 17 G 18 19 20 21 G 22 Run 26 27 G 28 Vref 3V3 En G Vin Vbus

15 14 G 13 12 11 10 G 9 8 7 6 G 5 4 3 2 G 1 0

P1

PWR STA [3] [4] [5] [6] [7] [8] [9] [10] [11] [12] [13] [14] [15] [16] [17] [18] [19] [20] [21] [22] [23] [24] [25] [26] [27] [28] [29] [30] [31] [32] [33] [34] [35] [36] [37] [38] [39] [40] [41] [42] [43] [44] [45] [46] [47] [48] [49] [50] [51] [52] [53] [54] [55] [56] [57] [58] [59] [60] [61] [62] [63] [64] [65] [66] [67] [68] [69] [70] [71] [72] [73] [74] [75] [76] [77] [78] [79] [80] [81] [82] [83] [84] [85] [86] [87] [88] [89] [90] [91] [92] [93] [94] [95] [96] [97] [98] [99] [100]

BOOT SW1 RST SW3 PWR SW2

Type C1

USB R22 R42 R43 R19 C26 P2

Battery J1