




USB

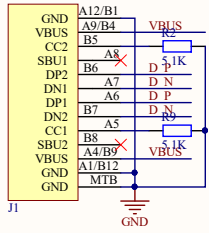


Power & LED

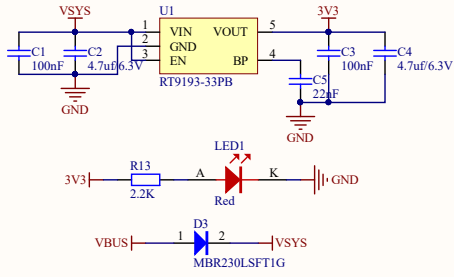


PIO-USB

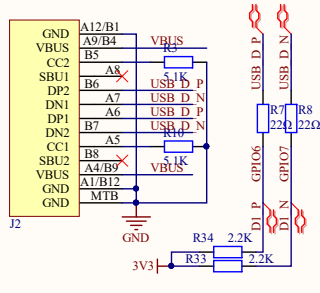


ESD

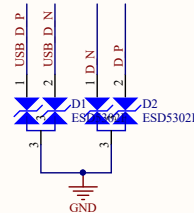


DVI

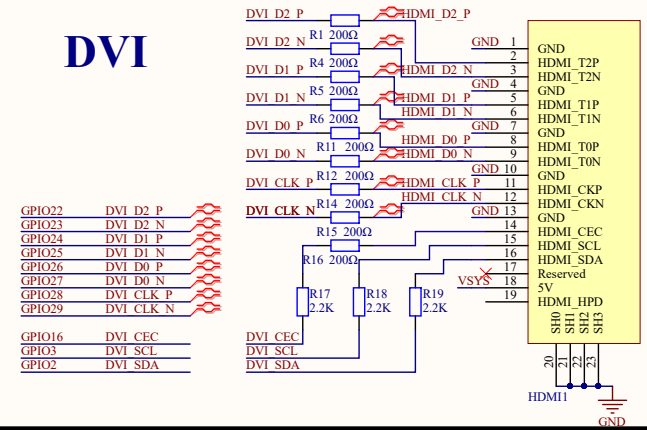


Flash

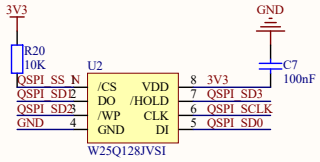


XTAL

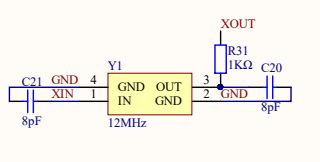


Micro SD

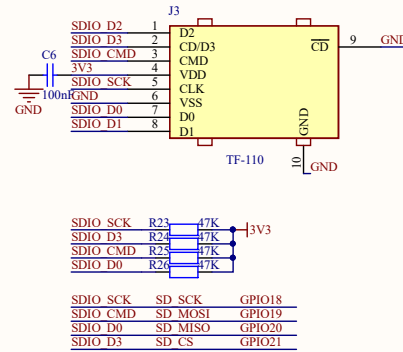

BAT

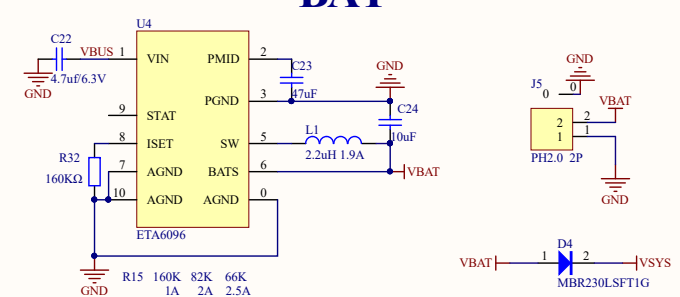


SWD

 


Key




RP2040-PiZero

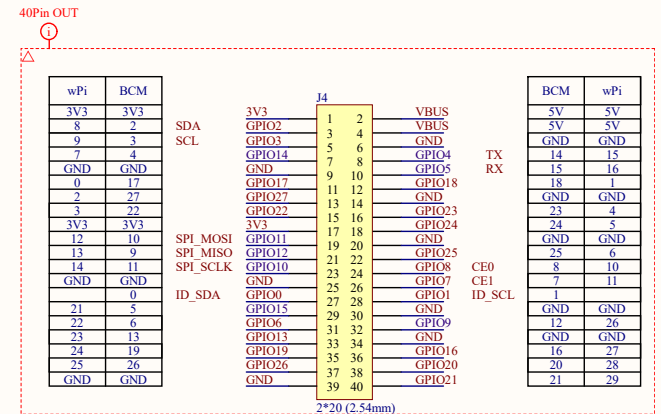


Flash

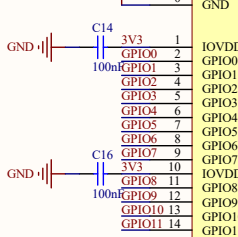


XTAL

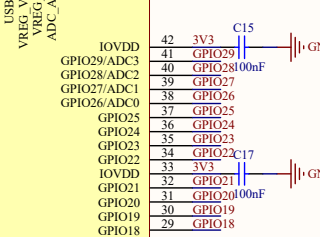


Micro SD

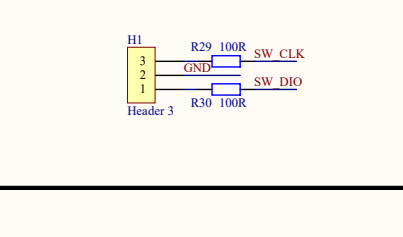

BAT

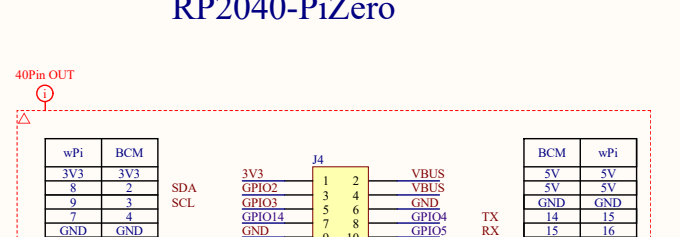


SWD

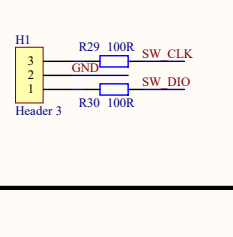


Key



RP2040-PiZero

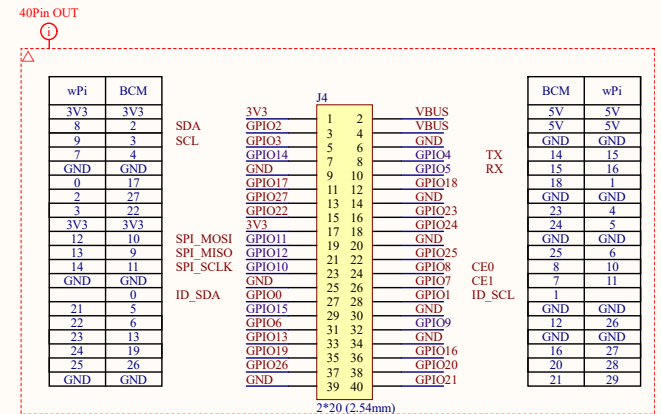

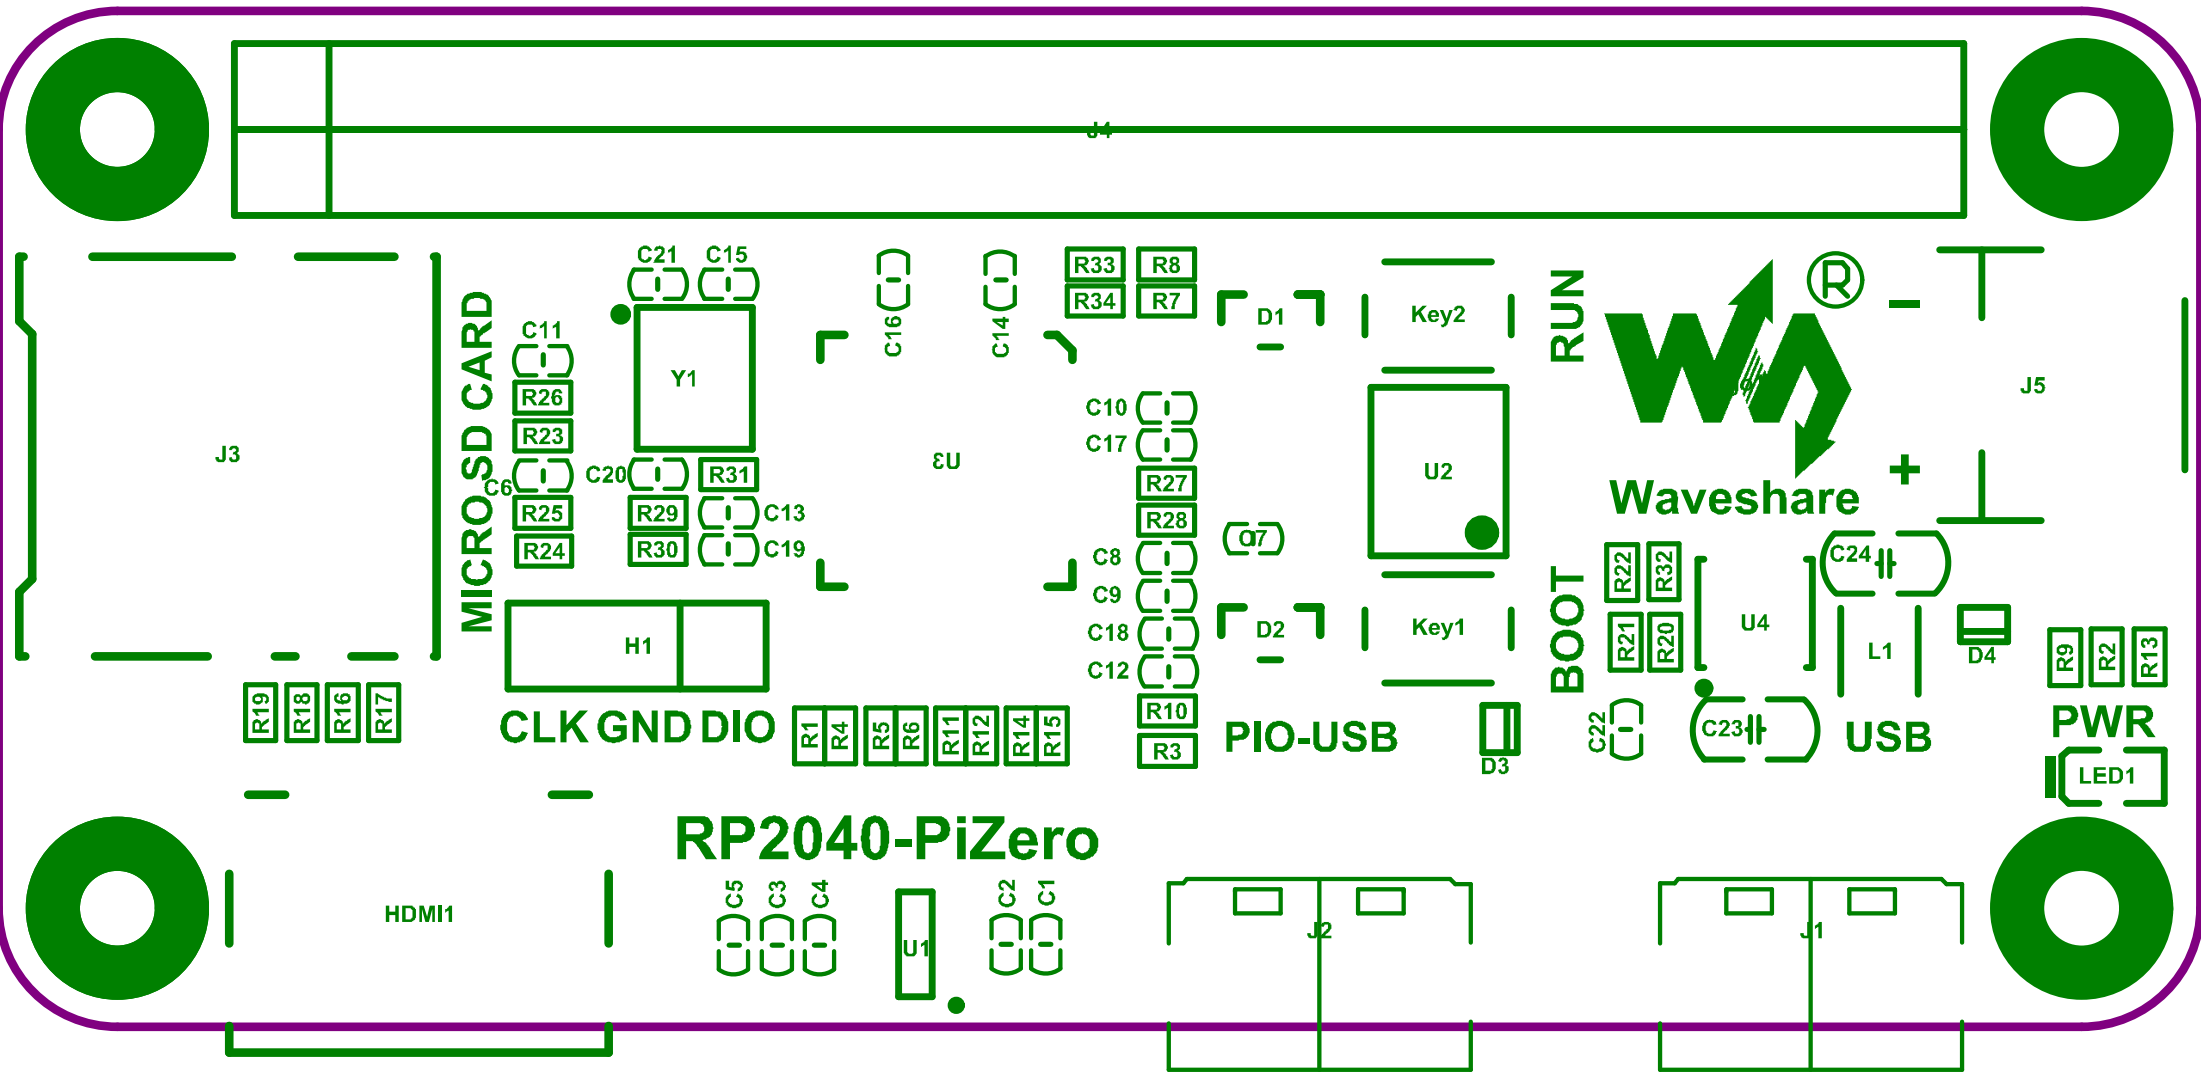

RP2040-PiZero



BOOT RUN

PWR
LED1

J3

J5

HDM1

J2

J1

MICRO SD CARD

CLK GND DIO

PIO-USB

USB

Key2

Key1

Waveshare

RP2040-PiZero