




I2C0 connector

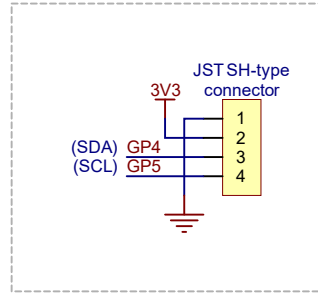


Front expansion area

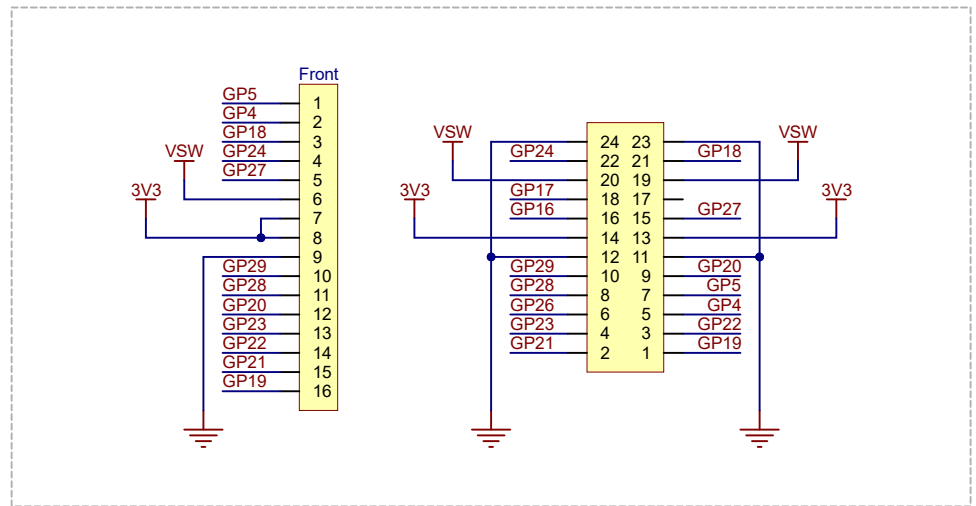



Top expansion area

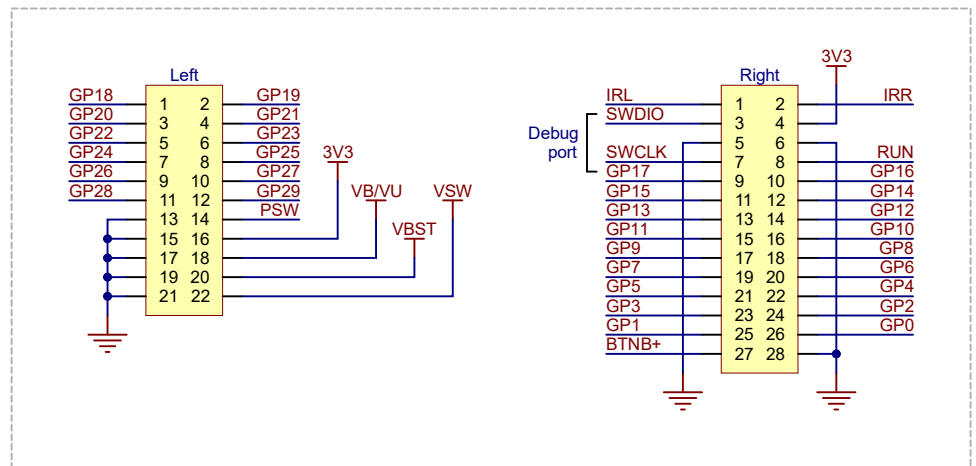


User interface

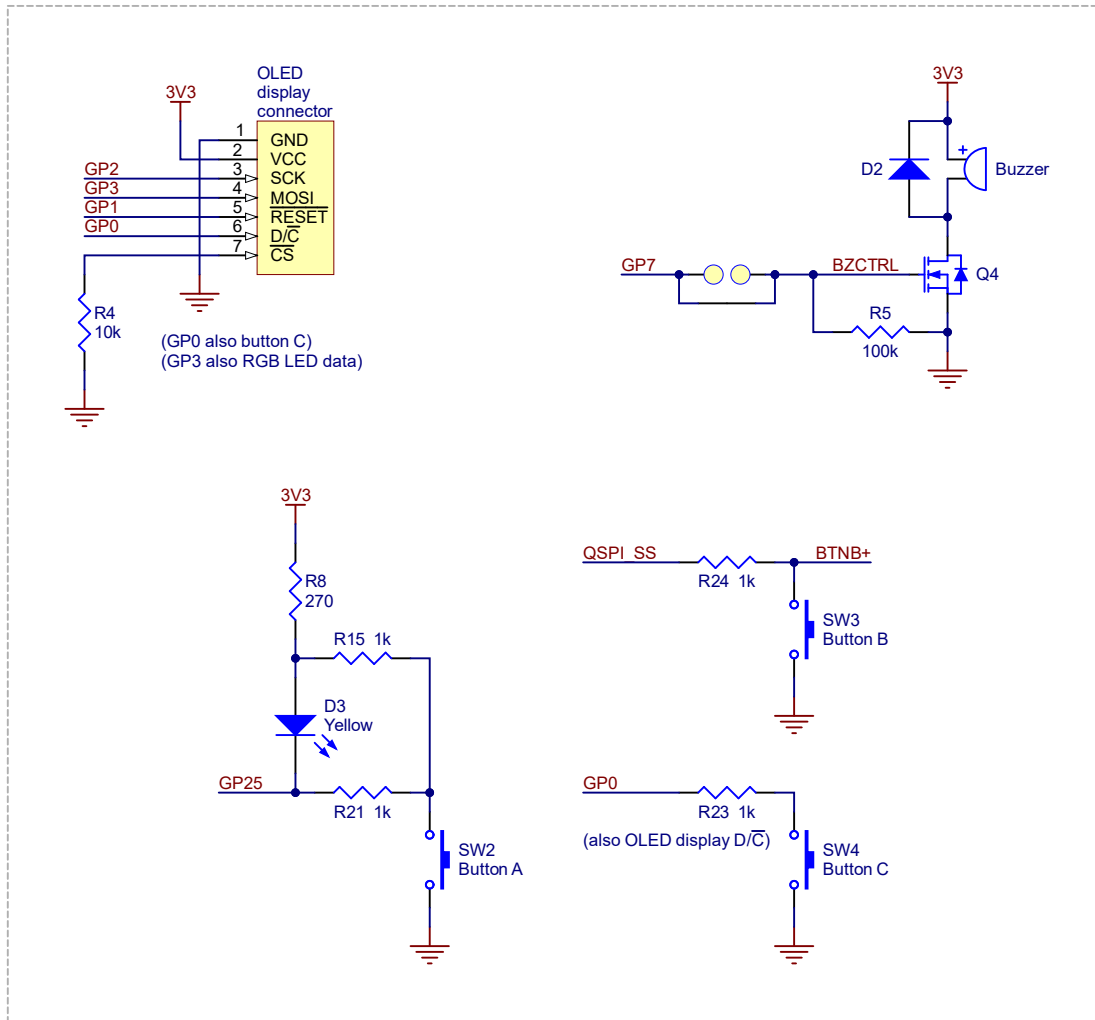


Motors and encoders

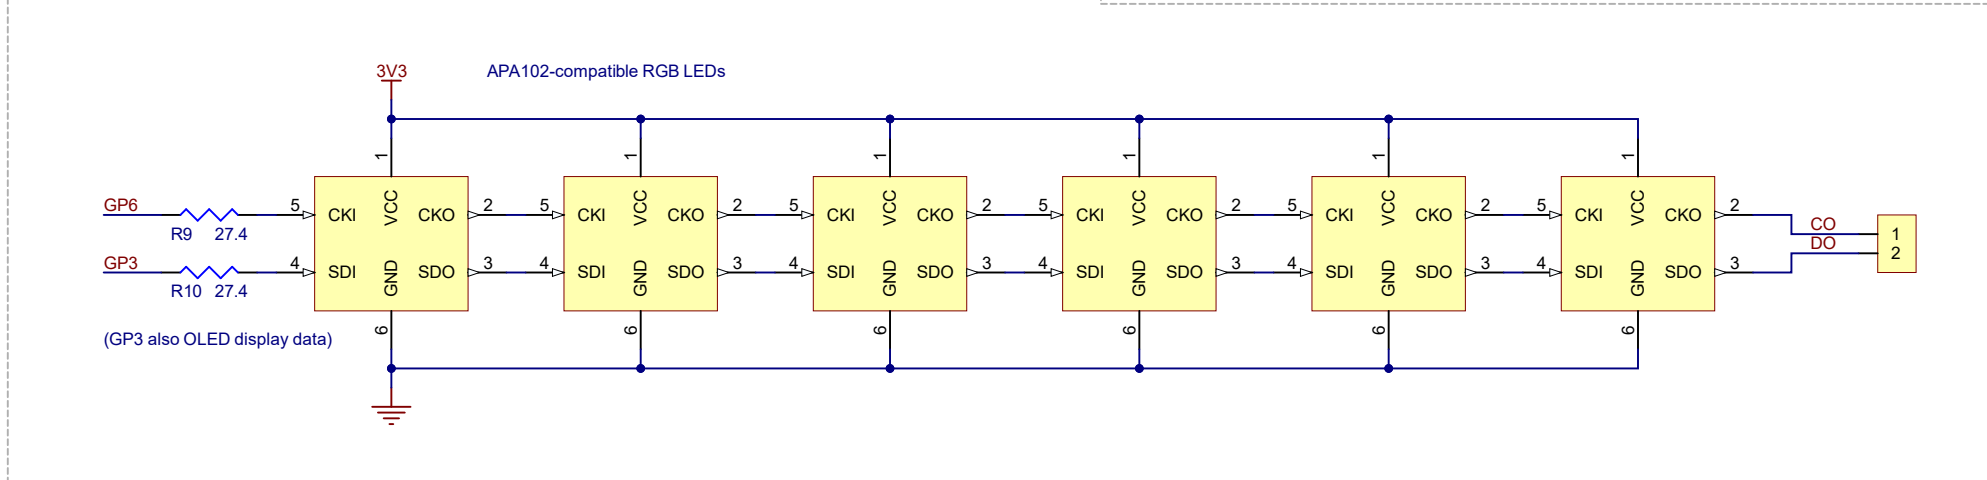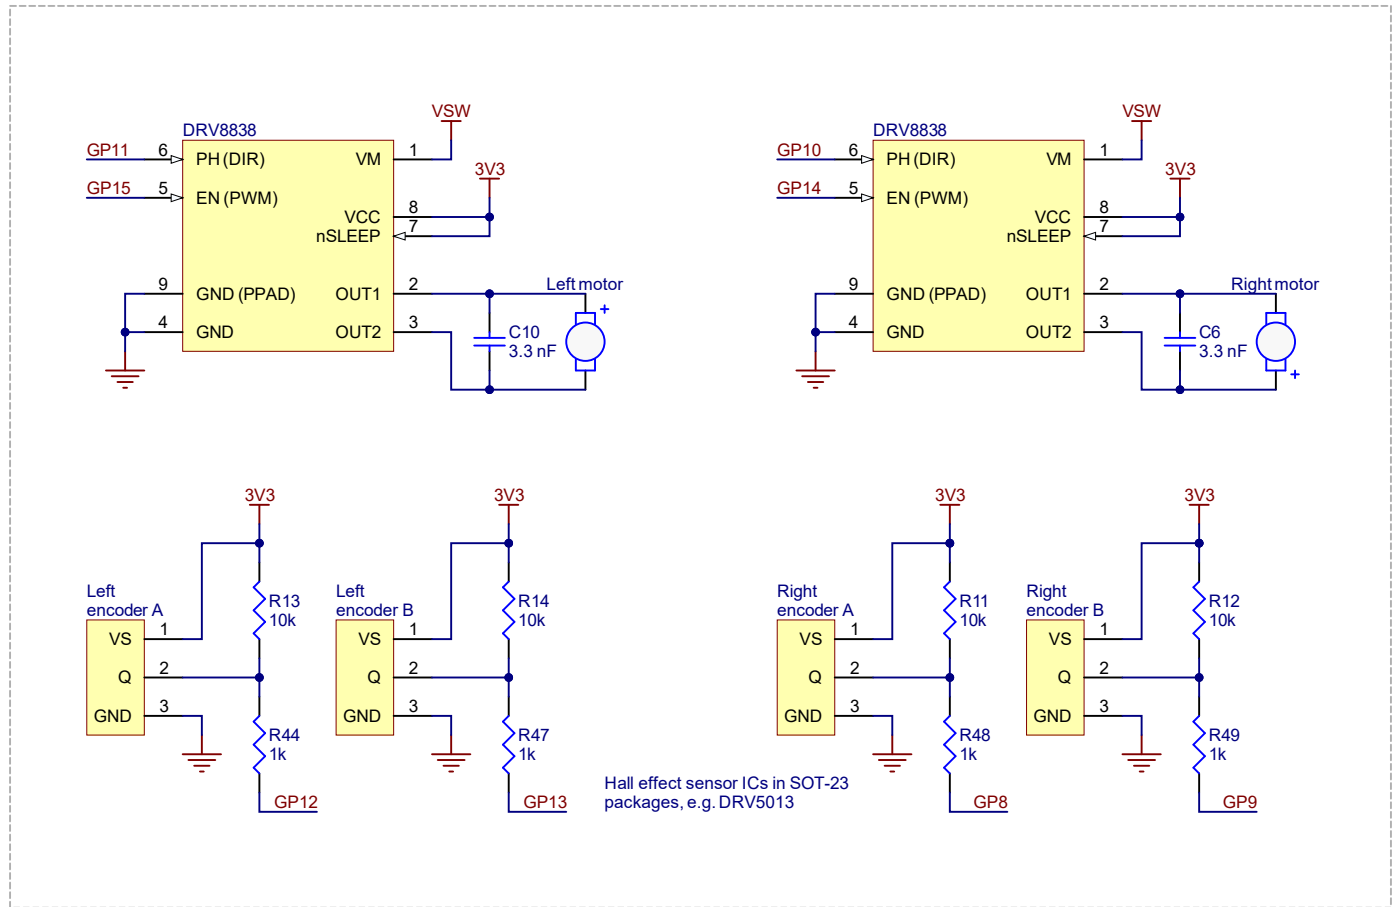


Proximity sensor IR emitters

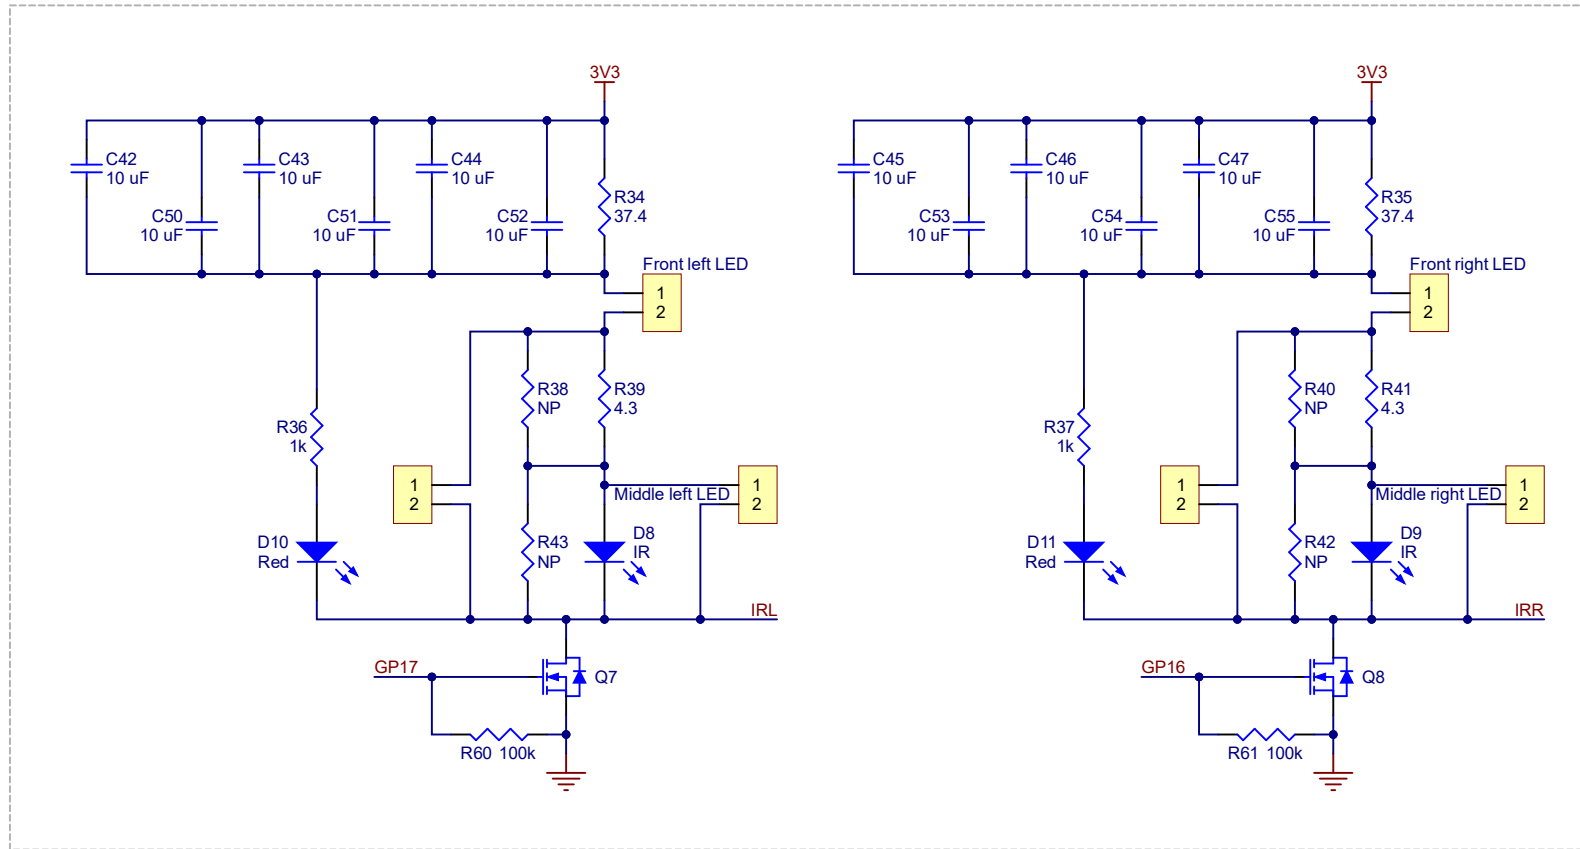


Left and right optional IR receiver connections

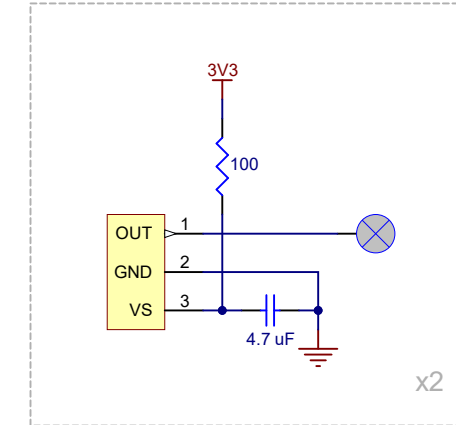


Inertial sensors


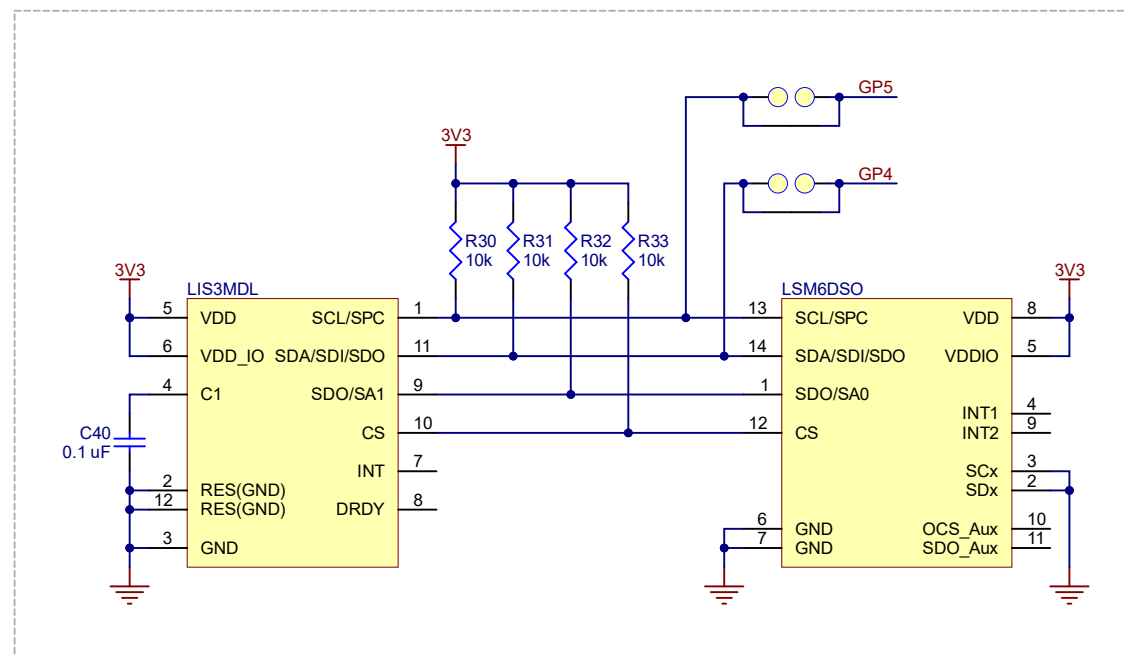


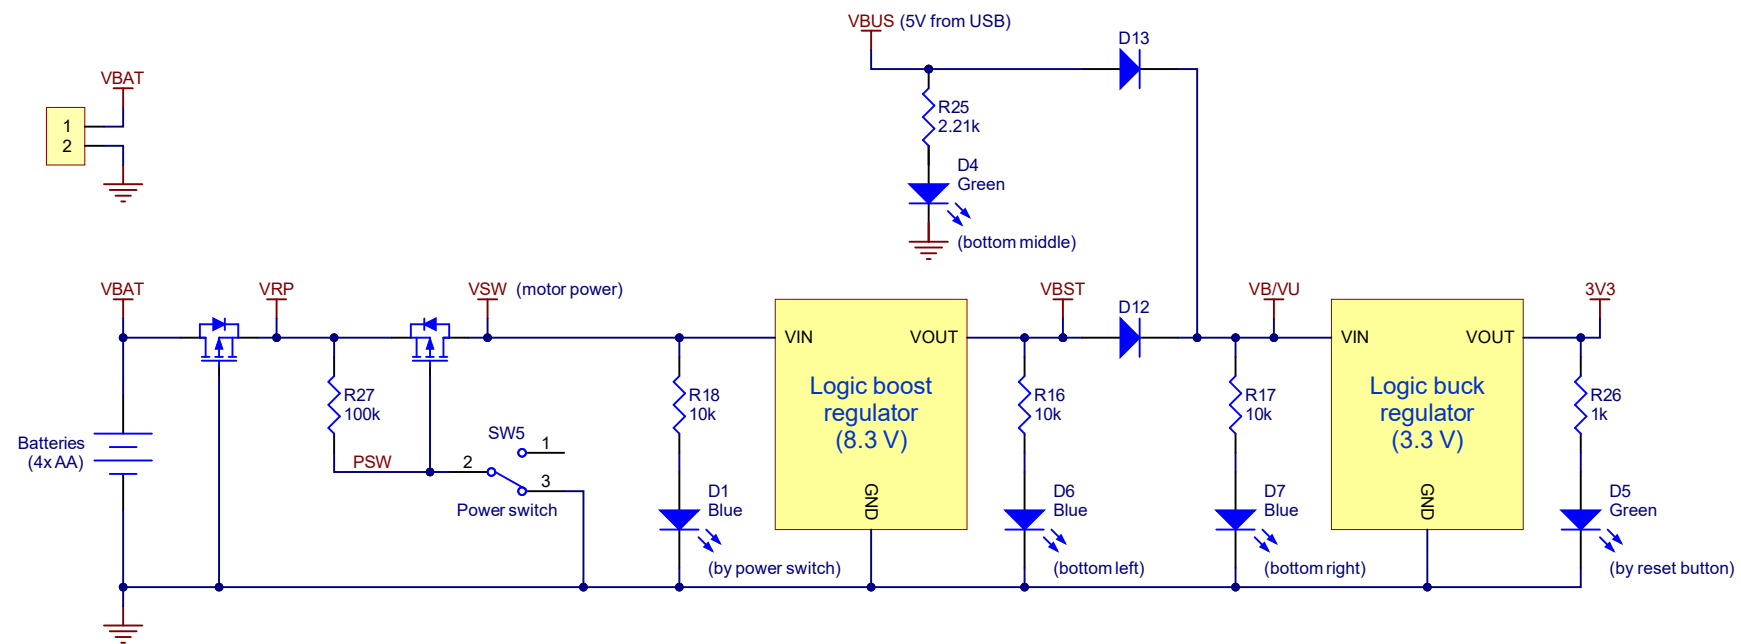

### Line (reflectance) sensors

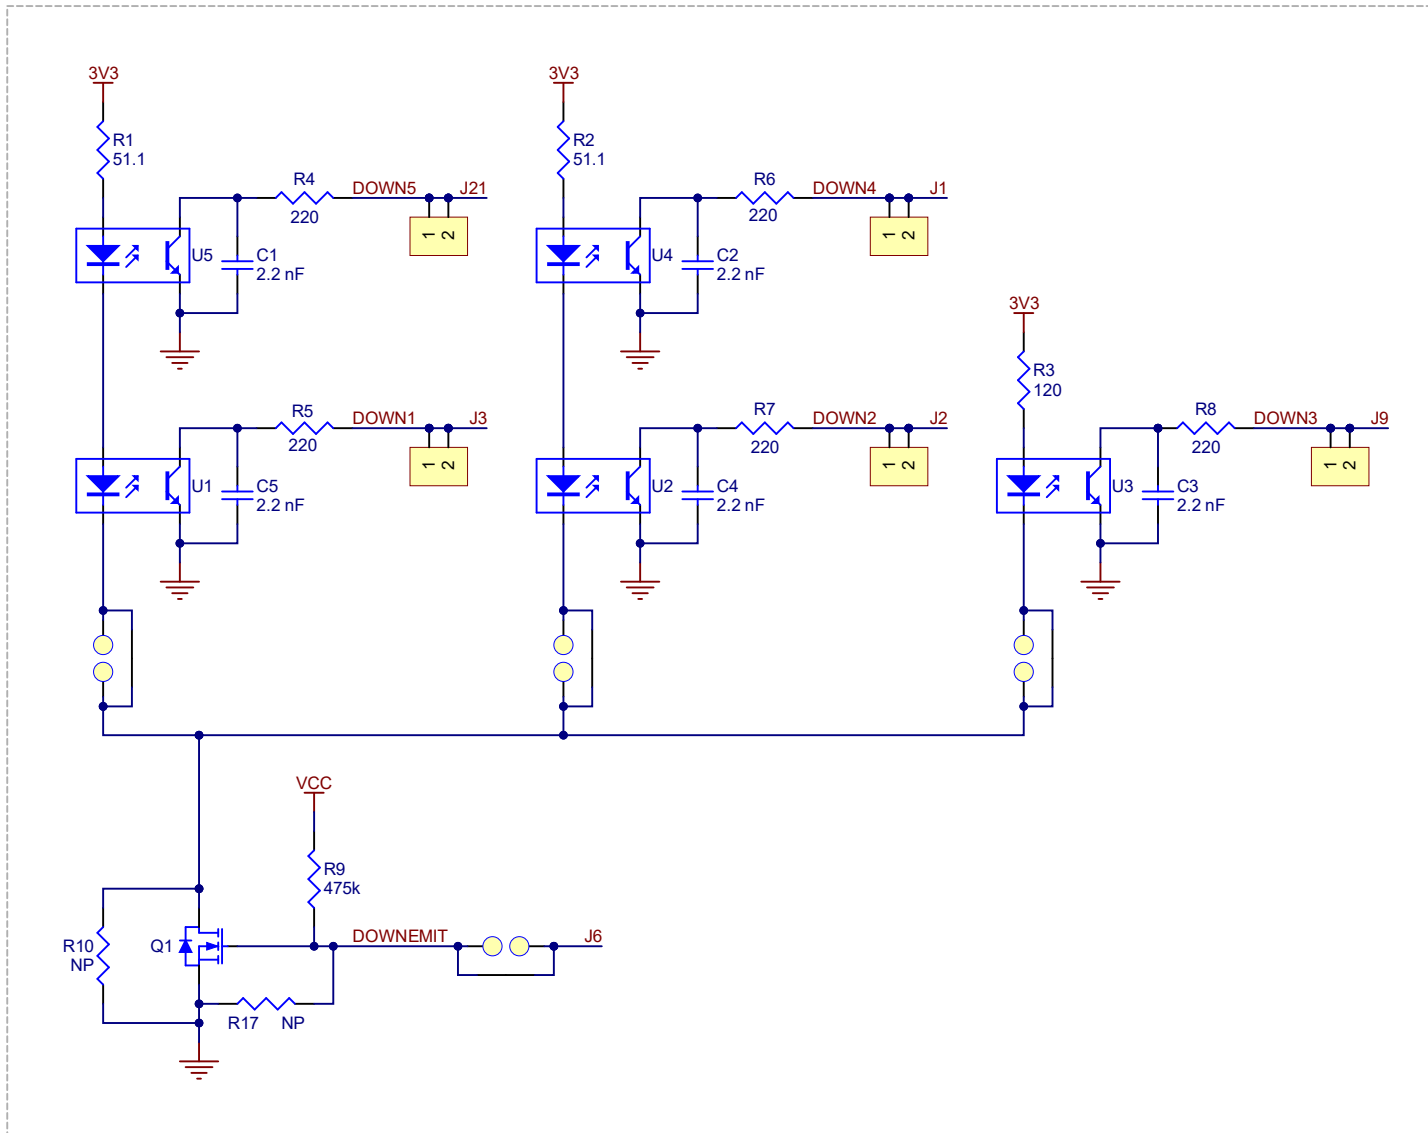

### Proximity sensor IR receivers

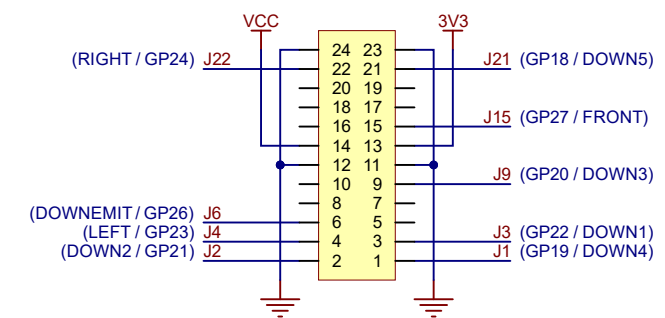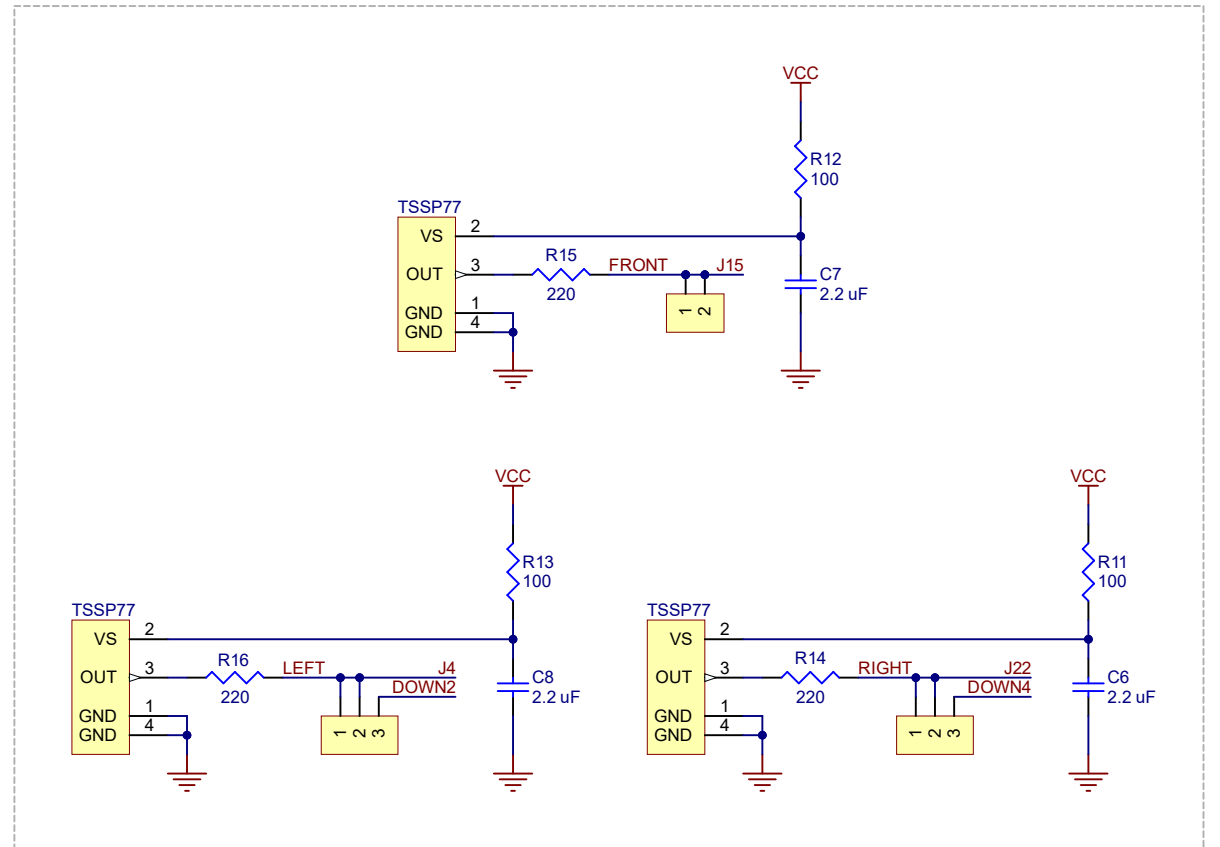

(VCC = 3V3 when connected to Zumo 2040)