

Motor User Manual

Introduction

This manual provides detailed instructions for the safe installation, operation, maintenance, and troubleshooting of the motor.

Please read this manual carefully before installing, operating, or maintaining the motor to ensure safe and efficient use, prevent equipment damage and personal injury, and extend the service life of the motor.

Notes for Micro Motors

1. Check the power supply.

Within rated voltage.

Enough power, motor start need higher current than running current.

2. Check the power supply polarity before turn on

If the motor belong to brushless motor, can't be reversed the power supply.

3. High speed and power motor must Take Safety Precautions

Troubleshooting

Fault Phenomenon	Possible Causes	Troubleshooting Methods
Motor cannot start	1. No power supply or power supply voltage is too low; 2. Wiring is wrong or loose; 3. Motor is overloaded; 4. Bearings are seized due to shipping, the shaft moved his position; 5. Rotor is stuck; 6. Starter or control device is faulty.	1. Check the power supply and restore normal voltage; 2. Check and correct the wiring, tighten loose terminals; 3. Reduce the load or check the driven equipment; 4. Disassemble and maintain the bearings, replace if necessary; 5. Check and remove the obstacle causing the rotor to be stuck; 6. Check and repair

Fault Phenomenon	Possible Causes	Troubleshooting Methods
		or replace the starter and control device.
Motor makes abnormal noise	1. Shaft misalignment; 2. Bearings are worn or lack lubrication; 3. Fan is damaged or loose; 4. Rotor and stator rub against each other; 5. Loose parts in the motor.	1. Realign the shaft; 2. Add lubricating oil or replace the bearings; 3. Replace or tighten the fan; 4. Check the gap between rotor and stator, adjust or repair; 5. Check and tighten all loose parts.
Motor overheats	1. Overload; 2. Poor heat dissipation; 3. Power supply voltage is too high or too low; 4. Phase loss operation (3-phase motor); 5. Bearings are worn or seized; 6. Winding insulation is damaged, short circuit.	1. Reduce the load; 2. Clean the motor surface and heat dissipation fins, ensure good ventilation; 3. Check and adjust the power supply voltage; 4. Check the wiring, repair the phase loss fault; 5. Maintain or replace the bearings; 6. Check the windings, repair or replace if necessary.