Connection diagram of the interface board (K8000) with the computer.



COMPUTER K8000

13 SELECT SDA OUT 13

14 AUTO FEED SDA IN 14

17 SELECT IN SCL 17

GND

18-25

