

UG95

AT Commands Manual

UMTS/HSPA Module Series

Rev. UG95_AT_Commands_Manual_V1.0

Date: 2014-08-29



Our aim is to provide customers with timely and comprehensive service. For any assistance, please contact our company headquarters:

Quectel Wireless Solutions Co., Ltd.

Office 501, Building 13, No.99, Tianzhou Road, Shanghai, China, 200233

Tel: +86 21 5108 6236

Mail: info@quectel.com

Or our local office, for more information, please visit:

<http://www.quectel.com/support/salesupport.aspx>

For technical support, to report documentation errors, please visit:

<http://www.quectel.com/support/techsupport.aspx>

GENERAL NOTES

QUECTEL OFFERS THIS INFORMATION AS A SERVICE TO ITS CUSTOMERS. THE INFORMATION PROVIDED IS BASED UPON CUSTOMERS' REQUIREMENTS. QUECTEL MAKES EVERY EFFORT TO ENSURE THE QUALITY OF THE INFORMATION IT MAKES AVAILABLE. QUECTEL DOES NOT MAKE ANY WARRANTY AS TO THE INFORMATION CONTAINED HEREIN, AND DOES NOT ACCEPT ANY LIABILITY FOR ANY INJURY, LOSS OR DAMAGE OF ANY KIND INCURRED BY USE OF OR RELIANCE UPON THE INFORMATION. ALL INFORMATION SUPPLIED HEREIN IS SUBJECT TO CHANGE WITHOUT PRIOR NOTICE.

COPYRIGHT

THIS INFORMATION CONTAINED HERE IS PROPRIETARY TECHNICAL INFORMATION OF QUECTEL CO., LTD. TRANSMITTABLE, REPRODUCTION, DISSEMINATION AND EDITING OF THIS DOCUMENT AS WELL AS UTILIZATION OF THIS CONTENTS ARE FORBIDDEN WITHOUT PERMISSION. OFFENDERS WILL BE HELD LIABLE FOR PAYMENT OF DAMAGES. ALL RIGHTS ARE RESERVED IN THE EVENT OF A PATENT GRANT OR REGISTRATION OF A UTILITY MODEL OR DESIGN.

Copyright © Quectel Wireless Solutions Co., Ltd. 2014. All rights reserved.

About the Document

History

Revision	Date	Author	Description
1.0	2014-08-29	Laguna XU/ Wythe WANG	Initial

Quectel
Confidential

Contents

About the Document	2
Contents	3
Table Index	7
1 Introduction	8
1.1. Scope of the Document.....	8
1.2. AT Command Syntax.....	8
1.3. Supported Character Sets.....	9
1.4. AT Command Interface.....	9
1.5. Unsolicited Result Code.....	10
2 General Commands	11
2.1. ATI Display Product Identification.....	11
2.2. AT+GMI Request Manufacturer Identification.....	12
2.3. AT+GMM Request TA Model Identification.....	12
2.4. AT+GMR Request TA Revision Identification of Software Release.....	13
2.5. AT+CGMI Request Manufacturer Identification.....	13
2.6. AT+CGMM Request Model Identification.....	14
2.7. AT+CGMR Request TA Revision Identification of Software Release.....	14
2.8. AT+GSN Request International Mobile Equipment Identity (IMEI).....	15
2.9. AT+CGSN Request Product Serial Number Identification.....	15
2.10. AT&F Set all Current Parameters to Manufacturer Defaults.....	16
2.11. AT&V Display Current Configuration.....	16
2.12. AT&W Store Current Parameters to User Defined Profile.....	18
2.13. ATZ Set all Current Parameters to User Defined Profile.....	18
2.14. ATQ Set Result Code Presentation Mode.....	19
2.15. ATV TA Response Format.....	19
2.16. ATE Set Command Echo Mode.....	21
2.17. A/ Repeat Previous Command Line.....	21
2.18. ATS5 Set Command Line Editing Character.....	22
2.19. ATX Set CONNECT Result Code Format and Monitor Call Progress.....	23
2.20. AT+CFUN Set Phone Functionality.....	23
2.21. AT+CMEE Error Message Format.....	25
2.22. AT+CSCS Select TE Character Set.....	26
3 Serial Interface Control Commands	28
3.1. AT&C Set DCD Function Mode.....	28
3.2. AT&D Set DTR Function Mode.....	28
3.3. AT+IFC Set TE-TA Local Data Flow Control.....	29
3.4. AT+IPR Set TE-TA Fixed Local Rate.....	30
4 Status Control Commands	32
4.1. AT+CPAS Mobile Equipment Activity Status.....	32

4.2.	AT+CEER	Extended Error Report	33
5	SIM Related Commands		35
5.1.	AT+CIMI	Request International Mobile Subscriber Identity (IMSI)	35
5.2.	AT+CLCK	Facility Lock	36
5.3.	AT+CPIN	Enter PIN	38
5.4.	AT+CPWD	Change Password.....	40
5.5.	AT+CSIM	Generic SIM Access.....	41
5.6.	AT+CRSM	Restricted SIM Access.....	42
6	Network Service Commands		44
6.1.	AT+COPS	Operator Selection	44
6.2.	AT+CREG	Network Registration	46
6.3.	AT+CSQ	Signal Quality Report	47
6.4.	AT+CPOL	Preferred Operator List.....	49
6.5.	AT+COPN	Read Operator Names.....	50
7	Call Related Commands.....		51
7.1.	ATA	Answer an Incoming Call.....	51
7.2.	ATD	Mobile Originated Call to Dial a Number	52
7.3.	ATH	Disconnect Existing Connection	54
7.4.	AT+CVHU	Voice Hang Up Control	54
7.5.	AT+CHUP	Hang Up Call.....	55
7.6.	+++	Switch From Data Mode to Command Mode.....	55
7.7.	ATO	Switch From Command Mode to Data Mode	56
7.8.	ATS0	Set Number of Rings before Automatically Answering Call.....	57
7.9.	ATS6	Set Pause Before Blind Dialing.....	58
7.10.	ATS7	Set Number of Seconds to Wait for Connection Completion	58
7.11.	ATS8	Set the Number of Seconds to Wait for Comma Dial Modifier	59
7.12.	ATS10	Set Disconnect Delay after Indicating the Absence of Data Carrier	60
7.13.	AT+CBST	Select Bearer Service Type	60
7.14.	AT+CSTA	Select Type of Address	62
7.15.	AT+CLCC	List Current Calls of ME	63
7.16.	AT+CR	Service Reporting Control.....	64
7.17.	AT+CRC	Set Cellular Result Codes for Incoming Call Indication	65
7.18.	AT+CRLP	Select Radio Link Protocol Parameter	66
7.19.	AT+QHUP	Hang up Call with a Specific Release Cause	67
8	Phonebook Commands.....		69
8.1.	AT+CNUM	Subscriber Number	69
8.2.	AT+CPBF	Find Phonebook Entries	70
8.3.	AT+CPBR	Read Phonebook Entries	71
8.4.	AT+CPBS	Select Phonebook Memory Storage	72
8.5.	AT+CPBW	Write Phonebook Entry	73
9	Short Message Service Commands.....		75
9.1.	AT+CSMS	Select Message Service	75

9.2.	AT+CMGF	Message Format.....	76
9.3.	AT+CSCA	Service Center Address.....	77
9.4.	AT+CPMS	Preferred Message Storage.....	78
9.5.	AT+CMGD	Delete Message	79
9.6.	AT+CMGL	List Messages	81
9.7.	AT+CMGR	Read Message	84
9.8.	AT+CMGS	Send Message	88
9.9.	AT+CMMS	More Messages to Send	89
9.10.	AT+CMGW	Write Message to Memory	90
9.11.	AT+CNMA	New Message Acknowledgement to UE/TE.....	92
9.12.	AT+CNMI	SMS Event Reporting Configuration.....	94
9.13.	AT+CSCB	Select Cell Broadcast Message Types	96
9.14.	AT+CSDH	Show SMS Text Mode Parameters.....	97
9.15.	AT+CSMP	Set SMS Text Mode Parameters	98
10	Packet Domain Commands	100
10.1.	AT+CGATT	Attachment or Detachment of PS.....	100
10.2.	AT+CGDCONT	Define PDP Context.....	101
10.3.	AT+CGQREQ	Quality of Service Profile (Requested).....	102
10.4.	AT+CGQMIN	Quality of Service Profile (Minimum Acceptable).....	105
10.5.	AT+CGEQREQ	3G Quality of Service Profile (Requested)	107
10.6.	AT+CGEQMIN	3G Quality of Service Profile (Minimum Acceptable)	111
10.7.	AT+CGACT	Activate or Deactivate PDP Context.....	115
10.8.	AT+CGDATA	Enter Data State.....	116
10.9.	AT+CGPADDR	Show PDP Address	118
10.10.	AT+CGCLASS	GPRS Mobile Station Class.....	119
10.11.	AT+CGREG	Network Registration Status	119
10.12.	AT+CGEREP	Packet Domain Event Reporting.....	121
10.13.	AT+CGSMS	Select Service for MO SMS Messages	123
11	Supplementary Service Commands	124
11.1.	AT+CCFC	Call Forwarding Number and Conditions Control	124
11.2.	AT+CCWA	Call Waiting Control.....	126
11.3.	AT+CHLD	Call Related Supplementary Services	128
11.4.	AT+CLIP	Calling Line Identification Presentation.....	130
11.5.	AT+CLIR	Calling Line Identification Restriction.....	131
11.6.	AT+COLP	Connected Line Identification Presentation	132
11.7.	AT+CSSN	Supplementary Service Notifications	134
11.8.	AT+CUSD	Unstructured Supplementary Service Data	135
12	Audio Commands	137
12.1.	AT+CMUT	Mute Control	137
12.2.	AT+CLVL	Loud Speaker Volume Level.....	138
12.3.	AT+VTS	DTMF and Tone Generation.....	138
12.4.	AT+VTD	Tone Duration.....	139

13	Hardware Related Commands	141
13.1.	AT+QPOWD Power Off	141
13.2.	AT+CCLK Clock.....	142
13.3.	AT+CBC Battery Charge.....	143
14	Appendix	144
14.1.	Reference	144
14.2.	Factory Default Settings Restorable with AT&F	145
14.3.	AT Command Setting Storable with AT&W	147
14.4.	AT Command Settings Storable with ATZ	147
14.5.	Summary of CME ERROR Codes	148
14.6.	Summary of CMS ERROR Codes	151
14.7.	Summary of URC	159
14.8.	Parameter List of AT+CEER.....	161

Quectel
Confidential

Table Index

TABLE 1: TYPES OF AT COMMANDS AND RESPONSES	9
TABLE 2: AT&V RESPONSE.....	17
TABLE 3: ATV0&ATV1 RESULT CODES NUMERIC EQUIVALENTS AND BRIEF DESCRIPTION	20
TABLE 4: DELAY CLASS	105
TABLE 5: RELATED DOCUMENTS	144
TABLE 6: TERMS AND ABBREVIATIONS	144
TABLE 7: FACTORY DEFAULT SETTINGS RESTORABLE WITH AT&F	145
TABLE 8: AT COMMAND SETTINGS STORABLE WITH AT&W	147
TABLE 9: AT COMMAND SETTINGS STORABLE WITH ATZ	147
TABLE 10: DIFFERENT CODING SCHEMES OF +CME ERROR: <ERR>.....	148
TABLE 11: DIFFERENT CODING SCHEMES OF +CMS ERROR: <ERR>	151
TABLE 12: SUMMARY OF URC	159
TABLE 13: CAUSE AND DESCRIPTION LIST OF AT+CEER	161

Quectel
Confidential

1 Introduction

1.1. Scope of the Document

This document presents the AT Commands Set for Quectel cellular engine UG95.

1.2. AT Command Syntax

The “AT” or “at” prefix must be set at the beginning of each command line. To terminate a command line enter <CR>. Commands are usually followed by a response that includes “<CR><LF><response><CR><LF>”. Throughout this document, only the responses are presented, “<CR><LF>” are omitted intentionally.

The AT Commands Set implemented by UG95 is a combination of 3GPP TS 27.007, 3GPP TS 27.005 and ITU-T recommendation V.25ter and the AT Commands developed by Quectel.

All these AT commands can be split into three categories syntactically: “**basic**”, “**S parameter**”, and “**extended**”. They are listed as follows:

- **Basic syntax**

These AT commands have the format of “AT<x><n>”, or “AT&<x><n>”, where “<x>” is the command, and “<n>” is/are the argument(s) for that command. An example of this is “ATE<n>”, which tells the DCE whether received characters should be echoed back to the DTE according to the value of “<n>”. “<n>” is optional and a default will be used if it is missing.

- **S parameter syntax**

These AT commands have the format of “ATS<n>=<m>”, where “<n>” is the index of the **S** register to set, and “<m>” is the value to assign to it.

- **Extended syntax**

These commands can be operated in several modes, as following table:

Table 1: Types of AT Commands and Responses

Test Command	AT+<x>=?	This command returns the list of parameters and value ranges set by the corresponding Write Command or internal processes.
Read Command	AT+<x>?	This command returns the currently set value of the parameter or parameters.
Write Command	AT+<x>=<...>	This command sets the user-definable parameter values.
Execution Command	AT+<x>	This command reads non-variable parameters affected by internal processes in the UE.

1.3. Supported Character Sets

The UG95 AT command interface defaults to the **GSM** character set. The UG95 supports the following character sets:

- GSM
- UCS2
- IRA
- HEX

The character set can be configured and interrogated by “AT+CSCS” command (3GPP TS 27.007). It is defined in 3GPP TS 27.005. The character set affects transmission and reception of SMS and SMS Cell Broadcast Messages, the entry and display of phone book entries text field.

1.4. AT Command Interface

The UG95 AT command interface includes three USB ports (USB MODEM port, USB AT port1 and USB AT port2) and one main UART port.

UART Port Feature:

The baud rates of 0, 300, 1200, 2400, 4800, 9600, 19200, 38400, 57600, 115200, 230400, 460800, 921600, 3000000, and 6000000 are supported at present. The default baud rate of main UART port is 0, which means the main UART port would be working on auto baud rate by default.

The main UART port supports hardware flow control lines RTS and CTS. But it is off by default. AT command “AT+IFC=2,2” is used to enable hardware flow control.

1.5. Unsolicited Result Code

As an Unsolicited Result Code and a report message, URC is not issued as part of the response related to an executed AT command. URC is issued by the UG95 without being requested by the TE and it is issued automatically when a certain event occurs. Typical events leading to URCs are incoming calls ("RING"), received short messages etc.

Quectel
Confidential

2 General Commands

2.1. ATI Display Product Identification Information

The ATI command delivers a product information text.

ATI Display Product Identification Information

Execution Command
ATI

Response
TA issues product information text.

Quectel
UG95
Revision: <revision>

OK

Maximum Response Time

300ms

Reference
V.25ter

Parameter

<revision> Revision of software release

Example

```
ATI
Quectel
UG95
Revision: UG95ENAR01A01E1G
OK
```

2.2. AT+GMI Request Manufacturer Identification

AT+GMI returns a manufacturer identification text. Command is identical with AT+CGMI.

AT+GMI Request Manufacturer Identification	
Test Command AT+GMI=?	Response OK
Execution Command AT+GMI	Response TA reports one or more lines of information text which permit the user to identify the manufacturer. Quectel OK
Reference V.25ter	

2.3. AT+GMM Request TA Model Identification

AT+GMM returns a product model identification text. Command is identical with AT+CGMM.

AT+GMM Request TA Model Identification	
Test Command AT+GMM=?	Response OK
Execution Command AT+GMM	Response TA returns a product model identification text. UG95 OK
Reference V.25ter	

2.4. AT+GMR Request TA Revision Identification of Software Release

AT+GMR delivers a product firmware version identification. Command is identical with AT+CGMR.

AT+GMR Request TA Revision Identification of Software Release

Test Command AT+GMR=?	Response OK
Execution Command AT+GMR	Response TA reports one or more lines of information text which permit the user to identify the revision of software release. <revision> OK
Reference V.25ter	

Parameter

<revision>	Revision of software release
-------------------------	------------------------------

2.5. AT+CGMI Request Manufacturer Identification

AT+CGMI returns a manufacturer identification text.

AT+CGMI Request Manufacturer Identification

Test Command AT+CGMI=?	Response OK
Execution Command AT+CGMI	Response TA returns manufacturer identification text. Quectel OK
Maximum Response Time	300ms
Reference 3GPP TS 27.007	

2.6. AT+CGMM Request Model Identification

AT+CGMM returns a product model identification text.

AT+CGMM Request Model Identification	
Test Command AT+CGMM=?	Response OK
Execution Command AT+CGMM	Response TA returns product model identification text. UG95 OK
Maximum Response Time	300ms
Reference 3GPP TS 27.007	

2.7. AT+CGMR Request TA Revision Identification of Software Release

AT+CGMR delivers a product firmware version identification.

AT+CGMR Request TA Revision Identification of Software Release	
Test Command AT+CGMR=?	Response OK
Execution Command AT+CGMR	Response TA returns identification text of product software version. <revision> OK
Maximum Response Time	300ms
Reference 3GPP TS 27.007	

Parameter

<revision> Identification text of product software version

2.8. AT+GSN Request International Mobile Equipment Identity (IMEI)

AT+GSN returns the International Mobile Equipment Identity (IMEI). Command is identical with AT+CGSN.

AT+GSN Request International Mobile Equipment Identity (IMEI)

Test Command AT+GSN=?	Response OK
Execution Command AT+GSN	Response TA reports the IMEI (International Mobile Equipment Identity) number in information text which permit the user to identify the individual ME device. <IMEI> OK
Maximum Response Time	300ms
Reference V.25ter	

Parameter

<IMEI> IMEI of the module

NOTE

The serial number (IMEI) varies with the individual ME device.

2.9. AT+CGSN Request Product Serial Number Identification

AT+CGSN returns International Mobile Equipment Identity (IMEI). Command is identical with AT+GSN.

AT+CGSN Request Product Serial Number Identification

Test Command AT+CGSN=?	Response OK
Execution Command AT+CGSN	Response <IMEI>

	OK
Maximum Response Time	300ms
Reference	3GPP TS 27.007

2.10. AT&F Set all Current Parameters to Manufacturer Defaults

AT&F resets AT command settings to their factory default values. However, the command does not change the current baud rate of UART.

AT&F Set all Current Parameters to Manufacturer Defaults

Execution Command	Response
AT&F[<value>]	TA sets all current parameters to the manufacturer defined profile. See Table 7: Factory Default Settings Restorable with AT&F OK
Maximum Response Time	300ms
Reference	V.25ter

Parameter

<value>	<u>0</u>	Set all TA parameters to manufacturer defaults
---------	----------	--

2.11. AT&V Display Current Configuration

AT&V displays three profiles of several AT command parameters, including the single-letter AT command parameters which are not readable otherwise.

AT&V Display Current Configuration

Execution Command	Response
AT&V	TA returns the current parameter setting. See Table 2: AT&V Response OK
Maximum Response Time	300ms

Reference
V.25ter

Table 2: AT&V Response

AT&V
&C: 1
&D: 1
&F: 0
&W: 0
E: 1
Q: 0
V: 1
X: 4
Z: 0
S0: 0
S5: 8
S6: 2
S7: 0
S8: 2
S10: 15
OK

2.12. AT&W Store Current Parameters to User Defined Profile

AT&W stores the current AT command settings to a user defined profile in non-volatile memory.

AT&W Store Current Parameters to User Defined Profile

Execution Command AT&W[<n>]	Response TA stores the current parameter settings in the user defined profile. See Table 8: AT Command Settings Storable with AT&W. OK
Maximum Response Time	300ms
Reference V.25ter	

Parameter

<n>	<u>0</u>	Profile 0 to store current parameters
-----	----------	---------------------------------------

2.13. ATZ Set all Current Parameters to User Defined Profile

ATZ restores the current AT command settings to the user defined profile in non-volatile memory, if one was stored with AT&W before. Any additional AT command on the same command line may be ignored. ATZ does not change the current baud rate of UART.

ATZ Set all Current Parameters to User Defined Profile

Execution Command ATZ[<value>]	Response TA sets all current parameters to the user defined profile. See Table 9: AT Command Settings Storable with ATZ. OK
Maximum Response Time	300ms
Reference V.25ter	

Parameter

<value>	<u>0</u>	Reset to profile number 0
---------	----------	---------------------------

2.14. ATQ Set Result Code Presentation Mode

ATQ controls whether the result code is transmitted to the CE. Other information text transmitted as response is not affected.

ATQ Set Result Code Presentation Mode

Execution Command ATQ<n>	Response This parameter setting determines whether or not the TA transmits any result code to the TE. Information text transmitted in response is not affected by this setting. If <n>=0: OK If <n>=1: (none)
Maximum Response Time	300ms
Reference V.25ter	

Parameter

<n>	0	TA transmits result code
	1	Result codes are suppressed and not transmitted

2.15. ATV TA Response Format

This command determines the contents of header and trailer transmitted with AT command result codes and information responses.

The result codes, their numeric equivalents and brief descriptions of the use of each are listed in the following table.

ATV TA Response Format

Execution Command ATV<value>	Response This parameter setting determines the contents of the header and trailer transmitted with result codes and information responses. When <value>=0 0 When <value>=1
--	---

	OK
Maximum Response Time	300ms
Reference V.25ter	

Parameter

<value>	0	Information response: <text><CR><LF> Short result code format: <numeric code><CR>
	1	Information response: <CR><LF><text><CR><LF> Long result code format: <CR><LF><verbose code><CR><LF>

Example

```

ATV1 //Set <value>=1
OK
AT+CSQ
+CSQ: 30,0

OK //When <value>=1 result code is OK
ATV0 //Set <value>=0
0
AT+CSQ
+CSQ: 30,0
0 //When <value>=0 result code is 0

```

Table 3: ATV0&ATV1 Result Codes Numeric Equivalents and Brief Description

ATV1	ATV0	Description
OK	0	Acknowledges execution of a command
CONNECT	1	A connection has been established; the DCE is moving from command state to online data state
RING	2	The DCE has detected an incoming call signal from network
NO CARRIER	3	The connection has been terminated or the attempt to establish a connection failed
ERROR	4	Command not recognized, command line maximum length exceeded, parameter value invalid, or other problem with processing the command line

NO DIALTONE	6	No dial tone detected
BUSY	7	Engaged (busy) signal detected
NO ANSWER	8	"@" (Wait for Quiet Answer) dial modifier was used, but remote ringing followed by five seconds of silence was not detected before expiration of the connection timer (S7)

2.16. ATE Set Command Echo Mode

ATE controls whether the module echoes characters received from TE during AT command state.

ATE Set Command Echo Mode

Execution Command ATE<value>	Response This setting determines whether or not the TA echoes characters received from TE during command state. OK
Maximum Response Time	300ms
Reference V.25ter	

Parameter

<value>	<u>0</u>	Echo mode off
	1	Echo mode on

2.17. A/ Repeat Previous Command Line

A/ repeats previous AT command line, and "/" acts as the line terminating character.

A/ Repeat Previous Command Line

Execution Command A/	Response Repeat Previous Command
Reference V.25ter	

Example

```

ATI
Quectel
UG95
Revision: UG95ENAR01A01E1G

OK
A/ //Repeat previous command
Quectel
UG95
Revision: UG95ENAR01A01E1G

OK
    
```

2.18. ATS5 Set Command Line Editing Character

ATS5 determines the character value used by the module to delete the immediately preceding character from the AT command line (i.e. equates to backspace key).

ATS5 Set Command Line Editing Character

Read Command ATS5?	Response <n> OK
Write Command ATS5=<n>	Response This parameter setting determines the character recognized by TA as a request to delete the immediately preceding character from the command line. OK
Maximum Response Time	300ms
Reference V.25ter	

Parameter

<n>	000-008-127	Response editing character (Default 008=<Backspace>)
-----	-------------	--

2.19. ATX Set CONNECT Result Code Format and Monitor Call Progress

ATX determines whether or not the module transmits particular result codes to the TE. It also controls whether or not the module verifies the presence of a dial tone when it begins dialing, and whether or not engaged tone (busy signal) detection is enabled.

ATX Set CONNECT Result Code Format and Monitor Call Progress

Execution Command ATX<value>	Response This parameter setting determines whether or not the TA detected the presence of dial tone and busy signal and whether or not TA transmits particular result codes. OK
Maximum Response Time	300ms
Reference V.25ter	

Parameter

<value>	0	CONNECT result code only returned, dial tone and busy detection are both disabled
	1	CONNECT<text> result code only returned, dial tone and busy detection are both disabled
	2	CONNECT<text> result code returned, dial tone detection is enabled, busy detection is disabled
	3	CONNECT<text> result code returned, dial tone detection is disabled, busy detection is enabled
	4	CONNECT<text> result code returned, dial tone and busy detection are both enabled

2.20. AT+CFUN Set Phone Functionality

AT+CFUN controls the functionality level. It can also be used to reset the UE.

AT+CFUN Set Phone Functionality

Test Command AT+CFUN=?	Response +CFUN: (list of supported <fun>s),(list of supported <rst>s) OK
Read Command	Response

AT+CFUN?	+CFUN: <fun>
	OK
Write Command AT+CFUN=<fun>[,<rst>]	Response OK If error is related to ME functionality: +CME ERROR: <err>
Maximum Response Time	15s, determined by network.
Reference 3GPP TS 27.007	

Parameter

<fun>	0	Minimum functionality
	<u>1</u>	Full functionality (Default)
	4	Disable phone both transmit and receive RF circuits
<rst>	<u>0</u>	Do not reset the ME before setting it to <fun> power level This is default when <rst> is not given
	1	Reset the ME. The device is fully functional after the reset.

Example

```

AT+CFUN=0 //Switch phone to minimum functionality
OK
+CPIN: NOT READY
AT+COPS?
+COPS: 0 //No operator is registered
OK
AT+CPIN?
+CME ERROR: 10 //SIM is not inserted
AT+CFUN=1 //Switch phone to full functionality
OK
+QUSIM: 0
+CPIN: SIM PIN
AT+CPIN=1234
OK
+CPIN: READY

```

```
+QIND: SMS DONE

+QIND: PB DONE
AT+CPIN?
+CPIN: READY

OK
AT+COPS?
+COPS: 0,0,"CHN-UNICOM",2           //Operator is registered

OK
```

2.21. AT+CMEE Error Message Format

AT+CMEE controls the format of error result codes: "ERROR", error numbers or verbose messages as "+CME ERROR: <err>" and "+CMS ERROR: <err>".

AT+CMEE Error Message Format

Test Command AT+CMEE=?	Response +CMEE: (list of supported <n>s) OK
Read Command AT+CMEE?	Response +CMEE: <n> OK
Write Command AT+CMEE=<n>	Response TA disables or enables the use of result code +CME ERROR: <err> as an indication of an error related to the functionality of the ME. OK
Maximum Response Time	300ms
Reference 3GPP TS 27.007	

Parameter

<n>	0	Disable result code
	1	Enable result code and use numeric values
	2	Enable result code and use verbose values

Example

```

AT+CMEE=0 //Disable result code
OK
AT+CPIN=1234
ERROR //Only "ERROR" will be displayed
AT+CMEE=1 //Enable error result code with numeric values
OK
AT+CPIN=1234
+CME ERROR: 10
AT+CMEE=2 //Enable error result code with verbose (string)
values
OK
AT+CPIN=1234
+CME ERROR: SIM not inserted
    
```

2.22. AT+CSCS Select TE Character Set

AT+CSCS write command informs the module which character set is used by the TE. It enables the UE to convert character strings correctly between TE and UE character sets.

AT+CSCS Select TE Character Set

Test Command AT+CSCS=?	Response +CSCS: (list of supported <chset> s) OK
Read Command AT+CSCS?	Response +CSCS: <chset> OK
Write Command AT+CSCS=<chset>	Response Set character set <chset> which is used by the TE. The TA can then convert character strings correctly between the TE and ME character sets. OK
Maximum Response Time	300ms
Reference 3GPP TS 27.007	

Parameter

<chset>	"UCS2"	UCS2 alphabet
	"IRA"	International reference alphabet
	"HEX"	UCS2 alphabet
	" <u>GSM</u> "	GSM default alphabet

Example

```
AT+CSCS? //Query the current character set
+CSCS: "GSM"

OK
```

Quectel
Confidential

3 Serial Interface Control Commands

3.1. AT&C Set DCD Function Mode

AT&C controls the behavior of the UE's DCD line.

AT&C Set DCD Function Mode

Execution Command AT&C[<value>]	Response This parameter determines how the state of circuit 109(DCD) relates to the detection of received line signal from the distant end. OK
Maximum Response Time	300ms
Reference V.25ter	

Parameter

<value>	0	DCD line is always ON
	1	DCD line is ON only in the presence of data carrier

3.2. AT&D Set DTR Function Mode

AT&D determines how the UE responds if DTR line is changed from the ON to the OFF condition during online data mode.

AT&D Set DTR Function Mode

Execution Command AT&D[<value>]	Response This parameter determines how the TA responds when circuit 108/2 (DTR) is changed from the ON to the OFF condition during data mode. OK
---	---

Maximum Response Time	300ms
Reference V.25ter	

Parameter

<value>	0	TA ignores status on DTR
	<u>1</u>	ON->OFF on DTR: Change to command mode with remaining the connected call
	2	ON->OFF on DTR: Disconnect data call, change to command mode. During state DTR=OFF, auto-answer function is disabled

3.3. AT+IFC Set TE-TA Local Data Flow Control

AT+IFC determines the flow control behavior of the serial port.

AT+IFC Set TE-TA Local Data Flow Control	
Test Command AT+IFC=?	Response +IFC: (list of supported <dce_by_dte>s),(list of supported <dte_by_dce>s) OK
Read Command AT+IFC?	Response +IFC: <dce_by_dte>,<dte_by_dce> OK
Write Command AT+IFC=<dce_by_dte>,<dte_by_dce>	Response This parameter setting determines the data flow control on the serial interface for data mode. OK
Maximum Response Time	300ms
Reference V.25ter	

Parameter

<dce_by_dte>	Specifies the method will be used by TE when receiving data from TA
	<u>0</u> None
	2 RTS flow control
<dte_by_dce>	Specifies the method will be used by TA when receiving data from TE

0	None
2	CTS flow control

NOTE

This flow control is applied for data mode.

Example

```
AT+IFC=2,2 //Open the hardware flow control
OK
AT+IFC?
+IFC: 2,2
OK
```

3.4. AT+IPR Set TE-TA Fixed Local Rate

AT+IPR is used to query and set the baud rate of the UART. The default baud rate value (<rate>) is 115200bps. <rate> setting will not be restored with AT&F.

AT+IPR Set TE-TA Fixed Local Rate

Test Command AT+IPR=?	Response +IPR: (list of supported auto detectable <rate>s),(list of supported fixed-only<rate>s) OK
Read Command AT+IPR?	Response +IPR: <rate> OK
Write Command AT+IPR=<rate>	Response This parameter setting determines the data rate of the TA on the serial interface. After the delivery of any result code associated with the current command line, the rate of command takes effect. OK
Maximum Response Time	300ms
Reference V.25ter	

Parameter

<rate>	Baud rate of per second
	<u>0</u>
	300
	1200
	2400
	4800
	9600
	19200
	38400
	57600
	115200
	230400
	460800
	921600
	3000000
	6000000

NOTES

1. If a fixed baud rate is set, make sure that both TE (DTE, usually external processor) and TA (DCE, Quectel module) are configured to the same rate.
2. If **IPR** is set to 0, it will change module to auto baudrate.
3. The value of **AT+IPR** cannot be restored with **AT&F** and **ATZ**.
4. A selected baud rate takes effect after the write commands are executed and acknowledged by "OK".

Example

```
AT+IPR=115200 //Set fixed baud rate to 115200
OK
AT+IPR?
+IPR: 115200
OK
```


4 Status Control Commands

4.1. AT+CPAS Mobile Equipment Activity Status

AT+CPAS execute command queries the module's activity status.

AT+CPAS Mobile Equipment Activity Status

Test Command
AT+CPAS=?

Response
+CPAS: (list of supported **<pas>**s)

OK

Execution Command
AT+CPAS

Response
TA returns the activity status of ME.
+CPAS: **<pas>**

OK
ERROR

If error is related to ME functionality:
+CME ERROR: **<err>**

Maximum Response Time

300ms

Reference
3GPP TS 27.007

Parameter

<pas>	<u>0</u>	Ready
	2	Unknown
	3	Ringing
	4	Call in progress or call hold

Example

```
AT+CPAS
+CPAS: 0 //Module is idle
```

```

OK
ATD10086;
OK
AT+CLCC
+CLCC: 1,0,3,0,0,"10086",129

OK
AT+CPAS
+CPAS: 3 //Module is ringing

OK
AT+CLCC
+CLCC: 1,0,0,0,0,"10086",129

OK
AT+CPAS
+CPAS: 4 //Call in progress

OK
    
```

4.2. AT+CEER Extended Error Report

AT+CEER provides an extended report of 1 line about categorized error causes, such as:

- +CEER: "No report available"
- +CEER: "CC setup error",1,"Unassigned (unal-located) number"
- +CEER: "SM detach",0,"No cause information available"

AT+CEER Extended Error Report

Test command AT+CEER=?	Response OK
Execution command AT+CEER	Response In case of CC and SM categories: +CEER: <category>[,<cause>,<descriptions>] In case of SS category network error cause: +CEER: <category>,<cause>[,<tag>] OK ERROR

	If error is related to ME functionality: +CME ERROR: <err>
Maximum Response Time	300ms

Parameter

<category>	"No report available" "CC setup error" "CC modification error" "CC release" "SM attach error" "SM detach" "SM activation error" "SM deactivation" "SS network error cause" "SS network reject cause" "SS network GSM cause"
<cause>	Contains a digit representing the error cause sent by network or internally. Refer to Table 13: Cause and Description List of AT+CEER.
<descriptions>	A verbose string containing the textual representation. Refer to Table 13: Cause and Description List of AT+CEER.
<tag>	SS error tag in 3GPP TS 24.008

5 SIM Related Commands

5.1. AT+CIMI Request International Mobile Subscriber Identity (IMSI)

AT+CIMI requests the International Mobile Subscriber Identity (IMSI) which is intended to permit the TE to identify the individual SIM card or active application in the UICC (GSM or USIM) that is attached to MT.

AT+CIMI Request International Mobile Subscriber Identity (IMSI)	
Test Command AT+CIMI=?	Response OK
Execution Command AT+CIMI	Response TA returns <IMSI> for identifying the individual SIM which is attached to ME. <IMSI> OK If error is related to ME functionality: +CME ERROR: <err>
Maximum Response Time	300ms
Reference 3GPP TS 27.007	

Parameter

<IMSI> International Mobile Subscriber Identity (string without double quotes)

Example

```
AT+CIMI
460023210226023 //Query IMSI number of SIM which is attached to ME
OK
```

5.2. AT+CLCK Facility Lock

AT+CLCK is used to lock, unlock or interrogate a MT or a network facility **<fac>**. The command can be aborted when network facilities are set or interrogated.

AT+CLCK Facility Lock	
Test Command AT+CLCK=?	Response +CLCK: (list of supported <fac> s) OK
Write Command AT+CLCK=<fac>,<mode>[,<passwd>[,<class>]]	Response This command is used to lock, unlock or interrogate a ME or a network facility <fac> . Password is normally needed to do such actions. When querying the status of a network service (<mode> =2) the response line for 'not active' case (<status> =0) should be returned only if service is not active for any <class> . If <mode> is not equal 2 and command is successful: OK If <mode> =2 and command is successful: +CLCK: <status>[,<class>] [+CLCK: <status>[,<class>]] [...] OK
Maximum Response Time	5s
Reference	3GPP TS 27.007

Parameter

<fac>	"SC"	SIM (lock SIM/UICC card installed in the currently selected card slot) (SIM/UICC asks password in MT power-up and when this lock command issued)
	"AO"	BAOC (Barr All Outgoing Calls) (refer to 3GPP TS 22.088 clause 1)
	"OI"	BOIC (Barr Outgoing International Calls) (refer to 3GPP TS 22.088 clause 1)
	"OX"	BOIC-exHC (Barr Outgoing International Calls except to Home Country) (refer to 3GPP TS 22.088 clause 1)
	"AI"	BAIC (Barr All Incoming Calls) (refer to 3GPP TS 22.088 clause 2)
	"IR"	BIC-Roam (Barr Incoming Calls when Roaming outside the home country) (refer

		to 3GPP TS 22.088 clause 2)
"AB"		All Barring services (refer 3GPP TS 22.030) (applicable only for <mode> =0)
"AG"		All outgoing barring services (refer 3GPP TS 22.030) (applicable only for <mode> =0)
"AC"		All incoming barring services (refer 3GPP TS 22.030) (applicable only for <mode> =0)
"FD"		SIM card or active application in the UICC (GSM or USIM) fixed dialing memory feature (if PIN2 authentication has not been done during the current session, PIN2 is required as <passwd>)
"PS"		PH SIM(lock Phone to SIM/UICC card)(MT asks password when other than current SIM/UICC card inserted; MT may remember certain amount of previously used cards thus not requiring password when they are inserted)
"PN"		Network Personalization (refer to 3GPP TS 22.022)
"PU"		Network Subset Personalization (refer to 3GPP TS 22.022)
"PP"		Service Provider Personalization (refer to 3GPP TS 22.022)
"PC"		Corporate Personalization (refer to 3GPP TS 22.022)
<mode>	0	Unlock
	1	Lock
	2	Query status
<passwd>		Password
<class>	1	Voice
	2	Data
	4	FAX
	7	All telephony except SMS (Default)
	8	Short message service
	16	Data circuit sync
	32	Data circuit async
	64	Dedicated packet access
	128	Dedicated PAD access
<status>	0	Off
	1	On

Example

```

AT+CLCK="SC",2
+CLCK: 0 //Query the status of SIM card lock, 0-unlock

OK
AT+CLCK="SC",1,"1234" //Lock SIM card, the password is 1234
OK
AT+CLCK="SC",2
+CLCK: 1 //Query the status of SIM card lock, 1-lock

```

```
OK
AT+CLCK="SC",0,"1234" //Unlock SIM card
OK
```

5.3. AT+CPIN Enter PIN

AT+CPIN is used to enter a password or query whether or not module requires a password which is necessary before it can be operated (SIM PIN, SIM PUK, PH-SIM PIN, etc.).

AT+CPIN Enter PIN

Test Command AT+CPIN=?	Response OK
Read Command AT+CPIN?	Response TA returns an alphanumeric string indicating whether or not some password is required. +CPIN: <code> OK
Write Command AT+CPIN=<pin>[,<new pin>]	Response TA stores a password which is necessary before it can be operated (SIM PIN, SIM PUK, etc.). If the PIN is to be entered twice, the TA shall automatically repeat the PIN. If no PIN request is pending, no action is taken and an error message, +CME ERROR , is returned to TE. If the PIN required is SIM PUK or SIM PUK2, the second pin is required. This second pin, <new pin> , is used to replace the old pin in the SIM. OK
Maximum Response Time	5s
Reference 3GPP TS 27.007	

Parameter

<code>	READY	MT is not pending for any password
	SIM PIN	MT is waiting for SIM PIN to be given
	SIM PUK	MT is waiting for SIM PUK to be given
	SIM PIN2	MT is waiting for SIM PIN2 to be given
	SIM PUK2	MT is waiting for SIM PUK2 to be given

PH-NET PIN	MT is waiting for network personalization password to be given
PH-NET PUK	MT is waiting for network personalization unblocking password to be given
PH-NETSUB PIN	MT is waiting for network subset personalization password to be given
PH-NETSUB PUK	MT is waiting for network subset personalization unblocking password to be given
PH-SP PIN	MT is waiting for service provider personalization password to be given
PH-SP PUK	MT is waiting for service provider personalization unblocking password to be given
PH-CORP PIN	MT is waiting for corporate personalization password to be given
PH-CORP PUK	MT is waiting for corporate personalization unblocking password to be given
<pin>	Password (string type). If the requested password was a PUK, such as SIM PUK1 or PH-FSIM PUK or another password, then <pin> must be followed by <new pin>
<new pin>	New password (string type) if the requested code was a PUK.

Example

```
//Enter PIN
AT+CPIN?
+CPIN: SIM PIN //Query PIN code is locked

OK
AT+CPIN=1234 //Enter PIN
OK

+CPIN: READY

AT+CPIN? //PIN has already been entered
+CPIN: READY

OK

//Enter PUK and PIN
AT+CPIN?
+CPIN: SIM PUK //Query PUK code is locked

OK
AT+CPIN="26601934","1234" //Enter PUK and new PIN password
OK
```


+CPIN: READY

AT+CPIN?

+CPIN: READY

//PUK has already been entered

OK

5.4. AT+CPWD Change Password

AT+CPWD sets a new password for the facility lock function defined by command Facility Lock +CLCK.

AT+CPWD Change Password

Test Command AT+CPWD=?	Response TA returns a list of pairs which present the available facilities and the maximum length of their password. +CPWD: (list of supported <fac>s),(<pwdlength>s) OK
Write Command AT+CPWD=<fac>,<oldpwd>,<newpwd> >	Response TA sets a new password for the facility lock function. OK
Maximum Response Time	5s
Reference 3GPP TS 27.007	

Parameter

<fac>	"SC"	SIM (lock SIM/UICC card) (SIM/UICC asks password in MT power-up and when this lock command issued)
	"AO"	BAOC (Barr All Outgoing Calls, refer to 3GPP TS 22.088 clause 1)
	"OI"	BOIC (Barr Outgoing International Calls, refer to 3GPP TS 22.088 clause 1)
	"OX"	BOIC-exHC (Barr Outgoing International Calls except to Home Country, refer to 3GPP TS 22.088 clause 1)
	"AI"	BAIC (Barr All Incoming Calls, refer to 3GPP TS 22.088 clause 2)
	"IR"	BIC-Roam (Barr Incoming Calls when Roaming outside the home country, refer to 3GPP TS 22.088 clause 2)
	"AB"	All barring services (refer to 3GPP TS 22.030, applicable only for <mode>=0)
	"AG"	All outgoing barring services (refer to 3GPP TS 22.030, applicable only for <mode>=0)

"AC"	All incoming barring services (refer to 3GPP TS 22.030, applicable only for <mode>=0)
"PS"	PH SIM(lock Phone to SIM/UICC card)(MT asks password when other than current SIM/UICC card inserted; MT may remember certain amount of previously used cards thus not requiring password when they are inserted)
"P2"	SIM PIN2
"PN"	Network Personalization (refer to 3GPP TS 22.022)
"PU"	Network Subset Personalization (refer to 3GPP TS 22.022)
"PP"	Service Provider Personalization (refer to 3GPP TS 22.022)
"PC"	Corporate Personalization (refer to 3GPP TS 22.022)
<pwdlength>	Integer type, max length of password
<oldpwd>	Password specified for the facility from the user interface or with command.
<newpwd>	New password

Example

```

AT+CPIN?
+CPIN: READY

OK
AT+CPWD="SC","1234","4321"           //Change SIM card password to "4321"
OK

//Restart module or re-activate the SIM card

AT+CPIN                               //Query PIN code is locked
+CPIN: SIM PIN

OK
AT+CPIN=4321                           //PIN must be entered to define a new password "4321"
OK

+CPIN: READY

```

5.5. AT+CSIM Generic SIM Access

AT+CSIM allows a direct control of the SIM that is installed in the currently selected card slot by a distant application on the TE. The TE shall then keep the processing of SIM information within the frame specified by GSM/UMTS.

AT+CSIM Generic SIM Access

Test Command AT+CSIM=?	Response OK
Write Command AT+CSIM= <length>,<command>	Response +CSIM: <length>,<response> OK ERROR If error is related to ME functionality: +CME ERROR: <err>
Maximum Response Time	300ms
Reference 3GPP TS 27.007	

Parameter

<length>	Integer type. Length of <command> or <response> string
<command>	Command transferred by the MT to the SIM in the format as described in 3GPP TS 51.011
<response>	Response to the command transferred by the SIM to the MT in the format as described in 3GPP TS 51.011

5.6. AT+CRSM Restricted SIM Access

AT+CRSM offers easy and limited access to the SIM database. It transmits the SIM **<command>** and its required parameters to the MT.

AT+CRSM Restricted SIM Access

Test Command AT+CRSM=?	Response OK
Write Command AT+CRSM=<command>[,<fileId>[,<P1>,<P2>,<P3>[,<data>][,<pathId>]]]	Response +CRSM: <sw1>,<sw2>[,<response>] OK ERROR If error is related to ME functionality: +CME ERROR: <err>

Maximum Response Time	300ms
Reference	3GPP TS 27.007

Parameter

<command>	USIM command number 176 READ BINARY 178 READ RECORD 192 GET RESPONSE 214 UPDATE BINARY 220 UPDATE RECORD 242 STATUS
<fileId>	Integer type; identifier for an elementary data file on USIM, if used by <command>
<P1>, <P2>, <P3>	Integer type; parameters transferred by the MT to the SIM. These parameters are mandatory for every command, except GET RESPONSE and STATUS. The values are described in 3GPP TS 51.011
<data>	Information which shall be written to the SIM (hexadecimal character format; refer to +CSCS)
<pathId>	Contains the directory path of an elementary file on a UICC in hexadecimal format
<sw1>, <sw2>	Integer type; information from the SIM about the execution of the actual command. These parameters are delivered to the TE in both cases, on successful or failed execution of the command
<response>	Response of a successful completion of the command previously issued (hexadecimal character format; refer +CSCS). STATUS and GET RESPONSE return data, which gives information about the current elementary data field. This information includes the type of file and its size (refer 3GPP TS 51.011). After READ BINARY, READ RECORD or RETRIEVE DATA command the requested data will be returned. <response> is not returned after a successful UPDATE BINARY, UPDATE RECORD or SET DATA command

6 Network Service Commands

6.1. AT+COPS Operator Selection

AT+COPS returns the current operators and their status and allows to set automatic or manual network selection.

AT+COPS Operator Selection

Test Command

AT+COPS=?

Response

TA returns a set of five parameters, each representing an operator present in the network. Any of the formats may be unavailable and should then be an empty field. The list of operators shall be in order: home network, networks referenced in SIM and other networks.

+COPS: (list of supported<stat>, long alphanumeric <oper>, short alphanumeric <oper>, numeric <oper>s)[,< Act>]s[,< Plmn_flag>]s
[,,(list of supported <mode>s),(list of supported <format>s)]

OK

If error is related to ME functionality:

+CME ERROR: <err>

Read Command

AT+COPS?

Response

TA returns the current mode and the currently selected operator. If no operator is selected, <format>, <oper> and <Act> are omitted.

+COPS: <mode>[,<format>[,<oper>][,<Act>]]

OK

If error is related to ME functionality:

+CME ERROR: <err>

Write Command

AT+COPS= <mode>

Response

TA forces an attempt to select and register the GSM/UMTS

<p>[,<format>[,<oper>]]</p>	<p>network operator. If the selected operator is not available, no other operator shall be selected (except <mode>=4). The format of selected operator name shall apply to further read commands (+COPS?).</p> <p>OK</p> <p>If error is related to ME functionality: +CME ERROR: <err></p>
<p>Maximum Response Time</p>	<p>180s, determined by network.</p>
<p>Reference 3GPP TS 27.007</p>	

Parameter

<p><stat></p>	<p>0 1 2 3</p>	<p>Unknown Operator available Operator current Operator forbidden</p>
<p><oper></p>	<p>Operator in format as per <mode></p>	
<p><mode></p>	<p>0 1 2 3 4</p>	<p>Automatic mode; <oper> field is ignored Manual operator selection; <oper> field shall be present and <Act> optionally Manual deregister from network Set only <format> (for read Command +COPS?), do not attempt registration/deregistration (<oper> and <Act> fields are ignored); this value is not applicable in read command response Manual/automatic selected, <oper> field shall be presented; if manual selection fails, automatic mode (<mode>=0) is entered</p>
<p><format></p>	<p>0 1 2</p>	<p>Long format alphanumeric <oper>; can be up to 16 characters long Short format alphanumeric <oper> Numeric <oper>; GSM location area identification number</p>
<p><Act></p>	<p>Access technology selected. Only 0 and 2 can be set in write command 0 2 3 4 5 6</p>	<p>GSM UTRAN GSM W/EGPRS UTRAN W/HSDPA UTRAN W/HSUPA UTRAN W/HSDPA and HSUPA</p>
<p><Plmn_flag></p>	<p>0 1 2</p>	<p>Available PLMN is present on EHPLMN List Available PLMN is present on User controlled List Available PLMN is present on Operator controlled List</p>

Example

```

AT+COPS=? //List all current network operators
+COPS:
(2,"CHN-UNICOM","UNICOM","46001",2),(1,"CHN-UNICOM","UNICOM","46001",0,0),(3,"CHINA
MOBILE","CMCC","46000",0),(0-4),(0-2)

OK
AT+COPS? //Query the currently selected network operator
+COPS: 0,0,"CHN-UNICOM",2

OK

```

6.2. AT+CREG Network Registration

AT+CREG returns the network registration status. The write command sets whether or not to present URC.

AT+CREG Network Registration	
Test Command AT+CREG=?	Response +CREG: (list of supported <n>s) OK
Read Command AT+CREG?	Response TA returns the status of result code presentation and an integer <stat> which shows whether the network has currently indicated the registration of the ME. Location information elements <lac> and <ci> are returned only when <n>=2 and ME is registered in the network. +CREG: <n>,<stat>[,<lac>,<ci>[,<Act>]] OK If error is related to ME functionality: +CME ERROR: <err>
Write Command AT+CREG=<n>	Response TA controls the presentation of an unsolicited result code +CREG: <stat> when <n>=1 and there is a change in the ME network registration status. OK
Maximum Response Time	300ms

Reference
3GPP TS 27.007

Parameter

<n>	0	Disable network registration unsolicited result code
	1	Enable network registration unsolicited result code +CREG: <stat>
	2	Enable network registration unsolicited result code with location information +CREG: <stat>[,<lac>,<ci>[,<Act>]]
<stat>	0	Not registered, ME is not currently searching a new operator to register to
	1	Registered, home network
	2	Not registered, but ME is currently searching a new operator to register to
	3	Registration denied
	4	Unknown
<lac>		String type, two bytes location area code in hexadecimal format
<ci>		String type, two bytes cell ID in hexadecimal format
<Act>		Access technology selected
	0	GSM
	2	UTRAN

Example

```

AT+CREG=1
OK

+CREG: 1 //URC reports that ME has registered
AT+CREG=2 //Activates extended URC mode
OK

+CREG: 1,"D504","08043799",2 //URC reports that operator has found location area code and
                                cell ID
    
```

6.3. AT+CSQ Signal Quality Report

AT+CSQ indicates the received signal strength **<rssi>** and the channel bit error rate **<ber>**.

AT+CSQ Signal Quality Report

Test Command	Response
AT+CSQ=?	+CSQ: (list of supported <rssi> s),(list of supported <ber> s)

	OK
Execution Command AT+CSQ	Response +CSQ: <rssi>,<ber> OK +CME ERROR: <err> Execution Command returns received signal strength indication <rssi> and channel bit error rate <ber> from the ME. Test Command returns values supported by the TA.
Maximum Response Time	300ms
Reference 3GPP TS 27.007	

Parameter

<rssi>	0	-113 dBm or less
	1	-111 dBm
	2...30	-109... -53 dBm
	31	-51 dBm or greater
	99	Not known or not detectable
	According to 3GPP TS 27.007 [47], the <rssi> value is not applicable to 3G networks. Yet, with a view to employing +CSQ for all networks has been designed to show a <rssi> value derived from the 3G specific RSCP parameter is shown by AT+QENG. Nevertheless, please note that connection quality in 3G networks is depending on further factors. For example, despite good <rssi> or RSCP values for signal quality, data throughput may vary depending on the number of subscribers sharing the same cell.	
<ber>	Channel bit error rate (in percent)	
	0...7	As RXQUAL values in the table in 3GPP TS 45.008 subclause 8.2.4
	99	Not known or not detectable

Example

```

AT+CSQ=?
+CSQ: (0-31,99),(0-7,99)

OK
AT+CSQ
+CSQ: 28,0 //Query the current signal strength indication is 28 and
channel bit error rate is 0
OK

```

NOTES

After using network related commands such as **+CCWA**, **+CCFC**, users are advised to wait for 3s before entering AT+CSQ. This is recommended to ensure that any network access required for the preceding command has finished.

6.4. AT+CPOL Preferred Operator List

AT+CPOL edits and queries the list of the preferred operators.

AT+CPOL Preferred Operator List

Test Command AT+CPOL=?	Response +CPOL: (list of supported <index>s),(list of supported <format>s) OK
Read Command AT+CPOL?	Response Query the list of the preferred operators: +CPOL: <index>,<format>,<oper> [,<GSM>,<GSM_compact>,<UTRAN>] [+CPOL: <index>,<format>,<oper> [,<GSM>,<GSM_compact>,<UTRAN>] [...]] OK
Write Command AT+CPOL= <index>[,<format>[,<oper>[<GSM>,<GSM_compact>,<UTRAN>]]]	Response Edit the list of the preferred operators OK ERROR If the <index> is given but the <operator> is left out, the entry is deleted.
Maximum Response Time	300ms
Reference	3GPP TS 27.007

Parameter

<index>	Integer type; the order number of operator in the SIM/USIM preferred operator list
<format>	0 Long format alphanumeric <oper> 1 Short format alphanumeric <oper> 2 Numeric <oper>
<oper>	String type; <format> indicates if the format is alphanumeric or numeric (see +COPS)
<GSM>	GSM access technology 0 Access technology is not selected 1 Access technology is selected
<GSM_Compact>	GSM compact access technology 0 Access technology is not selected 1 Access technology is selected
<UTRAN>	UTRAN access technology 0 Access technology is not selected 1 Access technology is selected

6.5. AT+COPN Read Operator Names

The AT+COPN command returns the list of operator names from the ME. Each operator code **<numeric>** that has an alphanumeric equivalent **<alphan>** in the ME memory is returned.

AT+COPN Read Operator Names

Test Command AT+COPN=?	Response OK
Execution Command AT+COPN	Response +COPN: <numeric1>,<alpha1> [+COPN: <numeric2>,<alpha2> [...]] OK +CME ERROR: <err>
Maximum Response Time	Depends on the number of operator names
Reference 3GPP TS 27.007	

Parameter

<numeric>	String type; operator in numeric format (see +COPS)
<alphan>	String type; operator in long alphanumeric format (see +COPS)

7 Call Related Commands

7.1. ATA Answer an Incoming Call

ATA connects the module to an incoming voice or data call indicated by a "RING" URC.

ATA Answer an Incoming Call

Execution Command

ATA

Response

TA sends off-hook to the remote station.

Response in case of data call, if successfully connected

CONNECT<text> TA switches to data mode.

Note: **<text>** output only if **ATX<value>** parameter setting with the **<value>** >0.

When TA returns to command mode after call release:

OK

Response in case of voice call, if successfully connected:

OK

Response if no connection:

NO CARRIER

Maximum Response Time

90s, determined by network.

Reference

V.25ter

NOTES

1. Any additional commands on the same command line are ignored.
2. This command may be aborted generally by receiving a character during execution. The aborting is not possible during some states of connection establishment such as handshaking.
3. See also **ATX**.

Example

```

RING //A voice call is ringing
AT+CLCC
+CLCC: 1,1,4,0,0,"02154450290",129

OK
ATA //Accept the voice call with ATA
OK
    
```

7.2. ATD Mobile Originated Call to Dial a Number

ATD can be used to set up outgoing voice and data calls. Supplementary Services can also be controlled with ATD.

ATD Mobile Originated Call to Dial a Number

Execution Command	Response
ATD<n>[<mgsms>][;:]	<p>This command can be used to set up outgoing voice, data or FAX calls. It also serves to control supplementary services.</p> <p>If no dial tone and (parameter setting ATX2 or ATX4): NO DIALTONE</p> <p>If busy and (parameter setting ATX3 or ATX4): BUSY</p> <p>If a connection cannot be established: NO CARRIER</p> <p>If connection is successful and non-voice call. CONNECT<text> TA switches to data mode.</p> <p><text> outputs only if ATX<value> parameter setting with the <value> >0</p> <p>When TA returns to command mode after call release: OK</p> <p>If connection is successful and voice call: OK</p>
Maximum Response Time	5s, determined by network (AT+COLP=0).

Reference
V.25ter

Parameter

<n>	String of dialing digits and optionally V.25ter modifiers Dialing digits: 0-9, *, #, +, A, B, C Following V.25ter modifiers are ignored: ,(comma), T, P, !, W, @
<mgsms>	String of GSM modifiers: I Activates CLIR (Disable presentation of own number to called party) i Deactivates CLIR (Enable presentation of own number to called party) G Activates closed user group invocation for this call only g Deactivates closed user group invocation for this call only
<;>	Only required to set up voice call, return to command state

NOTES

- This command may be aborted generally by receiving an **ATH** command or a character during execution. The aborting is not possible during some states of connection establishment such as handshaking.
- Parameter "I" and "i" only if no *# code is within the dial string.
- See **ATX** command for setting result code and call monitoring parameters.
- Responses returned after dialing with **ATD**
For voice call two different responses mode can be determined. TA returns "OK" immediately either after dialing was completed or after the call was established. The setting is controlled by **AT+COLP**. Factory default is **AT+COLP=0**, which causes the TA returns "OK" immediately after dialing was completed, otherwise TA will return "OK", "BUSY", "NO DIAL TONE", "NO CARRIER".
- Using **ATD** during an active voice call:
 - When a user originates a second voice call while there is already an active voice call, the first call will be automatically put on hold.
 - The current states of all calls can be easily checked at any time by using the **AT+CLCC** command.

Example

```
ATD10086; //Dialing out the party's number
OK
```

7.3. ATH Disconnect Existing Connection

ATH disconnects circuit switched data calls or voice calls. AT+CHUP is also used to disconnect the voice call.

ATH Disconnect Existing Connection

Execution Command ATH[n]	Response Disconnect existing call by local TE from command line and terminate call. OK
Maximum Response Time	90s, determined by network.
Reference V.25ter	

Parameter

<n>	0	Disconnect from line and terminate call
-----	---	---

7.4. AT+CVHU Voice Hang Up Control

AT+CVHU controls whether ATH can be used to disconnect the voice call.

AT+CVHU Voice Hang Up Control

Test Command AT+CVHU=?	Response +CVHU: (list of supported<mode>s) OK
Read Command AT+CVHU?	Response +CVHU: <mode> OK
Write Command AT+CVHU=<mode>	Response OK ERROR
Maximum Response Time	300ms
Reference 3GPP TS 27.007	

Parameter

<mode>	<u>0</u>	ATH is disconnected
	1	ATH is ignored but "OK" response is returned

7.5. AT+CHUP Hang Up Call

AT+CHUP cancels all voice calls in the state of Active, Waiting and Held. For data connections, use ATH.

AT+CHUP Hang Up Call

Test Command AT+CHUP=?	Response OK
Execution Command AT+CHUP	Response OK ERROR
Maximum Response Time	90s, determined by network.
Reference 3GPP 27.007	

Example

```
RING //Incoming call
AT+CHUP //Hang up call
OK
```

7.6. +++ Switch From Data Mode to Command Mode

The +++ character sequence causes the module to switch from data mode to AT command mode. It allows inputting AT commands while maintaining the data connection with the remote device.

+++ Switch From Data Mode to Command Mode

Execution Command +++	Response This command is only available during TA is in data mode. The“+++” character sequence causes the TA to cancel the data flow over the AT interface and switch to command mode. This allows you to enter AT command while maintaining the data connection with the remote server or, accordingly, the packet domain connection.
---------------------------------	---

	OK
Maximum Response Time	300ms
Reference V.25ter	

NOTES

- To prevent the “+++” escape sequence from being misinterpreted as data, it should comply to following sequence:
 - Do not input any character within T1 time (1000ms) before inputting “+++”.
 - Input “+++” within 1000ms, and no other characters can be inputted during this time.
 - Do not input any character within T1 time (1000ms) after “+++” has been inputted.
 - Switch to command mode, otherwise return to step 1.
- To return from command mode back to data mode: Enter **ATO**
 - Another way to change to command mode is through DTR, refer to **AT&D** command for details.

7.7. ATO Switch From Command Mode to Data Mode

ATO resumes the connection and switches back from command mode to data mode.

ATO Switch From Command Mode to Data Mode

Execution Command ATO[n]	Response TA resumes the connection and switches back from command mode to data mode. If connection is not successfully resumed: NO CARRIER else TA returns to data mode from command mode CONNECT <text>
Maximum Response Time	300ms
Reference V.25ter	

Parameter

<n>	0	Switch from command mode to data mode
-----	---	---------------------------------------

NOTE

TA returns to data mode from command mode **CONNECT <text>,<text>** only if **ATX** parameter is set as value>0.

7.8. ATSO Set Number of Rings before Automatically Answering Call

ATSO controls automatic answering mode for the incoming calls.

ATSO Set Number of Rings Before Automatically Answering Call

Read Command ATSO?	Response <n> OK
Write Command ATSO=<n>	Response This parameter setting determines the number of rings before auto-answer. OK
Maximum Response Time	300ms
Reference V.25ter	

Parameter

<n>	000	Automatic answering is disabled
	001-255	Enable automatic answering on the ring number specified

NOTE

If <n> is set too high, the calling party may hang up before the call is answered automatically.

Example

```

ATSO=3 //Set three rings before automatically answering a call
OK

RING //Call coming

RING
    
```

RING //Automatically answering the call after three rings

7.9. ATS6 Set Pause Before Blind Dialing

ATS6 is implemented for compatibility reasons only, and has no effect.

ATS6 Set Pause Before Blind Dialing

Read Command
ATS6?

Response
<n>

OK

Write Command
ATS6=<n>

Response
OK

Maximum Response Time

300ms

Reference
V.25ter

Parameter

<n> 000-002-010 Number of seconds to wait before blind dialing

7.10. ATS7 Set Number of Seconds to Wait for Connection Completion

ATS7 specifies the amount of time to wait for the connection completion in case of answering or originating a call. If no connection is established during this time, the module disconnects from the line.

ATS7 Set Number of Seconds to Wait for Connection Completion

Read Command
ATS7?

Response
<n>

OK

Write Command
ATS7=<n>

Response
This parameter setting determines the amount of time to wait for the connection completion in case of answering or originating a call.
OK

Maximum Response Time	300ms
Reference V.25ter	

Parameter

<n>	<u>000</u>	Disabled
	001-255	Number of seconds to wait for connection completion

7.11. ATS8 Set the Number of Seconds to Wait for Comma Dial Modifier

ATS8 is implemented for compatibility reasons only, and has no effect.

ATS8 Set the Number of Seconds to Wait for Comma Dial Modifier

Read Command ATS8?	Response <n> OK
Write Command ATS8=<n>	Response OK
Maximum Response Time	300ms
Reference V.25ter	

Parameter

<n>	000	No pause when comma encountered in dial string
	001- <u>002</u> -255	Number of seconds to wait

7.12. AT+ATS10 Set Disconnect Delay after Indicating the Absence of Data Carrier

ATS10 determines the amount of time, which the UE remains connected in absence of a data carrier.

AT+ATS10 Set Disconnect Delay after Indicating the Absence of Data Carrier

Read Command ATS10?	Response <n> OK
Write Command ATS10=<n>	Response This parameter setting determines the amount of time that the TA will remain connected in absence of data carrier. If the data carrier is once more detected before disconnection, the TA remains connected. OK
Maximum Response Time	300ms
Reference V.25ter	

Parameter

<n>	001-015-254	Number of tenths of seconds to wait before disconnecting after UE has indicated the absence of received line signal
-----	-------------	---

7.13. AT+CBST Select Bearer Service Type

AT+CBST write command selects the bearer service <name>, the data rate <speed> and the connection element <ce> to be used when data calls are originated.

AT+CBST Select Bearer Service Type

Test Command AT+CBST=?	Response +CBST: (list of supported <speed>s) ,(list of supported <name>s) ,(list of supported <ce>s) OK
Read Command AT+CBST?	Response +CBST: <speed>,<name>,<ce>

	OK
Write Command AT+CBST=[<speed>[,<name>[,<ce>]]]	Response TA selects the bearer service <name> with data rate <speed> , and the connection element <ce> to be used when data calls are originated. OK
Maximum Response Time	300ms
Reference 3GPP TS 27.007	

Parameter

<speed>	0	Automatic selection of the speed; this setting is possible in case of 3.1kHz modem and non-transparent service
	4	2400 bps (V.22bis)
	5	2400 bps (V.26ter)
	6	4800 bps (V.32)
	7	9600 bps (V.32)
	12	9600 bps (V.34)
	14	14400 bps (V.34)
	15	19200 bps (V.34)
	16	28800 bps (V.34)
	17	32000 bps (V.34)
	39	9600 bps (V.120)
	43	14400 bps (V.120)
	47	19200 bps (V.120)
	48	28800 bps (V.120)
	49	38400 bps (V.120)
	50	48000 bps (V.120)
	51	56000 bps (V.120)
	68	2400 bps (V.110 or X.31 flag stuffing)
	70	4800 bps (V.110 or X.31 flag stuffing)
	<u>71</u>	9600 bps (V.110)
	75	14400 bps (V.110)
	79	19200 bps (V.110 or X.31 flag stuffing)
	80	28800 bps (V.110 or X.31 flag stuffing)
	81	38400 bps (V.110 or X.31 flag stuffing)
	82	48000 bps (V.110 or X.31 flag stuffing)
	83	56000 bps (V.110 or X.31 flag stuffing; this setting can be used in conjunction with asynchronous non-transparent UDI or RDI service in order to get FTM84 64000 bps (X.31 flag stuffing; this setting can be used in conjunction with asyn-chronous non-transparent UDI service in order to get FTM)

	84	64000 bps (X.31 flag stuffing; this setting can be used in conjunction with asynchronous non-transparent UDI service in order to get FTM)
	115	56000 bps (bit transparent)
	116	64000 bps (bit transparent)
	120	32000 bps (PIAFS32k)
	121	64000 bps (PIAFS64k)
	130	28800 bps (multimedia)
	131	32000 bps (multimedia)
	132	33600 bps (multimedia)
	133	56000 bps (multimedia)
	134	64000 bps (multimedia)
<name>	0	Asynchronous Modem
	1	Synchronous Modem
	4	Asynchronous Modem (RDI)
	5	Synchronous Modem (RDI)
<ce>	0	Transparent
	1	Non-transparent
	2	Both, transparent preferred
	3	Both, non-transparent preferred

NOTE

3GPP TS 22.002 lists the allowed combinations of the sub-parameters.

7.14. AT+CSTA Select Type of Address

AT+CSTA write command selects the type of number for further dialing commands ATD according to 3GPP Technical Specifications. Test command returns values supported a compound value.

AT+CSTA Select Type of Address

Test Command AT+CSTA=?	Response +CSTA: (list of supported <type> s) OK
Read Command AT+CSTA?	Response +CSTA: <type> OK
Write Command AT+CSTA=<type>	Response OK

Maximum Response Time	300ms
Reference	3GPP TS 27.007

Parameter

<type>	128-129-255 Current address type settings, e.g:
	129 Unknown type
	145 International type (contains the character "+")

7.15. AT+CLCC List Current Calls of ME

The execution command returns the list of all current calls. If the command is executed successfully, but no calls are existed, no information but OK response is sent to the TE.

AT+CLCC List Current Calls of ME	
Test Command AT+CLCC=?	Response OK
Execution Command AT+CLCC	Response TA returns a list of current calls of ME. If command execute successfully but no calls are existed, no information but OK response is sent to TE. [+CLCC: <id1>,<dir>,<stat>,<mode>,<mpty>[,<number>,<type>[,<alpha>]] [+CLCC: <id2>,<dir>,<stat>,<mode>,<mpty>[,<number>,<type>[,<alpha>]] [...] OK If error is related to ME functionality: +CME ERROR: <err>
Maximum Response Time	300ms

Parameter

<idx>	Integer type; call identification number as described in 3GPP TS 22.030 sub clause 4.5.5.1; this number can be used in AT+CHLD command operations
<dir>	0 Mobile originated (MO) call 1 Mobile terminated (MT) call
<stat>	State of the call 0 Active 1 Held 2 Dialing (MO call) 3 Alerting (MO call) 4 Incoming (MT call) 5 Waiting (MT call)
<mode>	Bearer/tele service 0 Voice 1 Data 2 FAX
<empty>	0 Call is not one of multiparty (conference) call parties 1 Call is one of multiparty (conference) call parties
<number>	Phone number in string type in format specified by <type>
<type>	Type of address of octet in integer format(Refer to 3GPP TS 24.008 , sub clause 10.5.4.7 for details). Usually, it has three kinds of values: 129 Unknown type 145 International type(contains the character "+") 161 National type
<alpha>	Alphanumeric representation of <number> corresponding to the entry found in phonebook

7.16. AT+CR Service Reporting Control

AT+CR controls the module whether or not to transmit an intermediate result code **+CR: <serv>** to the TE when a call is being set up.

If it is enabled, an intermediate result code is transmitted at the point during connect negotiation at which the TA has determined which speed and quality of service will be used, before any error control or data compression reports are transmitted, and before any final result code (e.g. **CONNECT**) is transmitted.

AT+CR Service Reporting Control

Test Command	Response
AT+CR=?	+CR: (list of supported <mode> s) OK

Read Command AT+CR?	Response +CR: <mode> OK
Write Command AT+CR=<mode>	Response TA controls whether or not intermediate result code +CR: <serv> is returned from the TA to the TE when a call set up. OK
Maximum Response Time	300ms
Reference 3GPP TS 27.007	

Parameter

<mode>	0	Disable
	1	Enable
<serv>	ASYNC	Asynchronous transparent
	SYNC	Synchronous transparent
	REL ASYNC	Asynchronous non-transparent
	REL SYNC	Synchronous non-transparent
	GPRS	GPRS

7.17. AT+CRC Set Cellular Result Codes for Incoming Call Indication

AT+CRC controls whether or not to use the extended format of incoming call indication.

When it is enabled, an incoming call is indicated to the TE with unsolicited result code **+CRING: <type>** instead of the normal **RING**.

AT+CRC Set Cellular Result Codes for Incoming Call Indication

Test Command AT+CRC=?	Response +CRC: (list of supported <mode>s) OK
Read Command AT+CRC?	Response +CRC: <mode> OK
Write Command AT+CRC=<mode>	Response TA controls whether or not the extended format of incoming

	call indication is used. OK
Maximum Response Time	300ms
Reference	3GPP TS 27.007

Parameter

<mode>	<u>0</u>	Disable extended format
	1	Enable extended format
<type>	ASYNC	Asynchronous transparent
	SYNC	Synchronous transparent
	REL ASYNC	Asynchronous non-transparent
	REL SYNC	Synchronous non-transparent
	VOICE	Voice

Example

```

AT+CRC=1 //Enable extended format
OK
+CRING: VOICE //Indicate incoming call to the TE
ATH
OK
AT+CRC=0 //Disable extended format
OK
RING //Indicate incoming call to the TE
ATH
OK

```

7.18. AT+CRLP Select Radio Link Protocol Parameter

AT+CRLP write command sets radio link protocol (RLP) parameters used when non-transparent data calls are originated.

AT+CRLP Select Radio Link Protocol Parameter

Test Command	Response
AT+CRLP=?	+CRLP: (list of supported <iws> s),(list of supported <mws> s),(list of

	supported <T1>s),(list of supported <N2>s) OK
Read Command AT+CRLP?	Response +CRLP: <iws>,<mws>,<T1>,<N2> OK
Write Command AT+CRLP=[<iws>],[<mws>],[<T1>],[<N2>]]]	Response TA sets radio link protocol (RLP) parameters used when non-transparent data calls are set up. OK
Maximum Response Time	300ms
Reference 3GPP TS27.007	

Parameter

<iws>	0-61	Interworking window size (IWF to MS)
<mws>	0-61	Mobile window size (MS to IWF)
<T1>	39-48-255	Acknowledgment timer T1 in a unit of 10ms
<N2>	1-6-255	Retransmission attempts

7.19. AT+QHUP Hang up Call with a Specific Release Cause

AT+QHUP can terminate call(s) with a specific 3GPP TS 24.008 release cause specified by host (Including voice and data calls).

AT+QHUP Hang up Call with a Specific Release Cause

Test Command AT+QHUP=?	Response OK
Write Command AT+QHUP=<cause>[,<idx>]	Response OK ERROR If error is related to ME functionality: +CME ERROR: <err>

Parameter

<cause>	Release cause, 3GPP TS 24.008 release cause to be indicated to the network.
1	Release cause "unassigned (unallocated) number"

16	Release cause "normal call clearing"
17	Release cause "user busy"
18	Release cause "no user responding"
21	Release cause "call rejected"
27	Release cause "destination out of order"
31	Release cause "normal, unspecified"
88	Release cause "incompatible destination"

<idx> Call identification number is an optional index in the list of current calls indicated by **+CLCC**. **+QHUP** will terminate the call identified by the given call number. The default call number 0 is not assigned to any call, but signifies all calls.

0 Terminate all known calls. However, if circuit switches data calls and voice calls at the same time, this command only terminates the CSD calls.

1...7 Terminate the specific call with identification number.

Quectel
Confidential

8 Phonebook Commands

8.1. AT+CNUM Subscriber Number

AT+CNUM can get the subscribers own number(s) from the SIM.

AT+CNUM Subscriber Number	
Test Command AT+CNUM=?	Response OK
Execution Command AT+CNUM	Response [+CNUM: [<alpha>], <number>,<type>] [+CNUM: [<alpha>], <number>,<type>] OK ERROR If error is related to ME functionality: +CME ERROR: <err>
Maximum Response Time	300ms
Reference	3GPP 27.007

Parameter

<alpha>	Optional alphanumeric string associated with <number> ; the used character set should be the one selected with command Select TE Character Set +CSCS
<number>	String type phone number of format specified by <type>
<type>	Type of address of octet in integer format (Refer to 3GPP TS 24.008, subclause 10.5.4.7 for details). Usually, it has three kinds of values: 129 Unknown type 145 International type(contains the character "+") 161 National type

8.2. AT+CPBF Find Phonebook Entries

AT+CPBF can search the phonebook entries starting with the given **<findtext>** string from the current phonebook memory storage selected with **+CPBS**, and return all found entries sorted in alphanumeric order.

AT+CPBF Find Phonebook Entries	
Test Command AT+CPBF=?	Response +CPBF: <nlength>,<tlength> OK
Write Command AT+CPBF=<findtext>	Response [+CPBF: <index>,<number>,<type>,<text>] [...] OK ERROR If error is related to ME functionality: +CME ERROR: <err>
Maximum Response Time	Depends on the storage of phonebook entries.
Reference 3GPP 27.007	

Parameter

<nlength>	Integer type, indicates the maximum length of field <number>
<tlength>	Integer type, indicates the maximum length of field <text>
<findtext>	String type, field of maximum length <tlength> in current TE character set specified by +CSCS
<index>	Integer type, in the range of location numbers of phone book memory
<type>	Type of address of octet in integer format (Refer to 3GPP TS 24.008, subclause 10.5.4.7 for details). Usually, it has three kinds of values: 129 Unknown type 145 International type(contains the character "+") 161 National type
<text>	String type, field of maximum length <tlength> in current TE character set specified by +CSCS

8.3. AT+CPBR Read Phonebook Entries

AT+CPBR can return phonebook entries in location number range **<index1>... <index2>** from the current phonebook memory storage selected with **+CPBS**. If **<index2>** is left out, only location **<index1>** is returned.

AT+CPBR Read Phonebook Entries	
Test Command AT+CPBR=?	Response +CPBR: (list of supported <index> s), <nlength> , <tlength> OK
Write Command AT+CPBR=<index1>[,<index2>]	Response +CPBR: <index1> , <number> , <type> , <text> [+CPBR: <index2> , <number> , <type> , <text> [...]] OK ERROR If error is related to ME functionality: +CME ERROR: <err>
Maximum Response Time	Depends on the storage of phonebook entries.
Reference 3GPP 27.007	

Parameter

<index>	Integer type, in the range of location numbers of phone book memory
<nlength>	Integer type, indicates the maximum length of field <number>
<tlength>	Integer type, indicates the maximum length of field <text>
<index1>	The first phone book record to read
<index2>	The last phonebook record to read
<type>	Type of address of octet in integer format (Refer to 3GPP TS 24.008, subclause 10.5.4.7 for details). Usually, it has three kinds of values: 129 Unknown type 145 International type(contains the character "+") 161 National type
<text>	String type, field of maximum length <tlength> in current TE character set specified by +CSCS

8.4. AT+CPBS Select Phonebook Memory Storage

AT+CPBS selects phonebook memory storage, which is used by other phonebook commands. Read command returns currently selected memory, and number of used locations and total number of locations in the memory when supported by manufacturer. Test command returns supported storages as compound value.

AT+CPBS Select Phonebook Memory Storage	
Test Command AT+CPBS=?	Response +CPBS: (list of supported <storage>s) OK ERROR If error is related to ME functionality: +CME ERROR: <err>
Read Command AT+CPBS?	Response +CPBS: <storage>[,<used>,<total>] OK ERROR If error is related to ME functionality: +CME ERROR: <err>
Write Command AT+CPBS=<storage>	Response OK ERROR If error is related to ME functionality: +CME ERROR: <err>
Maximum Response Time	300ms
Reference 3GPP 27.007	

Parameter

<storage>	"SM"	SIM phonebook
	"FD"	SIM fix dialing-phone book (+CPBW operation need the authority of PIN2)
	"LD"	SIM last-dialing-phone book (read only)
	"BL"	Black list in SIM
	"ON"	SIM own numbers (MSISDNs) list
	"EC"	SIM emergency-call-codes phonebook (read only)

"SN"	Service dial number (read only)
<used>	Integer type, indicates the total number of used locations in selected memory
<total>	Integer type, indicates the total number of locations in selected memory

8.5. AT+CPBW Write Phonebook Entry

AT+CPBW writes phonebook entry in location number <index> in the current phonebook memory storage selected with +CPBS. It can also delete a phonebook entry in location number <index>.

AT+CPBW Write Phonebook Entry

Test Command AT+CPBW=?	Response +CPBW: (The range of supported <index>s), <nlength>, (list of supported <type>s), <tlength> OK ERROR If error is related to ME functionality: +CME ERROR: <err>
Write Command AT+CPBW=[<index>][,<number>][,<type>][,<text>]]	Response OK ERROR If error is related to ME functionality: +CME ERROR: <err>
Maximum Response Time	300ms
Reference	3GPP 27.007

Parameter

<index>	Integer type, in the range of location numbers of phone book memory. If <index> is not given, the first free entry will be used. If <index> is given as the only parameter, the phonebook entry specified by <location> is deleted
<nlength>	Integer type, indicates the maximum length of field <number>
<tlength>	Integer type, indicates the maximum length of field <text>
<type>	Type of address of octet in integer format (Refer to 3GPP TS 24.008, subclause 10.5.4.7 for details). Usually, it has three kinds of values: 129 Unknown type 145 International type(contains the character "+")

	161	National type
<text>	String type field of maximum length <length> in current TE character set specified by +CSCS	

Example

```
AT+CSCS="GSM"  
OK  
AT+CPBW=10,"15021012496",129,"QUECTEL"  
OK //Make a new phonebook entry at location 10  
AT+CPBW=10 //Delete entry at location 10  
OK
```

Quectel
Confidential

9 Short Message Service Commands

9.1. AT+CSMS Select Message Service

AT+CSMS selects message service **<service>** and returns the types of messages supported by the ME.

AT+CSMS Select Message Service	
Test Command AT+CSMS=?	Response +CSMS: (list of supported <service> s) OK
Read Command AT+CSMS?	Response +CSMS: <service> , <mt> , <mo> , <bm> OK
Write Command AT+CSMS=<service>	Response +CSMS: <mt> , <mo> , <bm> OK If error is related to ME functionality: +CMS ERROR: <err>
Maximum Response Time	300ms
Reference 3GPP TS 27.005	

Parameter

<service>	Type of message service
0	3GPP TS 23.040 and 3GPP TS 23.041 (the syntax of SMS AT commands is compatible with 3GPP TS 27.005 Phase 2 version 4.7.0; Phase 2+ features which do not require new command syntax may be supported, e.g. correct routing of messages with new Phase 2+ data coding schemes)
1	3GPP TS 23.040 and 3GPP TS 23.041 (the syntax of SMS AT commands is compatible with 3GPP TS 27.005 Phase 2+ version; the requirement of

	<service> setting 1 is mentioned under corresponding command description-s)
<mt>	Mobile terminated messages
	0 Type not supported
	<u>1</u> Type supported
<mo>	Mobile originated messages
	0 Type not supported
	<u>1</u> Type supported
<bm>	Broadcast type messages
	0 Type not supported
	<u>1</u> Type supported

Example

```

AT+CSMS=? //Test command
+CSMS: (0,1)

OK
AT+CSMS=1 //Set type of message service as 1
+CSMS: 1,1,1

OK
AT+CSMS? //Read command
+CSMS: 1,1,1,1

OK

```

9.2. AT+CMGF Message Format

AT+CMGF specifies the input and output format of the short messages. **<mode>** indicates the format of messages used with send, list, read and write commands and unsolicited result codes resulting from received messages.

Mode can be either PDU mode (entire TP data units used) or text mode (headers and body of the messages given as separate parameters). Text mode uses the value of parameter **<chset>** specified by command **+CSCS** to inform the character set to be used in the message body in the TA-TE interface.

AT+CMGF Message Format

Test Command	Response
AT+CMGF=?	+CMGF: (list of supported <mode>s)
	OK

Read Command AT+CMGF?	Response +CMGF: <mode> OK
Write Command AT+CMGF=<mode>	Response TA sets parameter to denote which kind of I/O format of messages is used. OK
Maximum Response Time	300ms
Reference 3GPP TS 27.005	

Parameter

<mode>	<u>0</u>	PDU mode
	1	Text mode

9.3. AT+CSCA Service Center Address

AT+CSCA write command updates the SMSC address when mobile originated SMS are transmitted. In text mode, the setting is used by write commands. In PDU mode, setting is used by the same commands, but only when the length of the SMSC address is coded into the **<pdu>** parameter which equals to zero.

AT+CSCA Service Center Address

Test Command AT+CSCA=?	Response OK
Read Command AT+CSCA?	Response +CSCA: <sca>,<tosca> OK
Write Command AT+CSCA=<sca>[,<tosca>]	Response OK If error is related to ME functionality: +CME ERROR: <err>
Maximum Response Time	300ms
Reference 3GPP TS 27.005	

Parameter

<sca>	Service center address. 3GPP TS 24.011 RP SC address Address-Value field in string format; BCD numbers (or GSM 7 bit default alphabet characters) are converted to characters of the currently selected TE character set (refer to command +CSCS in 3GPP TS 27.007); type of address is given by <tosca>
<tosca>	Type of service center address. 3GPP TS 24.011 RP SC address Type-of-Address octet in integer format (default refer to <toda>)

Example

```

AT+CSCA="+8613800210500",145 //Set SMS service center address
OK
AT+CSCA? //Query SMS service center address
+CSCA: "+8613800210500",145
OK

```

9.4. AT+CPMS Preferred Message Storage

AT+CPMS selects memory storages **<mem1>**, **<mem2>** and **<mem3>** for reading, writing, etc..

AT+CPMS Preferred Message Storage

Test Command	Response
AT+CPMS=?	+CPMS: (list of supported <mem1>s),(list of supported <mem2>s),(list of supported <mem3>s) OK
Read Command AT+CPMS?	Response +CPMS: <mem1>,<used1>,<total1>,<mem2>,<used2>,<total2>,<mem3>,<used3>,<total3> OK
Write Command AT+CPMS=<mem1>[,<mem2>[,<mem3>]]	Response TA selects memory storages <mem1> , <mem2> and <mem3> to be used for reading, writing, etc. +CPMS: <used1>,<total1>,<used2>,<total2>,<used3>,<total3> OK

	If error is related to ME functionality: +CMS ERROR: <err>
Maximum Response Time	300ms
Reference	3GPP TS 27.005

Parameter

<mem1>	Messages to be read and deleted from this memory storage "BM" Broadcast message storage <u>"SM"</u> SIM message storage "SR" Status report storage
<mem2>	Messages will be written and sent to this memory storage <u>"SM"</u> SIM message storage
<mem3>	Storage to which received SMS are preferred to be stored (unless forwarded directly to TE. Refer command New Message Indications +CNMI). Refer <mem1> for defined values. Received CBMs are always stored in "BM" (or some manufacturer specific storage) unless directly forwarded to TE. Received status reports are always stored in "SR" (or some manufacturer specific storage) unless directly forwarded to TE. "BM" Broadcast message storage <u>"SM"</u> SIM message storage "SR" Status report storage
<usedx>	Integer type, number of current messages in <memx>
<totalx>	Integer type, total number of messages which can be stored in <memx>

Example

```

AT+CPMS="SM","SM","SM" //Set SMS message storage as "SM"
+CPMS: 0,50,0,50,0,50

OK
AT+CPMS? //Query the currently SMS message storage
+CPMS: "SM",0,50,"SM",0,50,"SM",0,50

OK

```

9.5. AT+CMGD Delete Message

AT+CMGD deletes a short message from the preferred message storage **<mem1>** location **<index>**. If **<delflag>** is presented and not set to 0, then the ME shall ignore **<index>** and follow the rules of **<delflag>** shown as below.

AT+CMGD Delete Message

Test Command AT+CMGD=?	Response +CMGD: (list of supported <index> s),(list of supported <delflag> s) OK
Write Command AT+CMGD=<index>[,<delflag>]	Response TA deletes message from preferred message storage <mem1> location <index> . OK If error is related to ME functionality: +CMS ERROR:<err>
Maximum Response Time	300ms. Note: Operation of <delflag> depends on the storage of deleted messages.
Reference 3GPP TS 27.005	

Parameter

<index>	Integer type, in the range of location numbers supported by the associated memory
<delflag>	<p><u>0</u> Delete message specified in <index></p> <p>1 Delete all read messages from <mem1> storage, leaving unread messages and stored mobile originated messages (whether sent or not) untouched</p> <p>2 Delete all read messages from <mem1> storage and sent mobile originated messages, leaving unread messages and unsent mobile originated messages untouched</p> <p>3 Delete all read messages from <mem1> storage, sent and unsent mobile originated messages, leaving unread messages untouched</p> <p>4 Delete all messages from <mem1> storage</p>

Example

```

AT+CMGD=1 //Delete message specified in <index>=1
OK
AT+CMGD=1,4 //Delete all messages from <mem1> storage
OK

```

9.6. AT+CMGL List Messages

AT+CMGL write command returns messages with status value **<stat>** from preferred message storage **<mem1>** to the TE. If the status of the message is "REC UNREAD", the status in the storage changes to "REC READ". When executing command AT+CMGL without status value **<stat>**, it will report the list of SMS with "REC UNREAD" status.

AT+CMGL List Messages

Test Command

AT+CMGL=?

Response

+CMGL: (list of supported **<stat>**s)

OK

Write Command

AT+CMGL=<stat>

Response

If text mode (**+CMGF=1**) and command successful:

For SMS-SUBMITs and/or SMS-DELIVERs:

+CMGL:

<index>,**<stat>**,**<oa/da>**,**[<alpha>]**,**[<scts>]**,**[<tooa/toda>**,**<length>**]**<CR><LF><data>**[**<CR><LF>**

+CMGL:

<index>,**<stat>**,**<da/oa>**,**[<alpha>]**,**[<scts>]**,**[<tooa/toda>**,**<length>**]**<CR><LF><data>**[**...**]

For SMS-STATUS-REPORTs:

+CMGL:

<index>,**<stat>**,**<fo>**,**<mr>**,**[<ra>]**,**[<tora>]**,**<scts>**,**<dt>**,**<st>****>**[**<CR><LF>**

+CMGL:

<index>,**<stat>**,**<fo>**,**<mr>**,**[<ra>]**,**[<tora>]**,**<scts>**,**<dt>**,**<st>****>**[**...**]

For SMS-COMMANDs:

+CMGL: **<index>**,**<stat>**,**<fo>**,**<ct>**[**<CR><LF>**

+CMGL: **<index>**,**<stat>**,**<fo>**,**<ct>**[**...**]

For CBM storage:

+CMGL:

<index>,**<stat>**,**<sn>**,**<mid>**,**<page>**,**<pages>****<CR><LF><d**
ata]**<CR><LF>**

+CMGL:

<index>,**<stat>**,**<sn>**,**<mid>**,**<page>**,**<pages>****<CR><LF><d**
ata]**[...]**

OK

	<p>Else if PDU mode (+CMGF=0) and Command successful: +CMGL: <index>,<stat>,[<alpha>],<length><CR><LF><pdu><CR><LF> +CMGL: <index>,<stat>,[alpha],<length><CR><LF><pdu>[...]]</p> <p>OK</p> <p>Else if error is related to ME functionality: +CMS ERROR: <err></p>
Execution Command AT+CMGL	<p>Response</p> <p>List all messages with "REC UNREAD" status from message storage <mem1>, then status in the storage changes to "REC READ".</p>
Maximum Response Time	<p>300ms.</p> <p>Note: Operation of <stat> depends on the storage of listed messages.</p>
Reference 3GPP TS 27.005	

Parameter

<stat>	<p>In text mode:</p> <p>"REC UNREAD" Received unread messages</p> <p>"REC READ" Received read messages</p> <p>"STO UNSENT" Stored unsent messages</p> <p>"STO SENT" Stored sent messages</p> <p>"ALL" All messages</p> <p>In PDU mode:</p> <p>0 Received unread messages</p> <p>1 Received read messages</p> <p>2 Stored unsent messages</p> <p>3 Stored sent messages</p> <p>4 All messages</p>
<index>	Integer type, in the range of location numbers supported by the associated memory
<da>	Destination Address. 3GPP TS 23.040 TP-Destination-Address Address-Value field in string format; BCD numbers (or GSM 7 bit default alphabet characters) are converted to characters of the currently selected TE character set (refer to command +CSCS in 3GPP TS 27.007); type of address is given by <toda>
<oa>	Originating address. 3GPP TS 23.040 TP-Originating-Address Address-Value field in string format; BCD numbers (or GSM 7 bit default alphabet characters) are converted to characters of the currently selected TE character set (refer to command +CSCS in

	TS 27.007); type of address is given by <tooa>
<alpha>	String type alphanumeric representation of <da> or <oa> corresponding to the entry found in MT phonebook; implementation of this feature is manufacturer specified; the used character set should be the one selected with command Select TE Character Set +CSCS (see definition of this command in 3GPP TS 27.007)
<scts>	Service center time stamp. 3GPP TS 23.040 TP-Service-Centre-Time-Stamp in time-string format (refer to <dt>)
<toda>	Type of recipient address. 3GPP TS 24.011 TP-Recipient-Address Type-of-Address octet in integer format.
<tooa>	Type of originating address. 3GPP TS 24.011 TP-Originating-Address Type-of-Address octet in integer format (default refer to <toda>)
<length>	Message length, integer type, indicating in the text mode (+CMGF=1) the length of the message body <data> (or <cdata>) in characters; or in PDU mode (+CMGF=0), the length of the actual TP data unit in octets (i.e. the RP layer SMSC address octets are not counted in the length)
<data>	<p>In the case of SMS: 3GPP TS 23.040 TP-User-Data in text mode responses; format:</p> <ul style="list-style-type: none">- If <dcs>, indicates that 3GPP TS 23.038 GSM 7 bit default alphabet is used and <fo> indicates that 3GPP TS 23.040 TP-User-Data-Header-Indication is not set- If TE character set other than "HEX" (refer to command Select TE Character Set +CSCS in 3GPP TS 27.007): ME/TA converts GSM alphabet into current TE character set according to rules of Annex A- If TE character set is "HEX": ME/TA converts each 7-bit character of GSM 7 bit default alphabet into two IRA character long hexadecimal number (e.g. character II (GSM 7 bit default alphabet 23) is presented as 17 (IRA 49 and 55))- If <dcs>, indicates that 8-bit or UCS2 data coding scheme is used, or <fo> indicates that 3GPP TS 23.040 TP-User-Data-Header-Indication is set: ME/TA converts each 8-bit octet into two IRA character long hexadecimal number (e.g. octet with integer value 42 is presented to TE as two characters 2A (IRA 50 and 65)) <p>In the case of CBS: 3GPP TS 23.041 CBM Content of Message in text mode responses; format:</p> <ul style="list-style-type: none">- If <dcs>, indicates that 3GPP TS 23.038 GSM 7 bit default alphabet is used:- If TE character set other than "HEX" (refer to command +CSCS in 3GPP TS 27.007): ME/TA converts GSM alphabet into current TE character set according to rules of Annex A- If TE character set is "HEX": ME/TA converts each 7-bit character of the GSM 7 bit default alphabet into two IRA character long hexadecimal number- If <dcs>, indicates that 8-bit or UCS2 data coding scheme is used: ME/TA converts each 8-bit octet into two IRA character long hexadecimal number
<pdu>	In the case of SMS: 3GPP TS 24.011 SC address followed by 3GPP TS 23.040 TPDU in hexadecimal format: ME/TA converts each octet of TP data unit into two IRA character long hexadecimal number (e.g. octet with integer value 42 is presented to TE as two characters 2A (IRA 50 and 65))3GPP TS 27.007

Example

```

AT+CMGF=1 //Set SMS message format as text mode
OK
AT+CMGL="ALL" //List all messages from message storage
+CMGL: 1,"STO UNSENT",",",,
<This is a test from Quectel>
+CMGL: 2,"STO UNSENT",",",,
<This is a test from Quectel>
OK

```

9.7. AT+CMGR Read Message

AT+CMGR write command returns SMS message with location value **<index>** from message storage **<mem1>** to the TE. If status of the message is "REC UNREAD", status in the storage changes to "REC READ".

AT+CMGR Read Message

Test Command	Response
AT+CMGR=?	OK
Write Command AT+CMGR=<index>	<p>Response</p> <p>TA returns SMS message with location value <index> from message storage <mem1> to the TE. If status of the message is "REC UNREAD", status in the storage changes to "REC READ".</p> <p>1) If text mode (+CMGF=1) and command is executed successfully: For SMS-DELIVER: +CMGR: <stat>,<oa>,[<alpha>],[<scts>],[<tooa>,<fo>,<pid>,<dcs>,<sca>,<tosca>,<length>]<CR><LF><data></p> <p>OK</p> <p>For SMS-SUBMIT: +CMGR: <stat>,<da>,[<alpha>][,<toda>,<fo>,<pid>,<dcs>,<vp>],<sca>,<tosca>,<length>]<CR><LF><data></p>

	<p>OK</p> <p>For SMS-STATUS-REPORTs:</p> <p>+CMGR: <stat>,<fo>,<mr>,[<ra>],[<tora>],<scts>,<dt>,<st></p> <p>OK</p> <p>For SMS-COMMANDs:</p> <p>+CMGR: <stat>,<fo>,<ct>,[<pid>],[<mn>],[<da>],[<toda>],<length><CR><LF><cdata></p> <p>OK</p> <p>For CBM storage:</p> <p>+CMGR: <stat>,<sn>,<mid>,<dc>,<page>,<pages><CR><LF><data></p> <p>OK</p> <p>2) If PDU mode (+CMGF=0) and command successful: +CMGR: <stat>,[<alpha>],<length><CR><LF><pdu></p> <p>OK</p> <p>3) If error is related to ME functionality: +CMS ERROR: <err></p>
Maximum Response Time	Depends on the length of message content.
Reference 3GPP TS 27.005	

Parameter

<index>	Integer type, in the range of location numbers supported by the associated memory		
<stat>	PDU mode	Text mode	Explanation
	0	"REC UNREAD"	Received unread messages
	1	"REC READ"	Received read messages
	2	"STO UNSENT"	Stored unsent messages
	3	"STO SENT"	Stored sent messages
	4	"ALL"	All messages
<alpha>	String type alphanumeric representation of <da> or <oa> corresponding to the entry		

	found in MT phonebook; implementation of this feature is manufacturer specified; the used character set should be the one selected with command Select TE Character Set +CSCS (see definition of this command in 3GPP TS 27.007)
<da>	Destination address. 3GPP TS 23.040 TP-Destination-Address Address-Value field in string format; BCD numbers (or GSM 7 bit default alphabet characters) are converted to characters of the currently selected TE character set (refer to command +CSCS in 3GPP TS 27.007); type of address is given by <toda>
<oa>	Originating address. 3GPP TS 23.040 TP-Originating-Address Address-Value field in string format; BCD numbers (or GSM 7 bit default alphabet characters) are converted to characters of the currently selected TE character set (refer to command +CSCS in TS 27.007); type of address is given by <tooa>
<scts>	Service center time stamp. 3GPP TS 23.040 TP-Service-Centre-Time-Stamp in time-string format (refer to <dt>)
<fo>	First octet. Depending on the command or result code: First octet of 3GPP TS 23.040 SMS-DELIVER, SMS-SUBMIT (default 17), SMS-STATUS-REPORT, or SMS-COMMAND in integer format. If a valid value has been entered once, parameter can be omitted
<pid>	Protocol identifier. 3GPP TS 23.040 TP-Protocol-Identifier in integer format (default 0)
<dcs>	Data coding scheme. Depending on the command or result code: 3GPP TS 23.038 SMS Data Coding Scheme (default 0), or Cell Broadcast Data Coding Scheme in integer format
<vp>	Validity period. Depending on SMS-SUBMIT <fo> setting: 3GPP TS 23.040 TP-Validity-Period either in integer format or in time-string format (refer to <dt>)
<mn>	Message number. 3GPP TS 23.040 TP-Message-Number in integer format
<mr>	Message reference. 3GPP TS 23.040 TP-Message-Reference in integer format
<ra>	Recipient address. 3GPP TS 23.040 TP-Recipient-Address Address-Value field in string format; BCD numbers (or GSM default alphabet characters) are converted to characters of the currently selected TE character set (refer to command AT+CSCS.); type of address given by <tora>
<tora>	Type of recipient address. 3GPP TS 24.011 TP-Recipient-Address Type-of-Address octet in integer format (default refer <toda>)
<toda>	Type of recipient address. 3GPP TS 24.011 TP-Recipient-Address Type-of-Address octet in integer format
<tooa>	Type of originating address.3GPP TS 24.011 TP-Originating-Address Type-of-Address octet in integer format (default refer to <toda>)
<sca>	Service center address. 3GPP TS 24.011 RP SC address Address-Value field in string format; BCD numbers (or GSM 7 bit default alphabet characters) are converted to characters of the currently selected TE character set (refer to command +CSCS in 3GPP TS 27.007); type of address is given by <tosca>
<tosca>	Type of service center address. 3GPP TS 24.011 RP SC address Type-of-Address octet in integer format (default refer to <toda>)
<length>	Message length, integer type, indicating in the text mode (+CMGF=1) the length of the message body <data> (or <cdata>) in characters; or in PDU mode (+CMGF=0), the

length of the actual TP data unit in octets (i.e. the RP layer SMSC address octets are not counted in the length)

<data>

In the case of SMS: 3GPP TS 23.040 TP-User-Data in text mode responses; format:

- If **<dcs>**, indicates that 3GPP TS 23.038 GSM 7 bit default alphabet is used and **<fo>** indicates that 3GPP TS 23.040 TP-User-Data-Header-Indication is not set:
- If TE character set other than "HEX" (refer to command Select TE Character Set +CSCS in 3GPP TS 27.007): ME/TA converts GSM alphabet into current TE character set according to rules of Annex A
- If TE character set is "HEX": ME/TA converts each 7-bit character of GSM 7 bit default alphabet into two IRA character long hexadecimal number (e.g. character II (GSM 7 bit default alphabet 23) is presented as 17 (IRA 49 and 55))
- If **<dcs>**, indicates that 8-bit or UCS2 data coding scheme is used, or **<fo>** indicates that 3GPP TS 23.040 TP-User-Data-Header-Indication is set: ME/TA converts each 8-bit octet into two IRA character long hexadecimal number (e.g. octet with integer value 42 is presented to TE as two characters 2A (IRA 50 and 65))

In the case of CBS: 3GPP TS 23.041 CBM Content of Message in text mode responses; format:

- If **<dcs>**, indicates that 3GPP TS 23.038 GSM 7 bit default alphabet is used:
- If TE character set other than "HEX" (refer command +CSCS in 3GPP TS 27.007): ME/TA converts GSM alphabet into current TE character set according rules of Annex A
- If TE character set is "HEX": ME/TA converts each 7-bit character of the GSM 7 bit default alphabet into two IRA character long hexadecimal number
- If **<dcs>**, indicates that 8-bit or UCS2 data coding scheme is used: ME/TA converts each 8-bit octet into two IRA character long hexadecimal number

<pdu>

In the case of SMS: 3GPP TS 24.011 SC address followed by 3GPP TS 23.040 TPDU in hexadecimal format: ME/TA converts each octet of TP data unit into two IRA character long hexadecimal number (e.g. octet with integer value 42 is presented to TE as two characters 2A (IRA 50 and 65))3GPP TS 27.007

Example

```
+CMTI: "SM",3 //Indicates that new message has been received and saved
                to <index>=3 of "SM"
AT+CSDH=1
OK
AT+CMGR=3 //Read message
+CMGR: "REC UNREAD","+8615021012496",,"2014/02/13 15:06:37+32",145,4,0,0,"+8
613800210500",145,27
<This is a test from Quectel>
OK
```


9.8. AT+CMGS Send Message

AT+CMGS write command sends a short message from TE to network (SMS-SUBMIT). After invoking the write command, wait for the prompt ">" and then start to write the message. Then enter <CTRL-Z> to indicate the ending of PDU and begin to send the message. Sending can be cancelled by giving <ESC> character. Abortion is acknowledged with "OK", though the message will not be sent. The message reference <mr> is returned to the TE on successful message delivery. The value can be used to identify message upon unsolicited delivery status report result code.

AT+CMGS Send Message

Test Command AT+CMGS=?	Response OK
Write Command 1) If text mode (+CMGF=1): AT+CMGS=<da>[,<toda>]<CR> text is entered <ctrl-Z/ESC> ESC quits without sending 2) If PDU mode (+CMGF=0): AT+CMGS=<length><CR> PDU is given <ctrl-Z/ESC>	Response TA sends message from a TE to the network (SMS-SUBMIT). Message reference value <mr> is returned to the TE on successful message delivery. Optionally (when +CSMS <service> value is 1 and network supports) <scts> is returned. Values can be used to identify message upon unsolicited delivery status report result code. If text mode (+CMGF=1) and sent successfully: +CMGS: <mr> OK If PDU mode (+CMGF=0) and sent successfully: +CMGS: <mr> OK If error is related to ME functionality: +CMS ERROR: <err>
Maximum Response Time	120s, determined by network.
Reference 3GPP TS 27.005	

Parameter

<da>	Destination address. 3GPP TS 23.040 TP-Destination-Address Address-Value field in string format; BCD numbers (or GSM 7 bit default alphabet characters) are converted to characters of the currently selected TE character set (refer to command +CSCS in 3GPP TS 27.007); type of address is given by <toda>
<toda>	Type of recipient address. 3GPP TS 24.011 TP-Recipient-Address Type-of-Address

	octet in integer format
<length>	Message length. Integer type, indicating in the text mode (+CMGF=1) the length of the message body <data> (or <cdata>) in characters; or in PDU mode (+CMGF=0), the length of the actual TP data unit in octets (i.e. the RP layer SMSC address octets are not counted in the length)
<mr>	Message reference. 3GPP TS 23.040 TP-Message-Reference in integer format

Example

```

AT+CMGF=1 //Set SMS message format as text mode
OK
AT+CSCS="GSM" //Set character set as GSM which is used by the TE
OK
AT+CMGS="15021012496"
> <This is a test from Quectel> //Enter in text, <CTRL+Z> send message,
+CMGS: 247
OK

AT+CMGF=1 //Set SMS message format as text mode
OK
AT+CSCS="GSM" //Set character set as GSM which is used by the TE
OK
AT+CMGS="15021012496"
> <This is a test from Quectel> //Enter in text, <ESC> quits without sending
OK

```

9.9. AT+CMMS More Messages to Send

AT+CMMS controls the continuity of the SMS relay protocol link. If the feature is enabled (and supported by the currently used network) multiple messages can be sent faster as the link is kept open.

AT+CMMS More Messages to Send

Test Command AT+CMMS=?	Response +CMMS: (list of supported<n>s) OK
Read Command AT+CMMS?	Response +CMMS: <n> OK

Write Command AT+CMMS=<n>	Response OK ERROR If error is related to ME functionality: +CMS ERROR: <err>
Maximum Response Time	120s, determined by network.
Reference 3GPP TS 27.005	

Parameter

<n> <u>0</u>	Feature disabled
1	Keep enabled until the time between the response of the latest message send command (+CMGS , +CMSS , etc.) and the next send command exceeds 1-5 seconds (the exact value is up to ME implementation), then ME shall close the link and TA switches <n> back to 0 automatically
2	Enable (if the time between the response of the latest message send command and the next send command exceeds 1-5 seconds (the exact value is up to ME implementation), ME shall close the link but TA will not switch <n> back to 0 automatically)

9.10. AT+CMGW Write Message to Memory

AT+CMGW write and execution commands store a short message from TE to memory storage **<mem2>**. Memory location **<index>** of the stored message is returned. Message status will be set to "stored unsent" by default, but parameter **<stat>** also allows other status values to be given.

The syntax of input text is same as the one specified in the write command **+CMGS**.

AT+CMGW Write Message to Memory

Test Command AT+CMGW=?	Response OK
Write Command 1) If text mode (+CMGF=1): AT+CMGW=<oa/da>[,<toa/toda>[,<stat>]] <CR> text is entered <ctrl-Z/ESC> <ESC> quits without sending	Response TA transmits SMS message (either SMS-DELIVER or SMS-SUBMIT) from TE to memory storage <mem2> . Memory location <index> of the stored message is returned. By default message status will be set to 'stored unsent', but parameter <stat> also allows other status values to be given. If writing is successful:

2) If PDU mode (+CMGF=0): AT+CMGW=<length>[,<stat>]<CR> PDU is given <ctrl-Z/ESC>	+CMGW: <index> OK If error is related to ME functionality: +CMS ERROR: <err>
Maximum Response Time	300ms
Reference 3GPP TS 27.005	

Parameter

<da>	Destination address. 3GPP TS 23.040 TP-Destination-Address Address-Value field in string format; BCD numbers (or GSM 7 bit default alphabet characters) are converted to characters of the currently selected TE character set (refer to command +CSCS in 3GPP TS 27.007); type of address is given by <toda>		
<oa>	Originating address. 3GPP TS 23.040 TP-Originating-Address Address-Value field in string format; BCD numbers (or GSM 7 bit default alphabet characters) are converted to characters of the currently selected TE character set (refer to command +CSCS in TS 27.007); type of address given by <tooa>		
<tooa>	Type of originating address. 3GPP TS 24.011 TP-Originating-Address Type-of-Address octet in integer format (default refer to <toda>)		
<stat>	PDU mode	Text mode	Explanation
	0	"REC UNREAD"	Received unread messages
	1	"REC READ"	Received read messages
	2	"STO UNSENT"	Stored unsent messages
	3	"STO SENT"	Stored sent messages
	4	"ALL"	All messages
<toda>	Type of recipient address. 3GPP TS 24.011 TP-Recipient-Address Type-of-Address octet in integer format		
<length>	Message length. Integer type, indicating in the text mode (+CMGF=1) the length of the message body <data> (or <cdata>) in characters; or in PDU mode (+CMGF=0), the length of the actual TP data unit in octets (i.e. the RP layer SMSC address octets are not counted in the length)		
<pdu>	In the case of SMS: 3GPP TS 24.011 SC address followed by 3GPP TS 23.04TPDU in hexadecimal format: ME/TA converts each octet of TP data unit into two IRA character long hexadecimal number (e.g. octet with integer value 42 is presented to TE as two characters 2A (IRA 50 and 65))		
<index>	Index of message in selected storage <mem2>		

Example

```

AT+CMGF=1 //Set SMS message format as text mode
OK
AT+CSCS="GSM" //Set character set as GSM which is used by the TE
OK
AT+CMGW="15021012496"
> <This is a test from Quectel> //Enter in text, <CTRL+Z> write message
+CMGW: 4

OK
AT+CMGF=0 //Set SMS message format as PDU mode
OK
AT+CMGW=18
> 0051FF00000008000A0500030002016D4B8BD5
+CMGW: 5

OK

AT+CMGF=1 //Set SMS message format as text mode
OK
AT+CSCS="GSM" //Set character set as GSM which is used by the TE
OK
AT+CMGW="15021012496"
> <This is a test from Quectel> //Enter in text, <ESC> quits without sending
+CMGW: 4

OK

```

9.11. AT+CNMA New Message Acknowledgement to UE/TE

AT+CNMA write and execute command confirms successful receipt of a new message (SMS-DELIVER or SMS-STATUS-REPORT) routed directly to the TE. If the UE does not receive acknowledgement within the required time (net-work timeout), it will send a "RP-ERROR" message to the network. The UE will automatically disable rout to the TE by setting both <mt> and <ds> values of AT+CNMI to 0.

AT+CNMA New Message Acknowledgement to UE/TE

Test Command
AT+CNMA=?

Response
+CNMA: (list of supported <n>s)

OK

Execution Command

Response

AT+CNMA	OK ERROR If error is related to ME functionality: +CMS ERROR: <err>
Write Command AT+CNMA=<n>	Response OK ERROR If error is related to ME functionality: +CMS ERROR: <err>
Maximum Response Time	300ms
Reference 3GPP TS 27.005	

Parameter

<n>	Parameter required only for PDU mode
0	Command operates similarly as in text mode
1	Send positive (RP-ACK) acknowledgement to the network. Accepted only in PDU mode
2	Send negative (RP-ERROR) acknowledgement to the network. Accepted only in PDU mode

NOTE

Execute and write command shall only be used when AT+CSMS parameter **<service>** equals to 1 (phase 2+) and an appropriate URC has been issued by the module, i.e.:

+CMT for **<mt>=2** incoming message classes 0,1,3 and none;

+CMT for **<mt>=3** incoming message classes 0 and 3;

+CDS for **<ds>=1**.

Example

```

AT+CSMS=1
OK
AT+CNMI=1,2,0,0,0
OK

+CMT: "+8615021012496",,"13/12/03,17:07:21+32",145,4,0,0,"+8613800551500",145,28
This is a test from Quectel. //Short message is outputted directly when SMS is incoming.
AT+CNMA //Send ACK to the network
OK
AT+ CNMA
+CMS ERROR: 340 //The second time returns error, it needs ACK only once
    
```

9.12. AT+CNMI SMS Event Reporting Configuration

AT+CNMI write command selects the procedure, how the received new messages from the network are indicated to the TE when TE is active, e.g. DTR signal is ON. If TE is inactive (e.g. DTR signal is OFF), message receiving should be done as specified in 3GPP TS 23.038.

AT+CNMI SMS Event Reporting Configuration

Test Command AT+CNMI=?	Response +CNMI: (list of supported <mode>s),(list of supported <mt>s),(list of supported <bm>s),(list of supported <ds>s),(list of supported <bfr>s) OK
Read Command AT+CNMI?	Response +CNMI: <mode>,<mt>,<bm>,<ds>,<bfr> OK
Write Command AT+CNMI=<mode>[,<mt>[,<bm>[,<ds>[,<bfr>]]]]	Response TA selects the procedure on how the received new messages from the network are indicated to the TE when TE is active, e.g. DTR signal is ON. If TE is inactive (e.g. DTR signal is OFF), receiving message should be done as specified in 3GPP TS 23.038. OK ERROR If error is related to ME functionality: +CMS ERROR: <err>
Maximum Response Time	300ms
Reference 3GPP TS 27.005	

Parameter

<mode>	0	Buffer unsolicited result codes in the TA. If TA result code buffer is full, indications can be buffered in some other place or the oldest indications may be discarded and replaced with the new received indications
	1	Discard indication and reject new received message unsolicited result codes when TA-TE link is reserved (e.g. in on-line data mode). Otherwise forward them directly to the TE
	<u>2</u>	Buffer unsolicited result codes in the TA when TA-TE link is reserved (e.g. in

on-line data mode) and flush them to the TE after reservation. Otherwise forward them directly to the TE

- <mt>** The rules for storing received SMSs depend on its data coding scheme (refer to 3G PPTS 23.038), preferred memory storage (+CPMS) setting and the value is:
- 0 No SMS-DELIVER indications are routed to the TE
 - 1 If SMS-DELIVER is stored into ME/TA, indication of the memory location is routed to the TE by using unsolicited result code: **+CMTI: <mem>,<index>**
 - 2 SMS-DELIVERs (except class 2) are routed directly to the TE using unsolicited result code: **+CMT: [*<alpha>*],<length><CR><LF><pdu>** (PDU mode enabled) or **+CMT:<oa>,<alpha>,<scts>[,<tooa>,<fo>,<pid>,<dcs>,<sca>,<tosca>,<length>]<CR><LF><data>** (Text mode enabled; about parameters in italics, refer to Command Show Text Mode Parameters **+CSDH**). Class 2 messages result in indication as defined in **<mt>=1**
 - 3 Class 3 SMS-DELIVERs are routed directly to TE by using unsolicited result codes defined in **<mt>=2**. Messages of other classes result in indication as defined in **<mt>=1**
- <bm>** The rules for storing received CBMs depend on its data coding scheme (refer to 3 GPP TS 23.038), the setting of Select CBM Types (**+CSCB**) and the value is:
- 0 No CBM indications are routed to the TE
 - 1 If CBM is stored into ME/TA, indication of the memory location is routed to the TE using unsolicited result code:
+CBMI: <mem>,<index>
 - 2 New CBMs are routed directly to the TE using unsolicited result code:
+CBM: <length><CR><LF><pdu> (PDU mode)
+CBM: <sn>,<mid>,<dcs>,<page>,<pages><CR><LF><data> (text mode)
 - 3 Class 3 CBMs are routed directly to TE using unsolicited result codes defined in **<bm>=2**. If CBM storage is supported, messages of other classes result in indication as defined in **<bm>=1**.
- <ds>**
- 0 No SMS-STATUS-REPORTs are routed to the TE
 - 1 SMS-STATUS-REPORTs are routed to the TE using unsolicited result code:
+CDS: <length><CR><LF><pdu> (PDU mode)
+CDS: <fo>,<mr>,<ra>,<tora>,<scts>,<st> (text mode)
 - 2 If SMS-STATUS-REPORT is stored into ME/TA, indication of the memory location is routed to the TE using unsolicited result code:
+CDSI:<mem>,<index>
- <bfr>**
- 0 TA buffer of unsolicited result codes defined within this command is flushed to the TE when **<mode>** 1...2 is entered ("OK" response shall be given before flushing the codes)
 - 1 TA buffer of unsolicited result codes defined within this command is cleared when **<mode>** 1...2 is entered

NOTE

Unsolicited result code:

+CMTI: <mem>,<index>	Indicates that new message has been received
+CMT: [<alpha>],<length><CR><LF><pdu>	Short message is outputted directly
+CBM: <length><CR><LF><pdu>	Cell broadcast message is outputted directly
+CBMI: <mem>,<index>	Cell broadcast message is stored and routed to the TE

Example

```

AT+CMGF=1 //Set SMS message format as text mode
OK
AT+CSCS="GSM" //Set character set as GSM which is used by the TE
OK
AT+CNMI=1,2,0,1,0 //Set SMS-DELIVERs are routed directly to the TE
OK

+CMT: "+8615021012496",,"2014/03/18 17:07:21+32"
This is a test from Quectel. //Short message is outputted directly when SMS is incoming.
    
```

9.13. AT+CSCB Select Cell Broadcast Message Types

AT+CSCB write command selects which types of CBMs are to be received by the ME. The command writes the parameters in non-volatile memory.

AT+CSCB Select Cell Broadcast Message Types

Test Command AT+CSCB=?	Response It returns supported modes as a compound value. +CSCB: (list of supported <mode>s) OK
Read Command AT+CSCB?	Response +CSCB: <mode>,<mids>,<dcss> OK
Write Command AT+CSCB=<mode>[,mids][,<dcss>]	Response TA selects which types of CBMs are to be received by the ME. OK If error is related to ME functionality: +CMS ERROR: <err>

Maximum Response Time	300ms
Reference	3GPP TS 27.005

Parameter

<mode>	<u>0</u>	Message types specified in <mids> and <dcss> are accepted
	1	Message types specified in <mids> and <dcss> are not accepted
<mids>		String type, all different possible combinations of CBM message identifiers (refer to <mid>) (default is empty string), e.g. "0,1,5,320-478,922"
<dcss>		String type, all different possible combinations of CBM data coding schemes (refer to <dcs>) (default is empty string), e.g. "0-3,5"

9.14. AT+CSDH Show SMS Text Mode Parameters

AT+CSDH write command controls whether or not detailed header information is shown in text mode result codes.

AT+CSDH Show SMS Text Mode Parameters	
Test Command AT+CSDH=?	Response +CSDH: (list of supported <show> s) OK
Read Command AT+CSDH?	Response +CSDH: <show> OK
Write Command AT+CSDH=<show>	Response OK ERROR
Maximum Response Time	300ms
Reference	3GPP TS 27.005

Parameter

<show>	<u>0</u>	Do not show header values defined in commands +CSCA and +CSMP (<sca> , <tosca> , <fo> , <vp> , <pid> and <dcs>) nor <length> , <toda> or <tooa> in +CMT , +CMGL , +CMGR result codes for SMS-DELIVERs and SMS-SUBMITs in
---------------------	----------	--

1 text mode
Show the values in result codes

Example

```
AT+CSDH=0
OK
AT+CMGR=2
+CMGR: "STO UNSENT","",
<This is a test from Quectel>

OK
AT+CSDH=1
OK
AT+CMGR=2
+CMGR: "STO UNSENT","",128,17,0,0,143,"+8613800551500",145,18
<This is a test from Quectel>

OK
```

9.15. AT+CSMP Set SMS Text Mode Parameters

AT+CSMP is used to set values for additional parameters needed when a short message is sent to the network or placed in a storage in text mode.

AT+CSMP Set SMS Text Mode Parameters

Test Command	Response
AT+CSMP=?	OK
Read Command AT+CSMP?	Response +CSMP: <fo>,<vp>,<pid>,<dcs> OK
Write Command AT+CSMP=[<fo>,<vp>,<pid>,<dcs>]]]	Response TA selects values for additional parameters needed when SM is sent to the network or placed in a storage when text mode is selected (+CMGF=1). It is possible to set the validity period starting from when the SM is received by the SMSC (<vp> is in range 0... 255) or define the absolute time of the validity period termination (<vp> is a string). OK

Maximum Response Time	300ms
Reference	3GPP TS 27.005

Parameter

<fo>	First octet. Depending on the command or result code: First octet of 3GPP TS 23.040 SMS-DELIVER, SMS-SUBMIT (default 17), SMS-STATUS-REPORT and SMS-COMMAND in integer format. If a valid value has been entered once, parameter can be omitted
<vp>	Validity period. Depending on SMS-SUBMIT <fo> setting: 3GPP TS 23.040 TP-Validity-Period either in integer format or in time-string format (refer to <dt>)
<pid>	Protocol identifier. 3GPP TS 23.040 TP-Protocol-Identifier in integer format (default 0).
<dc>	Data coding scheme. Depending on the command or result code: 3GPP TS 23.038 SMS Data Coding Scheme (default 0), or Cell Broadcast Data Coding Scheme in integer format

Quectel
Confidential

10 Packet Domain Commands

10.1. AT+CGATT Attachment or Detachment of PS

The AT+CGATT write command is used to attach the MT to, or detach the MT from the packet domain service. After the command has completed, the MT remains in V.25ter command state. If the MT is already in the requested state, the command is ignored and the **OK** response will be returned. If the requested state cannot be achieved, an **ERROR** or **+CME ERROR** response is returned.

AT+CGATT Attachment or Detachment of PS

Test Command AT+CGATT=?	Response +CGATT: (list of supported <state>s) OK
Read Command AT+CGATT?	Response +CGATT: <state> OK
Write Command AT+CGATT=<state>	Response OK If error is related to ME functionality: +CME ERROR: <err>
Maximum Response Time	75s, determined by network.
Reference 3GPP TS 27.007	

Parameter

<state>	Indicates the state of PS attachment
0	Detached
1	Attached
	Other values are reserved and will result in an ERROR response to the Write Command

Example

```

AT+CGATT=1 //Attach to PS service
OK
AT+CGATT=0 //Detach from PS service
OK
AT+CGATT? //Query the current PS service state
+CGATT: 0
OK
    
```

10.2. AT+CGDCONT Define PDP Context

AT+CGDCONT specifies PDP context parameters for a specific context **<cid>**. A special form of the write command (AT+CGDCONT=**<cid>**) causes the values for context **<cid>** to become undefined. It is not allowed to change the definition of an already activated context.

The AT+CGDCONT read command returns the current settings for each defined PDP context.

AT+CGDCONT Define PDP Context

Test Command AT+CGDCONT=?	Response +CGDCONT: (range of supported <cid> s), <PDP_type> , <APN> , <PDP_addr> , (list of supported <data_comp> s), (list of supported <head_comp> s) OK
Read Command AT+CGDCONT?	Response +CGDCONT: [<cid> , <PDP_type> , <APN> , <PDP_addr> , <data_comp> , <head_comp>] [...] OK
Write Command AT+CGDCONT= <cid> [, <PDP_type>],[<APN>],[<PDP_addr>],[<data_comp>],[<head_comp>]]]]	Response OK ERROR
Maximum Response Time	300ms
Reference 3GPP TS 27.007	

Parameter

<cid>	PDP context identifier, a numeric parameter which specifies a particular PDP context definition. The parameter is local to the TE-MT interface and is used in other PDP context-related commands. The range of permitted values (minimum value=1) is returned by the test form of the command
<PDP_type>	Packet data protocol type, a string parameter which specifies the type of packet data protocol "IP" IPV4 "IPV6" "IPV4V6"
<APN>	Access point name, a string parameter that is a logical name that is used to select the GGSN or the external packet data network. If the value is null or omitted, then the subscription value will be requested
<PDP_addr>	A string parameter identifies the MT in the address space applicable to the PDP. If the value is null or omitted, then a value may be provided by the TE during the PDP startup procedure or, failing that, a dynamic address will be requested. The allocated address may be read using the +CGPADDR command
<data_comp>	A numeric parameter that controls PDP data compression (applicable for SNDCP only) (refer to 3GPP TS 44.065) <u>0</u> Off (default if value is omitted) 1 On (manufacturer preferred compression) 2 V.42bis
<head_comp>	A numeric parameter that controls PDP header compression (refer to 3GPP TS 44.065 and 3GPP TS 25.323) <u>0</u> Off 1 On 2 RFC1144 3 RFC2507 4 RFC3095 3 RFC2507

10.3. AT+CGQREQ Quality of Service Profile (Requested)

AT+CGQREQ allows the TE to specify a quality of service profile that is used when the MT activates a PDP context.

The write command specifies a profile for the context **<cid>**. A special form of the write command, AT+CGQREQ=**<cid>** causes the requested profile for context number **<cid>** to become undefined. The read command returns the current settings for each defined context. Details can be found in 3GPP TS 23.107 and all of parameters save in NV automatically.

AT+CGQREQ Quality of Service Profile (Requested)	
Test Command AT+CGQREQ=?	<p>Response</p> <p>+CGQREQ: <PDP_type>, (list of supported <precedence>s), (list of supported <delay>s), (list of supported <reliability>s), (list of supported <peak>s), (list of supported <mean>s)</p> <p>OK</p>
Read Command AT+CGQREQ?	<p>Response</p> <p>[+CGQREQ: <cid>,<precedence>,<delay>,>reliability>,<peak>,<mean>] >] [+CGQREQ: <cid>,<precedence>,<delay>,<reliability>,<peak>,<mean>] >] [...]</p> <p>OK</p>
Write Command AT+CGQREQ=<cid>[,<precedence>[,<delay>[,<reliability>[,<peak>[,<mean>]]]]]	<p>Response</p> <p>OK</p> <p>If error is related to ME functionality: +CME ERROR: <err></p>
Maximum Response Time	300ms
Reference	3GPP TS 27.007

Parameter

<cid>	A numeric parameter which specifies a particular PDP context definition (see +CGDCONT command)
<precedence>	<p>A numeric parameter which specifies the precedence class</p> <p><u>0</u> Network subscribed value</p> <p>1 High priority. Service commitments shall be maintained ahead of precedence classes 2 and 3</p> <p>2 Normal priority. Service commitments shall be maintained ahead of precedence class 3</p> <p>3 Low priority. Service commitments shall be maintained</p>
<delay>	A numeric parameter which specifies the delay class. This parameter defines the end-to-end transfer delay incurred in the transmission of SDUs through the network.

For the detail please refer to Table 5: Delay Class

	<u>0</u>	Network subscribed value
<reliability>		A numeric parameter which specifies the reliability class
	<u>0</u>	Network subscribed value
	1	Non real-time traffic, error-sensitive application that cannot cope with data loss
	2	Non real-time traffic, error-sensitive application that can cope with infrequent data loss
	3	Non real-time traffic, error-sensitive application that can cope with data loss, GMM/SM, and SMS
	4	Real-time traffic, error-sensitive application that can cope with data loss
	5	Real-time traffic, error non-sensitive application that can cope with data loss
<peak>		A numeric parameter which specifies the peak throughput class, in octets per second.
	<u>0</u>	Network subscribed value
	1	Up to 1 000 (8 kbit/s)
	2	Up to 2 000 (16 kbit/s)
	3	Up to 4 000 (32 kbit/s)
	4	Up to 8 000 (64 kbit/s)
	5	Up to 16 000 (128 kbit/s)
	6	Up to 32 000 (256 kbit/s)
	7	Up to 64 000 (512 kbit/s)
	8	Up to 128 000 (1024 kbit/s)
	9	Up to 256 000 (2048 kbit/s)
<mean>		A numeric parameter which specifies the mean throughput class, in octets per hour
	<u>0</u>	Network subscribed value
	1	100 (~0.22 bit/s)
	2	200 (~0.44 bit/s)
	3	500 (~1.11 bit/s)
	4	1 000 (~2.2 bit/s)
	5	2 000 (~4.4 bit/s)
	6	5 000 (~11.1 bit/s)
	7	10 000 (~22 bit/s)
	8	20 000 (~44 bit/s)
	9	50 000 (~111 bit/s)
	10	100 000 (~0.22 kbit/s)
	11	200 000 (~0.44 kbit/s)
	12	500 000 (~1.11 kbit/s)
	13	1000 000 (~2.2 kbit/s)
	14	2 000 000 (~4.4 kbit/s)
	15	5 000 000 (~11.1 kbit/s)
	16	10 000 000 (~22 kbit/s)
	17	20 000 000 (~44 kbit/s)
	18	50 000 000 (~111 kbit/s)
	31	Best effort

Table 4: Delay Class

SDU Size	Delay Class	Mean Transfer Delay	95 Percentile
128 Octets	1 (Predictive)	<0.5	<1.5
	2 (Predictive)	<5	<25
	3 (Predictive)	<50	<250
	4 (Best Effort)	Unspecified	-
1024 Octets	1 (Predictive)	<0.5	<1.5
	2 (Predictive)	<5	<25
	3 (Predictive)	<50	<250
	4 (Best Effort)	Unspecified	-

10.4. AT+CGQMIN Quality of Service Profile (Minimum Acceptable)

AT+CGQMIN allows the TE to specify a minimum acceptable profile which is checked by the MT against the negotiated profile when the PDP context is activated. The write command specifies a profile for the context identified by the context identification parameter **<cid>**.

A special form of the write command, AT+CGQMIN=**<cid>** causes the minimum acceptable profile for context number **<cid>** to become undefined. In this case no check is made against the negotiated profile. The read command returns the current settings for each defined context. Details can be found in 3GPP TS 23.107 and all of parameters save in NV automatically.

AT+CGQMIN Quality of Service Profile (Minimum Acceptable)

Test Command
AT+CGQMIN=?

Response
+CGQMIN: <PDP_type>,
(list of supported <precedence>s),
(list of supported <delay>s),
(list of supported <reliability>s),
(list of supported <peak>s),
(list of supported <mean>s)

OK

Read Command
AT+CGQMIN?

Response
[+CGQMIN:

	<pre><cid>,<precedence>,<delay>,<reliability>,<peak>,<mean>] [+CGQMIN: <cid>,<precedence>,<delay>,<reliability>,<peak>,<mean>] [...]</pre> <p>OK</p>
<p>Write Command AT+CGQMIN=<cid>[,<precedence>[,<delay>[,<reliability>[,<peak>[,<mean>]]]]]</p>	<p>Response OK</p> <p>If error is related to ME functionality: +CME ERROR: <err></p>
Maximum Response Time	300ms
Reference 3GPP TS 27.007	

Parameter

<cid>	A numeric parameter which specifies a particular PDP context definition (see +CGDCONT command)
<precedence>	<p>A numeric parameter which specifies the precedence class</p> <p><u>0</u> Network subscribed value</p> <p>1 High priority. Service commitments shall be maintained ahead of precedence classes 2 and 3</p> <p>2 Normal priority. Service commitments shall be maintained ahead of precedence class 3</p> <p>3 Low priority. Service commitments shall be maintained</p>
<delay>	<p>A numeric parameter which specifies the delay class. This parameter defines the end-to-end transfer delay incurred in the transmission of SDUs through the network</p> <p>For the detail please refer Table 4: Delay Class</p> <p><u>0</u> Network subscribed value</p>
<reliability>	<p>A numeric parameter which specifies the reliability class</p> <p><u>0</u> Network subscribed value</p> <p>1 Non real-time traffic, error-sensitive application that cannot cope with data loss</p> <p>2 Non real-time traffic, error-sensitive application that can cope with infrequent data loss</p> <p>3 Non real-time traffic, error-sensitive application that can cope with data loss, GMM/SM, and SMS</p> <p>4 Real-time traffic, error-sensitive application that can cope with data loss</p> <p>5 Real-time traffic, error non-sensitive application that can cope with data</p>

	loss
<peak>	A numeric parameter which specifies the peak throughput class, in octets per second
0	Network subscribed value
1	Up to 1 000 (8 kbit/s)
2	Up to 2 000 (16 kbit/s)
3	Up to 4 000 (32 kbit/s)
4	Up to 8 000 (64 kbit/s)
5	Up to 16 000 (128 kbit/s)
6	Up to 32 000 (256 kbit/s)
7	Up to 64 000 (512 kbit/s)
8	Up to 128 000 (1024 kbit/s)
9	Up to 256 000 (2048 kbit/s)
<mean>	A numeric parameter which specifies the mean throughput class, in octets per hour
0	Network subscribed value
1	100 (~0.22 bit/s)
2	200 (~0.44 bit/s)
3	500 (~1.11 bit/s)
4	1 000 (~2.2 bit/s)
5	2 000 (~4.4 bit/s)
6	5 000 (~11.1 bit/s)
7	10 000 (~22 bit/s)
8	20 000 (~44 bit/s)
9	50 000 (~111 bit/s)
10	100 000 (~0.22 kbit/s)
11	200 000 (~0.44 kbit/s)
12	500 000 (~1.11 kbit/s)
13	1000 000 (~2.2 kbit/s)
14	2 000 000 (~4.4 kbit/s)
15	5 000 000 (~11.1 kbit/s)
16	10 000 000 (~22 kbit/s)
17	20 000 000 (~44 kbit/s)
18	50 000 000 (~111 kbit/s)
31	Best effort

10.5. AT+CGEQREQ 3G Quality of Service Profile (Requested)

AT+CGEQREQ allows the TE to specify a UMTS Quality of Service Profile that is used when the MT activates a PDP context. Details can be found in 3GPP TS 23.107 and all of parameters save in NV automatically.

AT+CGEQREQ 3G Quality of Service Profile (Requested)

Test Command
AT+CGEQREQ=?

Response
+CGEQREQ: <PDP_type>,
(list of supported <Traffic class>s),
(list of supported <Maximum bitrate UL>s),
(list of supported <Maximum bitrate DL>s),
(list of supported <Guaranteed bitrate UL>s),
(list of supported <Guaranteed bitrate DL>s),
(list of supported <Delivery order>s),
(list of supported <Maximum SDU size>s),
(list of supported <SDU error ratio>s),
(list of supported <Residual bit error ratio>s),
(list of supported <Delivery of erroneous SDUs>s),
(list of supported <Transfer delay>s),
(list of supported <Traffic handling priority>s),
(list of supported <Source statistics descriptor>s),
(list of supported <Signalling indication>s)

OK

Read Command
AT+CGEQREQ?

Response
[+CGEQREQ: <cid>,
<Traffic class>,
<Maximum bitrate UL>,
<Maximum bitrate DL>,
<Guaranteed bitrate UL>,
<Guaranteed bitrate DL>,
<Delivery order>,
<Maximum SDU size>,
<SDU error ratio>,
<Residual bit error ratio>,
<Delivery of erroneous SDUs>,
<Transfer delay>,
<Traffic handling priority>,
<Source statistics descriptor>,
<Signalling indication>]
[...]

OK

Write Command
AT+CGEQREQ=[<cid>[,<Traffic class>[,<Maximum bitrate UL> [,<Maximum bitrate DL> [,<Guaranteed bitrate UL>

Response
OK
ERROR

	<u>0</u>	Subscribed value
	1~5760	
<Guaranteed bitrate DL>	Integer type, indicates the guaranteed number of kbits/s delivered by UMTS (down-link traffic) at a SAP (provided that there is data to deliver). As an example a bitrate of 32kbit/s would be specified as '32' (e.g. AT+CGEQREQ=...,32, ...)	
	<u>0</u>	Subscribed value
	1~21600	
<Delivery order>	Integer type, indicates whether the UMTS bearer shall provide in-sequence SDU delivery or not (refer 3GPP TS 24.008 subclause 10.5.6.5)	
	0	No
	1	Yes
	<u>2</u>	Subscribed value
<Maximum SDU size>	Integer type, (1,2,3,...) indicates the maximum allowed SDU size in octets. If the parameter is set to '0' the subscribed value will be requested (refer to 3GPP TS 24.008 subclause 10.5.6.5)	
	<u>0</u>	Subscribed value
	10...1520	(value needs to be divisible by 10 without remainder)
	1502	
<SDU error ratio>	String type, indicates the target value for the fraction of SDUs lost or detected as erroneous. SDU error ratio is defined only for conforming traffic. The value is specified as 'mEe'. As an example a target SDU error ratio of $5 \cdot 10^{-3}$ would be specified as "5E3" (e.g. AT+CGEQREQ=..., "5E3", ...)	
	<u>"0E0"</u>	Subscribed value
	"1E2"	
	"7E3"	
	"1E3"	
	"1E4"	
	"1E5"	
	"1E6"	
	"1E1"	
<Residual bit error ratio>	String type, indicates the target value for the undetected bit error ratio in the delivered SDUs. If no error detection is requested, Residual bit error ratio indicates the bit error ratio in the delivered SDUs. The value is specified as "mEe". As an example a target residual bit error ratio of $5 \cdot 10^{-3}$ would be specified as "5E3" (e.g. AT+CGEQREQ=..., "5E3", ...)	
	<u>"0E0"</u>	Subscribed value
	"5E2"	
	"1E2"	
	"5E3"	
	"4E3"	
	"1E3"	
	"1E4"	
	"1E5"	

	"1E6"	
	"6E8"	
<Delivery of erroneous SDUs>	Integer type, indicates whether SDUs detected as erroneous shall be delivered or not (refer to 3GPP TS 24.008 [8] subclause 10.5.6.5)	
	0	No
	1	Yes
	2	No detect
	3	Subscribed value
<Transfer delay>	Integer type, (0,1,2,...) indicates the targeted time between request to transfer an SDU at one SAP to its delivery at the other SAP, in milliseconds. If the parameter is set to '0' the subscribed value will be requested (refer to 3GPP TS 24.008 subclause 10.5.6.5)	
	0	Subscribed value
	100~150	(value needs to be divisible by 10 without remainder)
	200~950	(value needs to be divisible by 50 without remainder)
	1000~4000	(value needs to be divisible by 100 without remainder)
<Traffic handling priority>	Integer type, (1,2,3,...) specifies the relative importance for handling of all SDUs belonging to the UMTS bearer compared to the SDUs of other bearers. If the parameter is set to '0' the subscribed value will be requested (refer to 3GPP TS 24.008 [8] subclause 10.5.6.5)	
	0	Subscribed
	1	
	2	
	3	
<Source Statistics Descriptor>	Integer type, specifies characteristics of the source of the submitted SDUs for a PDP context	
	0	Characteristics of SDUs is unknown
	1	Characteristics of SDUs corresponds to a speech source
<Signalling Indication>	Integer type, indicates signaling content of submitted SDUs for a PDP context	
	0	PDP context is not optimized for signaling
	1	PDP context is optimized for signaling <PDP_type>

10.6. AT+CGEQMIN 3G Quality of Service Profile (Minimum Acceptable)

AT+CGEQMIN allows the TE to specify a minimum acceptable profile, which is checked by the MT against the negotiated profile returned in the PDP context establishment and PDP context modification procedures. Details can be found in 3GPP TS 23.107 and all of parameters save in NV automatically.

AT+CEGQMIN 3G Quality of Service Profile (Minimum Acceptable)

Test Command	Response
AT+CGEQMIN=?	+CGEQMIN: <PDP_type>,

	<p>(list of supported <Traffic class>s), (list of supported <Maximum bitrate UL>s), (list of supported <Maximum bitrate DL>s), (list of supported <Guaranteed bitrate UL>s), (list of supported <Guaranteed bitrate DL>s), (list of supported <Delivery order>s), (list of supported <Maximum SDU size>s), (list of supported <SDU error ratio>s), (list of supported <Residual bit error ratio>s), (list of supported <Delivery of erroneous SDUs>s), (list of supported <Transfer delay>s), (list of supported <Traffic handling priority>s), (list of supported <Source statistics descriptor>s), (list of supported <Signalling indication>s)</p> <p>OK</p>
<p>Read Command AT+CGEQMIN?</p>	<p>Response</p> <p>[+CGEQMIN: <cid>, <Traffic class>, <Maximum bitrate UL>, <Maximum bitrate DL>, <Guaranteed bitrate UL>, <Guaranteed bitrate DL>, <Delivery order>, <Maximum SDU size>, <SDU error ratio>, <Residual bit error ratio>, <Delivery of erroneous SDUs>, <Transfer delay>, <Traffic handling priority>, <Source statistics descriptor>, <Signalling indication>]</p> <p>[...]</p> <p>OK</p>
<p>Write Command AT+CGEQMIN=[<cid>[,<Traffic class> [,<Maximum bitrate UL> [,<Maximum bitrate DL> [,<Guaranteed bitrate UL> [,<Guaranteed bitrate DL> [,<Delivery order> [,<Maximum SDU size></p>	<p>Response</p> <p>OK</p> <p>If error is related to ME functionality: +CME ERROR: <err></p>

	(down-link traffic) at a SAP (provided that there is data to deliver). As an example a bitrate of 32kbit/s would be specified as '32' (e.g. AT+CGEQREQ=...,32, ...)
	<u>0</u> Subscribed value
	1~21600
<Delivery order>	Integer type, indicates whether the UMTS bearer shall provide in-sequence SDU delivery or not (refer 3GPP TS 24.008 subclause 10.5.6.5)
	0 No
	1 Yes
	<u>2</u> Subscribed value
<Maximum SDU size>	Integer type, (1,2,3,...) indicates the maximum allowed SDU size in octets. If the parameter is set to '0' the subscribed value will be requested (refer to 3GPP TS 24.008 subclause 10.5.6.5)
	<u>0</u> Subscribed value
	10...1520 (value needs to be divisible by 10 without remainder)
	1502
<SDU error ratio>	String type, indicates the target value for the fraction of SDUs lost or detected as erroneous. SDU error ratio is defined only for conforming traffic. The value is specified as 'mEe'. As an example a target SDU error ratio of $5 \cdot 10^{-3}$ would be specified as "5E3" (e.g. AT+CGEQREQ=..., "5E3", ...)
	<u>"0E0"</u> Subscribed value
	"1E2"
	"7E3"
	"1E3"
	"1E4"
	"1E5"
	"1E6"
	"1E1"
<Residual bit error ratio>	String type, indicates the target value for the undetected bit error ratio in the delivered SDUs. If no error detection is requested, Residual bit error ratio indicates the bit error ratio in the delivered SDUs. The value is specified as "mEe". As an example a target residual bit error ratio of $5 \cdot 10^{-3}$ would be specified as "5E3" (e.g. AT+CGEQREQ=..., "5E3", ...)
	<u>"0E0"</u> Subscribed value
	"5E2"
	"1E2"
	"5E3"
	"4E3"
	"1E3"
	"1E4"
	"1E5"
	"1E6"
	"6E8"
<Delivery of erroneous SDUs>	Integer type, indicates whether SDUs detected as erroneous shall be

	delivered or not (refer to 3GPP TS 24.008 [8] subclause 10.5.6.5)
	0 No
	1 Yes
	2 No detect
	3 Subscribed value
<Transfer delay>	Integer type, (0,1,2,...) indicates the targeted time between request to transfer an SDU at one SAP to its delivery at the other SAP, in milliseconds. If the parameter is set to '0' the subscribed value will be requested (refer to 3GPP TS 24.008 subclause 10.5.6.5)
	0 Subscribed value
	100~150 (value needs to be divisible by 10 without remainder)
	200~950 (value needs to be divisible by 50 without remainder)
	1000~4000 (value needs to be divisible by 100 without remainder)
<Traffic handling priority>	Integer type, (1,2,3,...) specifies the relative importance for handling of all SDUs belonging to the UMTS bearer compared to the SDUs of other bearers. If the parameter is set to '0' the subscribed value will be requested (refer to 3GPP TS 24.008 [8] subclause 10.5.6.5)
	0 Subscribed
	1
	2
	3
<Source Statistics Descriptor>	Integer type, specifies characteristics of the source of the submitted SDUs for a PDP context
	0 Characteristics of SDUs is unknown
	1 Characteristics of SDUs corresponds to a speech source
<Signalling Indication>	Integer type, indicates signaling content of submitted SDUs for a PDP context.
	0 PDP context is not optimized for signaling
	1 PDP context is optimized for signaling <PDP_type>

10.7. AT+CGACT Activate or Deactivate PDP Context

The AT+CGACT write command is used to activate or deactivate the specified PDP context(s). After the command has completed, the MT remains in V.250 command state. If any PDP context is already in the requested state, the state for that context remains unchanged. If the MT is not PS attached when the activation form of the command is executed, the MT first performs a PS attach and then attempts to activate the specified contexts. If no **<cid>** specifies the activation/deactivation form of the command, it will activate or deactivate all defined contexts.

AT+CGACT Activate or Deactivate PDP Context

Test Command
AT+CGACT=?

Response
+CGACT: (list of supported **<state>**s)

	OK
Read Command AT+CGACT?	Response [+CGACT:<cid>,<state>[<CR><LF> +CGACT: <cid><state>[...]]]
Write Command AT+CGACT=<state>,<cid>	Response OK NO CARRIER If error is related to ME functionality: +CME ERROR: <err>
Maximum Response Time	150s, determined by network.
Reference 3GPP TS 27.007	

Parameter

<state>	Indicates the state of PDP context activation 0 Deactivated 1 Activated Other values are reserved and will result in an ERROR response to the Write Command
<cid>	A numeric parameter which specifies a particular PDP context definition (see +CGDCONT command)

Example

```

AT+CGDCONT=1,"IP","UNINET" //Define PDP context
OK
AT+CGACT=1,1 //Activated PDP
OK
AT+CGACT=0,1 //Deactivated PDP
OK

```

10.8. AT+CGDATA Enter Data State

The AT+CGDATA write command causes the MT to perform whatever actions are necessary to establish communication between the TE and the network using one or more packet domain PDP types. This may include performing a PS attach and one or more PDP context activations. Commands following the AT+CGDATA command in the AT command line will not be processed by the MT.

If the <L2P> parameter value is unacceptable to the MT, the MT shall return an **ERROR** or **+CME ERROR** response. Otherwise, the MT issues the intermediate result code **CONNECT** and enters V.250 online data state. After data transfer is complete, and the layer 2 protocol termination procedure has completed successfully, the command state is reentered and the MT returns the final result code **OK**.

AT+CGDATA Enter Data State

Test Command AT+CGDATA=?	Response +CGDATA: (list of supported <L2P>s) OK
Write Command AT+CGDATA=<L2P>[,<cid>[,<cid>[,...]]]	Response CONNECT ERROR If error is related to ME functionality: +CME ERROR: <err>
Maximum Response Time	300ms
Reference 3GPP TS 27.007	

Parameter

<L2P>	A string parameter that indicates the layer 2 protocol to be used between the TE and MT: PPP Point to Point protocol for a PDP such as IP PAD character stream for X.25 character (triple X PAD) mode (Obsolete) X25 X.25 L2 (LAPB) for X.25 packet mode (Obsolete) M-OPT-PPP MS supports manufacturing specific protocol M-HEX MS supports manufacturing specific protocol M-RAW_IP MS supports manufacturing specific protocol Other values are not supported and will result in an ERROR response to the execution command
<cid>	A numeric parameter which specifies a particular PDP context definition (see +CGDCONT command)

10.9. AT+CGPADDR Show PDP Address

The AT+CGPADDR write command returns a list of PDP addresses for the specified context identifiers. If no <cid> is specified, the addresses for all defined contexts are returned.

AT+CGPADDR Show PDP Address	
Test Command AT+CGPADDR=?	Response +CGPADDR: [(list of defined <cid>s)] OK
Write Command AT+CGPADDR=<cid>[,<cid>[,...]]	Response +CGPADDR: <cid>,<PDP_addr> [+CGPADDR: <cid>,<PDP_addr>[...]] OK ERROR If error is related to ME functionality: +CME ERROR: <err>
Maximum Response Time	300ms
Reference 3GPP TS 27.007	

Parameter

<cid>	A numeric parameter which specifies a particular PDP context definition (see +CGDCONT command)
<PDP_addr>	A string that identifies the MT in the address space applicable to the PDP. The address may be static or dynamic. For a static address, it will be the one set by the +CGDCONT command when the context was defined. For a dynamic address it will be the one assigned during the last PDP context activation that used the context definition referred to <cid> <PDP_address> is omitted if none is available

Example

```
AT+CGDCONT=1,"IP","UNINET" //Define PDP context
OK
AT+CGACT=1,1 //Activated PDP
OK
AT+CGPADDR=1 //Show PDP address
+CGPADDR: 1,"10.76.51.180"
OK
```

10.10. AT+CGCLASS GPRS Mobile Station Class

AT+CGCLASS is used to set the MT to operate according to the specified mode of operation, see 3GPP TS 23.060.

AT+CGCLASS GPRS Mobile Station Class	
Test Command AT+CGCLASS=?	Response +CGCLASS: (list of supported <class>s) OK
Read Command AT+CGCLASS?	Response +CGCLASS: <class> OK
Write Command AT+CGCLASS=<class>	Response OK ERROR If error is related to ME functionality: +CME ERROR: <err>
Maximum Response Time	300ms
Reference	3GPP TS 27.007

Parameter

<class>	A string parameter which indicates the GPRS mobile class (Functionality in descending order) "A" Class A "B" Class B "CG" Class C in GPRS only mode "CC" Class C in circuit switched only mode
----------------------	--

10.11. AT+CGREG Network Registration Status

The AT+CGREG command queries the network registration status and controls the presentation of an unsolicited result code **+CGREG: <stat>** when <n>=1 and there is a change in the MT's packet domain network registration status in GERAN/UTRAN, or unsolicited result code **+CGREG: <stat>,[<lac>],[<ci>],[<AcT>],[<rac>]]** when <n>=2 and there is a change of the network cell in GERAN/UTRAN.

AT+CGREG Network Registration Status

Test Command AT+CGREG=?	Response +CGREG: (list of supported <n>s) OK
Read Command AT+CGREG?	Response +CGREG: <n>,<stat>[,<lac>,<ci>[,<Act>]] OK
Write Command AT+CGREG=[<n>]	Response OK ERROR
Maximum Response Time	300ms
Reference 3GPP TS 27.007	

Parameter

<n>	0	Disable network registration unsolicited result code
	1	Enable network registration unsolicited result code +CGREG:<stat>
	2	Enable network registration and location information unsolicited result code +CGREG: <stat>[,<lac>,<ci>[,<Act>]]
<stat>	0	Not registered, MT is not currently searching an operator to register to .The UE is in GMM state GMM-NULL or GMM-DEREGISTERED-INITIATED. The packet domain service is disabled, the UE is allowed to attach for packet domain if requested by the user.
	1	Registered, home network .The UE is in GMM state GMM-REGISTERED or GMM-ROUTING-AREA-UPDATING-INITIATED INITIATED on the home PLMN.
	2	Not registered, but MT is currently trying to attach or searching an operator to register to. The UE is in GMM state GMM-DEREGISTERED or GMM-REGISTERED-INITIATED. The packet domain service is enabled, but an allowable PLMN is currently not available. The UE will start a packet domain attach as soon as an allowable PLMN is available.
	3	Registration denied. The UE is in GMM state GMM-NULL. The packet domain service is disabled, the UE is not allowed to attach for packet domain if requested by the user.
	4	Unknown
	5	Registered, roaming <lac> String type; two byte location area code in hexadecimal format (e.g. "00C3" equals to 195 in decimal)
<lac>		String type, two byte location area code in hexadecimal format
<ci>		String type, two byte cell ID in hexadecimal format
<Act>		Access technology selected

0	GSM
2	UTRAN

10.12. AT+CGEREP Packet Domain Event Reporting

Set command enables or disables sending of unsolicited result codes +CGEV: XXX from MT to TE in the case of certain events occurring in the Packet Domain MT or the network. **<mode>** controls the processing of unsolicited result codes specified within this command. **<bfr>** controls the effect on buffered codes when **<mode>** 1 or 2 is entered.

AT+CGEREP Packet Domain Event Reporting	
Test Command AT+CGEREP=?	Response +CGEREP: (list of supported <mode> s),(list of supported <bfr> s) OK
Read Command AT+CGEREP?	Response +CGEREP: <mode> , <bfr> OK
Write Command AT+CGEREP=mode[,<bfr>]	Response OK ERROR
Execution Command AT+CGEREP	Response OK
Maximum Response Time	300ms
Reference	3GPP TS 27.007

Parameter

<mode>	<u>0</u>	Buffer unsolicited result codes in the MT; if MT result code buffer is full, the oldest ones can be discarded. No codes are forwarded to the TE.
	1	Discard unsolicited result codes when MT-TE link is reserved (e.g. in on-line data mode); otherwise forward them directly to the TE.
	2	Buffer unsolicited result codes in the MT when MT-TE link is reserved (e.g. in on-line data mode) and flush them to the TE when MT-TE link becomes available; otherwise forward them directly to the TE.
<bfr>	<u>0</u>	MT buffer of unsolicited result codes defined within this command is cleared when <mode> 1 or 2 is entered.

- 1 MT buffer of unsolicited result codes defined within this command is flushed to the TE when **<mode>** 1 or 2 is entered (OK response shall be given before flushing the codes).

NOTE

The unsolicited result codes and the corresponding events are defined as follows:

1. **+CGEV: NW ACT <p_cid>, <cid>, <event_type>**: The mobile termination has forced a change of MT class. The highest available class is reported (see +CGCLASS).
2. **+CGEV: ME PDN ACT <cid>[,<reason>]**: The network has forced a change of MT class. The highest available class is reported (see +CGCLASS).
3. **+CGEV: NW DETACH**: The network has forced a Packet Domain detach. This implies that all active contexts have been deactivated. These are not reported separately.
4. **+CGEV: ME DETACH**: The mobile equipment has forced a Packet Domain detach. This implies that all active contexts have been deactivated. These are not reported separately.
5. **+CGEV: NW CLASS <class>**: The network has forced a change of MS class. The highest available class is reported (see **AT+CGCLASS**).
6. **+CGEV: ME CLASS <class>**: The mobile equipment has forced a change of MS class. The highest available class is reported (see **AT+CGCLASS**).
7. **+CGEV: ME ACT <p_cid>, <cid>, <event_type>**

Integer type parameter indicates the reason why the context activation request for PDP type IPv4v6 was not granted. This parameter is only included if the requested PDP type associated with **<cid>** is IPv4v6, and the PDP type assigned by the network for **<cid>** is either IPv4 or IPv6.

- 0 IPv4 only allowed
- 1 IPv6 only allowed
- 2 Single address bearers only allowed
- 3 Single address bearers only allowed and MT initiated context activation for a second address type bearer was not successful.

Example

```
AT+CGEREP=?  
+CGEREP: (0-2),(0,1)
```

```
OK  
AT+CGEREP?  
+CGEREP: 0,0
```

```
OK
```

10.13. AT+CGSMS Select Service for MO SMS Messages

AT+CGSMS specifies the service or service preference that the MT will use to send MO (mobile originated) SMS messages.

AT+CGSMS Select Service for MO SMS Messages	
Test Command AT+CGSMS=?	Response +CGSMS: (list of currently available <service>s) OK
Read Command AT+CGSMS?	Response +CGSMS: <service> OK
Write Command AT+CGSMS=[<service>]	Response OK If error is related to ME functionality: +CME ERROR: <err>
Maximum Response Time	300ms
Reference	3GPP TS 27.007

Parameter

<service>	A numeric parameter which indicates the service or service preference to be used
0	Packet domain
1	Circuit switch
2	Packet domain preferred (use circuit switched if packet domain service not available)
3	Circuit switch preferred (use packet domain if circuit switched not available)

11 Supplementary Service Commands

11.1. AT+CCFC Call Forwarding Number and Conditions Control

AT+CCFC allows control of the call forwarding supplementary service according to 3GPP TS 22.082. Registration, erasure, activation, deactivation and status query are supported.

AT+CCFC Call Forwarding Number and Conditions Control

Test Command

AT+CCFC=?

Response

+CCFC: (list of supported **<reads>**s)

OK

Write Command

AT+CCFC=<reads>,<mode>[,<number>[,<type>[,<class>[,<subaddr>[,<satype>[,<time>]]]]]]]

Response

TA controls the call forwarding supplementary service. Registration, erasure, activation, deactivation, and status query are supported.

Only **<reads>** and **<mode>** should be entered with mode (0-2,4)

If **<mode><>2** and command successful

OK

If **<mode>=2** and command successful (only in connection with **<reads>** 0-3)

For registered call forwarding numbers:

+CCFC: <status>, <class1>[, <number>, <type>[,<subaddr>,<satype>[,<time>]]]
[<CR><LF><CR><LF>**+CCFC:]**

OK

If no call forwarding numbers are registered (and therefore all classes are inactive):

+CCFC: <status>, <class>

OK

	where <status> =0 and <class> =15
	If error is related to ME functionality: +CME ERROR: <err>
Maximum Response Time	300ms
Reference	3GPP TS 27.007

Parameter

<reads>	0	Unconditional
	1	Mobile busy
	2	No reply
	3	Not reachable
	4	All call forwarding (0-3)
	5	All conditional call forwarding (1-3)
<mode>	0	Disable
	1	Enable
	2	Query status
	3	Registration
	4	Erasure
<number>	Phone number in string type of forwarding address in format specified by <type>	
<type>	Type of address in integer format; default value is 145 when dialing string includes international access code character "+", otherwise 129	
<subaddr>	String type sub-address of format specified by <satype>	
<satype>	Type of sub-address in integer	
<class>	1	Voice
	2	Data
	4	FAX
	7	All telephony except SMS
	8	Short message service
	16	Data circuit sync
	32	Data circuit async
<time>	1...30	When "no reply" (<reads> =no reply) is enabled or queried, this gives the time in seconds to wait before call is forwarded, default value is 20
<status>	0	Not active
	1	Active

Example

```
AT+CCFC=0,3,"15021012496" //Register the destination number for unconditional call forwarding (CFU)
OK
```

```

AT+CCFC=0,2 //Query the status of CFU without specifying <class>
+CCFC: 1,1,"+8615021012496",145,,,

OK
AT+CCFC=0,4 //Erase the registered CFU destination number
OK
AT+CCFC=0,2 //Query the status, no destination number
+CCFC: 0,255

OK

```

11.2. AT+CCWA Call Waiting Control

The AT+CCWA command allows control of the call waiting supplementary service according to 3GPP TS 22.083. Activation, deactivation and status query are supported.

AT+CCWA Call Waiting Control	
Test Command AT+CCWA=?	Response +CCWA: (list of supported <n>s) OK
Read Command AT+CCWA?	Response +CCWA: <n> OK
Write Command AT+CCWA=[<n>[,<mode>[,<class>]]]	Response TA controls the call waiting supplementary service. Activation, deactivation and status query are supported. If <mode><>2 and command successful: OK If <mode>=2 and command successful: +CCWA: <status>,<class1>[<CR><LF><CR><LF>+CCWA: <status>,<class2>[...]] OK If error is related to ME functionality: +CME ERROR: <err>
Maximum Response Time	300ms

Reference
3GPP TS 27.007

Parameter

<n>	0	Disable presentation of an unsolicited result code
	1	Enable presentation of an unsolicited result code
<mode>	When <mode> parameter is not given, network is not interrogated	
	0	Disable
	1	Enable
	2	Query status
<class>	A sum of integers, each integer represents a class of information	
	1	Voice (telephony)
	2	Data (bearer service)
	4	FAX (facsimile)
	16	Data circuit sync
	32	Data circuit async
<status>	0	Disable
	1	Enable
<number>	Phone number in string type of calling address in format specified by <type>	
<type>	Type of address octet in integer format	
	129	Unknown type (ISDN format number)
	145	International number type (ISDN format)
<alpha>	Optional string type alphanumeric representation of <number> corresponding to the entry found in phone book	
<CLI_validity>	Integer type	
	0	CLI valid
	1	CLI has been withheld by the originator
	2	CLI is not available due to interworking problems or limitations of originating network

NOTES

- <status>**=0 should be returned only if service is not active for any **<class>** i.e. +CCWA: 0, 7 will be returned in this case.
- When **<mode>**=2, all active call waiting classes will be reported. In this mode the command is abortable by pressing any key.
- Unsolicited result code:
When the presentation call waiting at the TA is enabled (and call waiting is enabled) and a terminating call set up during an established call, an unsolicited result code is returned:
+CCWA: <number>,<type>,<class>,[<alpha>],<CLI_validity>

Example

```

AT+CCWA=1,1 //Enable presentation of an unsolicited result code
OK
ATD10086; //Establish a call
OK
+CCWA: "02154450293",129,1,,0 //Indication of a call that has been waiting
    
```

11.3. AT+CHLD Call Related Supplementary Services

The AT+CHLD command allows the control of the following call related services:

- A call can be temporarily disconnected from the MT but the connection is retained by the network;
- Multiparty conversation (conference calls);
- The served subscriber who has two calls (one held and the other either active or alerting) can connect the other parties and release the served subscriber's own connection.

Calls can be put on hold, recovered, released and added to a conversation, and transferred similarly as defined in 3GPP TS 22.030.

This is based on the GSM/UMTS supplementary services HOLD (Call Hold; refer 3GPP TS 22.083 clause 2), MPTY (Multi Party; refer 3GPP TS 22.084) and ECT (Explicit Call Transfer; refer 3GPP TS 22.091). The interaction of this command with other commands based on other GSM/UMTS supplementary services is described in the GSM/UMTS standards. Call Hold, Multi Party and Explicit Call Transfer are only applicable to teleservice 11.

AT+CHLD Call Related Supplementary Services

Test Command AT+CHLD=?	Response +CHLD: (list of supported <n>s) OK
Write Command AT+CHLD[=<n>]	Response TA controls the supplementary services call hold, multiparty and explicit call transfer. Calls can be put on hold, recovered, released, added to conversation and transferred. OK If error is related to ME functionality: +CME ERROR: <err>
Maximum Response Time	300ms

Reference
3GPP TS 27.007

Parameter

<n>	0	Terminate all held calls or UDUB (User Determined User Busy) for a waiting call. If a call is waiting, terminate the waiting call. Otherwise, terminate all held calls (if any)
	1	Terminate all active calls (if any) and accept the other call (waiting call or held call). It can terminate active call if there is only one call
	1X	Terminate the specific call number X
	2	Place all active calls on hold (if any) and accept the other call (waiting call or held call) as the active call
	2X	Place all active calls except call X on hold
	3	Add the held call to the active calls
	4	Connects the two calls and disconnects the subscriber from both calls (ECT)

Example

```

ATD10086; //Establish a call
OK

+CCWA: "02154450293",129,1 //Indication of a call that has been waiting
AT+CHLD=2 //Place the active call on hold and accept the waiting call as
the active call

OK
AT+CLCC
+CLCC: 1,0,1,0,0,"10086",129 //The first call on hold

+CLCC: 2,1,0,0,0,"02154450293",129 //The second call be active

OK
AT+CHLD=21 //Place the active call except call X=1 on hold
OK
AT+CLCC
+CLCC: 1,0,0,0,0,"10086",129 //The first call be active

+CLCC: 2,1,1,0,1,"02154450293",129 //The second call on hold

OK
AT+CHLD=3 //Add a held call to the active calls in order to set up a
conference (multiparty) call

OK
AT+CLCC

```

```
+CLCC: 1,0,0,0,1,"10086",129

+CLCC: 2,1,0,0,1,"02154450293",129

OK
```

11.4. AT+CLIP Calling Line Identification Presentation

AT+CLIP refers to the GSM/UMTS supplementary service CLIP (Calling Line Identification Presentation) that enables a called subscriber to get the calling line identity (CLI) of the calling party when receiving a mobile terminated call.

AT+CLIP Calling Line Identification Presentation

Test Command AT+CLIP=?	Response +CLIP: (list of supported <n>s) OK
Read Command AT+CLIP?	Response +CLIP: <n>,<m> OK
Write Command AT+CLIP=<n>	Response TA enables or disables the presentation of the calling line identity (CLI) at the TE. It has no effect on the execution of the supplementary service CLIP in the network. OK If error is related to ME functionality: +CME ERROR: <err>
Maximum Response Time	15s, determined by network.
Reference 3GPP TS 27.007	

Parameter

<n>	0	Suppress unsolicited result codes
	1	Display unsolicited result codes
<m>	0	CLIP not provisioned
	1	CLIP provisioned
	2	Unknown

<number>	Phone number in string type of calling address in format specified by <type>
<subaddr>	String type subaddress of format specified by <satype>
<satype>	Type of subaddress octet in integer format (refer 3GPP TS 24.008 [8] subclause 10.5.4.8)
<type>	Type of address octet in integer format; 129 Unknown type (ISDN format number) 145 International number type (ISDN format)
<alpha>	String type alphanumeric representation of <number> corresponding to the entry found in phone book
<CLI validity>	0 CLI valid 1 CLI has been withheld by the originator 2 CLI is not available due to interworking problems or limitations of originating network

NOTE

Unsolicited result code:

When the presentation of the CLIP at the TE is enabled (and calling subscriber allows), an unsolicited result code is returned after every RING (or **+CRING: <type>**) at a mobile terminating call:

+CLIP: <number>,<type>,[subaddr],[satype],[alpha],<CLI validity>

Example

AT+CLIP=1

OK

RING

+CLIP: "02151082965",129,,,0

11.5. AT+CLIR Calling Line Identification Restriction

AT+CLIR refers to the CLIR supplementary service (Calling Line Identification Restriction) according to 3GPP TS 22.081 and the OIR supplementary service (Originating Identification Restriction) according to 3GPP TS 24.607) that allows a calling subscriber to enable or disable the presentation of the calling line identity (CLI) to the called party when originating a call.

AT+CLIR Calling Line Identification Restriction

Test Command

AT+CLIR=?

Response

+CLIR: (list of supported **<n>s**)

	OK
Read Command AT+CLIR?	Response +CLIR: <n>,<m>
Write Command AT+CLIR=<n>	Response TA restricts or enables the presentation of the calling line identity (CLI) to the called party when originating a call. The command overrides the CLIR subscription (default is restricted or allowed) when temporary mode is provisioned as a default adjustment for all following outgoing calls. This adjustment can be revoked by using the opposite Command. OK If error is related to ME functionality: +CME ERROR: <err>
Maximum Response Time	15s, determined by network.
Reference 3GPP TS 27.007	

Parameter

<n>	Parameter sets the adjustment for outgoing calls
0	Presentation indicator is used according to the subscription of the CLIR service
1	CLIR invocation
2	CLIR suppression
<m>	Parameter shows the subscriber CLIR service status in the network
0	CLIR not provisioned
1	CLIR provisioned in permanent mode
2	Unknown (e.g. no network, etc.)
3	CLIR temporary mode presentation restricted
4	CLIR temporary mode presentation allowed

11.6. AT+COLP Connected Line Identification Presentation

AT+COLP refers to the GSM/UMTS supplementary service COLP (Connected Line Identification Presentation) that enables a calling subscriber to get the connected line identity (COL) of the called party after setting up a mobile originated call. The command enables or disables the presentation of the COL at the TE. It has no effect on the execution of the supplementary service COLR in the network.

AT+COLP Connected Line Identification Presentation

Test Command AT+COLP=?	Response +COLP: (list of supported <n>s) OK
Read Command AT+COLP?	Response +COLP: <n>,<m> OK
Write Command AT+COLP=<n>	Response TA enables or disables the presentation of the COL (Connected Line) at the TE for a mobile originating a call. It has no effect on the execution of the supplementary service COLR in the network. Intermediate result code is returned from TA to TE before any +CR or V.25ter responses. OK
Maximum Response Time	15s, determined by network.
Reference 3GPP TS 27.007	

Parameter

<n>	Parameter sets/shows the result code presentation status in the TA 0 Disable 1 Enable
<m>	Parameter shows the subscriber COLP service status in the network 0 COLP not provisioned 1 COLP provisioned 2 Unknown (e.g. no network, etc.)
<number>	Phone number in string type, format specified by <type>
<type>	Type of address octet in integer format 129 Unknown type(ISDN format number) 145 International number type(ISDN format)
<subaddr>	String type sub-address of format specified by <satype>
<satype>	Type of sub-address octet in integer format (refer to 3GPP TS 24.008 sub clause 10.5.4.8)
<alpha>	Optional string type alphanumeric representation of <number> corresponding to the entry found in phone book

NOTE

Intermediate result code:

When enabled (and called subscriber allows), an intermediate result code is returned before any +CR or V.25ter responses:

+COLP: <number>,<type>,[<subaddr>],[<satype>] ,[<alpha>]

Example

```
AT+COLP=1
OK
ATD02151082965;
+COLP: "02151082965",129,,,
OK
```

11.7. AT+CSSN Supplementary Service Notifications

AT+CSSN refers to supplementary service related network initiated notifications. The write command enables/disables the presentation of notification result codes from TA to TE.

AT+CSSN Supplementary Service Notifications

Test Command AT+CSSN=?	Response +CSSN: (list of supported <n>s),(list of supported <m>s) OK
Read Command AT+CSSN?	Response +CSSN: <n>,<m> OK
Write Command AT+CSSN=<n>[,<m>]	Response OK ERROR If error is related to ME functionality: +CME ERROR: <err>
Maximum Response Time	300ms
Reference 3GPP TS 27.007	

Parameter

<n>	Integer type, parameter sets/shows the +CSSI intermediate result code presentation status to the TE 0 Disable 1 Enable
<m>	Integer type (parameter sets/shows the +CSSU unsolicited result code presentation status to the TE) 0 Disable 1 Enable
<code1>	Integer type, it is manufacturer specific, which of these codes are supported 0 Unconditional call forwarding is active 1 Some of the conditional call forwardings are active 2 Call has been forwarded 3 Waiting call is pending 5 Outgoing call is barred
<code2>	Integer type, it is manufacturer specific, which of these codes are supported 0 The incoming call is a forwarded call 2 Call has been put on hold (during a voice call) 3 Call has been retrieved (during a voice call) 5 Held call was terminated by other party 10 Additional incoming call forwarded

NOTES

- When **<n>=1** and a supplementary service notification is received after a mobile originated call setup, the **+CSSI** intermediate result code is sent to TE before any other MO call setup result codes:
+CSSI: <code1>
- When **<m>=1** and a supplementary service notification is received during a mobile terminated call setup or during a call, the **+CSSU** unsolicited result code is sent to TE:
+CSSU: <code2>

11.8. AT+CUSD Unstructured Supplementary Service Data

AT+CUSD allows control of the Unstructured Supplementary Service Data (USSD) according to 3GPP TS 22.090. Both network and mobile initiated operations are supported.

Parameter **<mode>** is used to disable/enable the presentation of an unsolicited result code. The value **<mode>=2** is used to cancel an ongoing USSD session. For an USSD response from the network, or a network initiated operation, the format is: **+CUSD: <status>[,<rspstr>[,<dcs>]]**.

When **<reqstr>** is given, a mobile initiated USSD string or a response USSD string to a network initiated operation is sent to the network. The response USSD string from the network is returned in a subsequent **+CUSD** URC.

AT+CUSD Unstructured Supplementary Service Data	
Test Command AT+CUSD=?	Response +CUSD: (list of supported <mode> s) OK
Read Command AT+CUSD?	Response +CUSD: <mode> OK
Write Command AT+CUSD=<mode>[,<reqstr>[,<dc>]]	Response OK ERROR If error is related to ME functionality: +CME ERROR: <err>
Maximum Response Time	120s, determined by network.
Reference 3GPP TS 27.007	

Parameter

<mode>	Integer type, sets/shows the result code presentation status to the TE <ul style="list-style-type: none"> 0 Disable the result code presentation to the TE 1 Enable the result code presentation to the TE 2 Cancel session (not applicable to read command response)
<reqstr>	Unstructured Supplementary Service Data (USSD) to be sent to the network. If this parameter is not given, network is not interrogated.
<rspstr>	Unstructured Supplementary Service Data (USSD) received from the network.
<dc>	Integer type, 3GPP TS 23.038 Cell Broadcast Data Coding Scheme (default 15)
<status>	USSD response from the network or the network initiated operation <ul style="list-style-type: none"> 0 No further user action required (network initiated USSD Notify, or no further information needed after mobile initiated operation) 1 Further user action required (network initiated USSD Request, or further information needed after mobile initiated operation) 2 USSD terminated by network 3 Other local client has responded 4 Operation not supported 5 Network time out

12 Audio Commands

12.1. AT+CMUT Mute Control

AT+CMUT is used to enable and disable the uplink voice muting during a voice call.

AT+CMUT Mute Control	
Test Command AT+CMUT=?	Response +CMUT: (0,1) OK
Read Command AT+CMUT?	Response +CMUT: <on> OK
Write Command AT+CMUT=<on>	Response OK ERROR
Maximum Response Time	300ms

Parameter

<on>	Numerical type
	0 Uplink volume is normal during the call
	1 Uplink volume is mute during the call

NOTE

1. This command is valid only during the call.
2. After the call is ended, it returns to default value.

12.2. AT+CLVL Loud Speaker Volume Level

AT+CLVL is used to select the volume of the internal loudspeaker of the MT.

AT+CLVL Loud Speaker Volume Level

Test Command AT+CLVL=?	Response +CLVL: (0-100) OK
Read Command AT+CLVL?	Response +CLVL: <volume> OK
Write Command AT+CLVL=<volume>	Response OK ERROR

Parameter

<volume>	Numeric type, indicates the configured call volume Range: 0-100, default: 88
-----------------------	---

12.3. AT+VTS DTMF and Tone Generation

The AT+VTS command is used to send ASCII characters which causes MSC to transmit DTMF tones to a remote subscriber. This command can only be operated in voice call.

AT+VTS DTMF and Tone Generation

Test Command AT+VTS=?	Response +VTS: (0-9,#,*,A-D) OK
Write Command AT+VTS=<dtmf>	Response OK ERROR If error is related to ME functionality: +CME ERROR: <err>

Maximum Response Time	Depends on the length of <dtmfstring> and <duration> .
Reference 3GPP TS 27.007	

Parameter

<dtmf>	ASCII characters in the set 0...9,#,*, A, B, C, D. The string should enclose in quotation marks ("...")
<duration>	The duration of each tone in 1/10 seconds with tolerance Value ranges from 0 to 255 and default is 0 If the duration is less than the minimum value depended on the network, the actual duration is depended on the network

12.4. AT+VTD Tone Duration

AT+VTD sets the duration of DTMF tones. This command refers to an integer **<n>** that defines the length of tones emitted as a result of the +VTS command.

AT+VTD Tone Duration	
Test Command AT+VTD=?	Response +VTD: (0-255) OK
Read Command AT+VTD?	Response +VTD: <duration> OK
Write Command AT+VTD=<duration>	Response OK ERROR If error is related to ME functionality: +CME ERROR: <err>
Maximum Response Time	300ms
Reference 3GPP TS 27.007	

Parameter

<duration>	The duration of each tone in 1/10 seconds with tolerance. Value ranges from 0 to 255 and default is 1. If the duration is less than the minimum value depended on the network, the actual duration is depended on the network.
-------------------------	---

Quectel
Confidential

13 Hardware Related Commands

13.1. AT+QPOWD Power Off

The command AT+QPOWD is used to shut down the module. The UE will return OK immediately when the command is executed. Then the UE deactivates the network. After it is completed, the UE outputs the message "POWERED DOWN" and sets the STATE pin as low to enter into the shutdown state. The maximum time for network log-off is 60 seconds. In order to avoid data loss, it is only allowed to turn off the UE power after the module's STATE pin is set as low and the URC "POWERED DOWN" is outputted. If "POWERED DOWN" has not been received after 65s, you should force to switch off the VBAT.

AT+QPOWD Power Off	
Test Command AT+QPOWD=?	Response +QPOWD: (0,1)
Execute Command AT+QPOWD[=<n>]	Response OK POWERED DOWN
Maximum Response Time	300ms

Parameter

<n>	0	Immediately power down
	1	Normal power down

13.2. AT+CCLK Clock

AT+CCLK sets and queries the real time clock (RTC) of the module. The current setting is retained until the module is totally disconnected from power.

AT+CCLK Clock	
Test Command AT+CCLK=?	Response OK
Read Command AT+CCLK?	Response +CCLK: <time> OK
Write Command AT+CCLK=<time>	Response OK If error is related to ME functionality: +CME ERROR: <err>
Maximum Response Time	300ms
Reference	3GPP TS 27.007

Parameter

<time> String type value, format is "yy/MM/dd,hh:mm:ss±zz", indicate year (two last digits), month, day, hour, minutes, seconds and time zone (indicates the difference, expressed in quarters of an hour, between the local time and GMT; range -48...+56). E.g. May 6th, 1994, 22:10:00 GMT+2 hours equals to "94/05/06,22:10:00+08"

Example

```
AT+CCLK? //Query the local time
+CCLK: "08/01/04, 00:19:43+00"
OK
```

13.3. AT+CBC Battery Charge

AT+CBC returns battery connection status **<bcs>** and battery charge level **<bcl>** of the MT.

AT+CBC Battery Charge	
Test Command AT+CBC=?	Response +CBC: (list of supported <bcs> s),(list of supported <bcl> s),(voltage) OK
Execution Command AT+CBC	Response +CBC: <bcs> , <bcl> , <voltage> OK If error is related to ME functionality: +CME ERROR: <err>
Maximum Response Time	300ms
Reference 3GPP TS 27.007	

Parameter

<bcs>	Charge status
0	ME is not charging
1	ME is charging
2	Charging has finished
3	Recognized power fault, calls inhibited
<bcl>	Battery connection level
0...100	Battery has 0-100 percent of capacity remaining vent
<voltage>	Battery voltage (mV)

14 Appendix

14.1. Reference

Table 5: Related Documents

SN	Document Name	Remark
[1]	V.25ter	Serial asynchronous automatic dialing and control
[2]	3GPP TS 27.007	Digital cellular telecommunications (Phase 2+); Universal Mobile Telecommunications System (UMTS); LTE; AT command set for User Equipment (UE)
[3]	3GPP TS 27.005	Digital cellular telecommunications (Phase 2+); Universal Mobile Telecommunications System (UMTS); LTE; Use of Data Terminal Equipment - Data Circuit terminating Equipment (DTE- DCE) interface for Short Message Service (SMS) and Cell Broadcast Service (CBS)

Table 6: Terms and Abbreviations

Abbreviation	Description
AMR	Adaptive Multi-Rate
ME	Mobile Equipment
TA	Terminal Adapter
MS	Mobile Station
DCE	Data Communication Equipment
TE	Terminal Equipment
DTE	Data Terminal Equipment

RTS/CTS	Request To Send/Clear To Send
GPRS	General Packet Radio Service
DCD	Dynamic Content Delivery
DTR	Data Terminal Ready
CSD	Circuit Switch Data
PSC	Primary Synchronization Code
PDP	Packet Data Protocol
TCP	Transmission Control Protocol
UDP	User Datagram Protocol
ECT	Explicit Call Transfer supplementary service

14.2. Factory Default Settings Restorable with AT&F

Table 7: Factory Default Settings Restorable with AT&F

AT Command	Parameters	Factory Defaults
ATE	<value>	1
ATQ	<n>	0
ATS0	<n>	000
ATS7	<n>	000
ATS10	<n>	015
ATV	<value>	1
ATX	<value>	4
AT&C	<value>	1
AT&D	<value>	1
AT+IFC	<dce_by_dte>,<dte_by_dce>	0,0

AT+CREG	<n>	0
AT+CGREG	<n>	0
AT+CBST	<speed>,<name>,<ce>	71,0,1
AT+CMEE	<n>	1
AT+CSCS	<chset>	"GSM"
AT+CSTA	<type>	129
AT+CR	<mode>	0
AT+CRC	<mode>	0
AT+CSMS	<service>	0
AT+CMGF	<mode>	0
AT+CSMP	<fo>,<vp>,<pid>,<dc>	17,167,0,0
AT+CSDH	<show>	0
AT+CSCB	<mode>	0
AT+CPMS	<mem1>,<mem2>,<mem3>	"SM","SM","SM"
AT+CNMI	<mode>,<mt>,<bm>,<ds>,<bfr> >	2,1,0,0,0
AT+CMMS	<n>	0
AT+CVHU	<mode>	0
AT+CLIP	<n>	0
AT+COLP	<n>	0
AT+CLIR	<n>	0
AT+CSSN	<n>	0
AT+CLVL	<level>	88
AT+CMUT	<n>	0

14.3. AT Command Setting Storable with AT&W

Table 8: AT Command Settings Storable with AT&W

AT Command	Parameters	Display with AT&V
ATE	<value>	Yes
ATQ	<n>	Yes
ATS0	<n>	Yes
ATS7	<n>	Yes
ATS10	<n>	Yes
ATV	<value>	Yes
ATX	<value>	Yes
AT&C	<value>	Yes
AT&D	<value>	Yes
AT+IFC	<dce_by_dte>,<dte_by_dce>	No
AT+IPR	<rate>	No
AT+CREG	<n>	No
AT+CGREG	<n>	No

14.4. AT Command Settings Storable with ATZ

Table 9: AT Command Settings Storable with ATZ

AT Command	Parameters	Factory Defaults
ATE	<value>	1
ATQ	<n>	0
ATS0	<n>	000

ATS7	<n>	000
ATS10	<n>	015
ATV	<value>	1
ATX	<value>	4
AT&C	<value>	1
AT&D	<value>	1
AT+IFC	<dce_by_dte>,<dte_by_dce>	0,0
AT+CREG	<n>	0
AT+CGREG	<n>	0

14.5. Summary of CME ERROR Codes

Final result code **+CME ERROR: <err>** indicates an error related to mobile equipment or network. The operation is similar to **ERROR** result code. None of the following commands in the same command line is executed. Neither **ERROR** nor **OK** result code shall be returned.

<err> values are mostly used by common message commands. The following table lists most of general and GRPS related **ERROR** Codes. For some GSM protocol failure cause described in GSM specifications, the corresponding **ERROR** codes are not included.

Table 10: Different Coding Schemes of +CME ERROR: <err>

Code of <err>	Meaning
0	Phone failure
1	No connection to phone
2	Phone-adaptor link reserved
3	Operation not allowed
4	Operation not supported
5	PH-SIM PIN required

6	PH-FSIM PIN required
7	PH-FSIM PUK required
10	SIM not inserted
11	SIM PIN required
12	SIM PUK required
13	SIM failure
14	SIM busy
15	SIM wrong
16	Incorrect password
17	SIM PIN2 required
18	SIM PUK2 required
20	Memory full
21	Invalid index
22	Not found
23	Memory failure
24	Text string too long
25	Invalid characters in text string
26	Dial string too long
27	Invalid characters in dial string
30	No network service
31	Network timeout
32	Network not allowed - emergency calls only
40	Network personalization PIN required
41	Network personalization PUK required
42	Network subset personalization PIN required

43	Network subset personalization PUK required
44	Service provider personalization PIN required
45	Service provider personalization PUK required
46	Corporate personalization PIN required
47	Corporate personalization PUK required
48	Hidden key required
49	EAP method not supported
50	Incorrect parameters
100	Unknown
103	Illegal MS
106	Illegal ME
107	GPRS service not allowed
111	PLMN not allowed
112	Location area not allowed
113	Roaming not allowed in this location area
132	Service not supported
133	Service not subscribed
134	Service option temporarily out of order
149	PDP authentication error
150	Invalid mobile class
201	Alternate SIM conflict
500	CTS handover on progress
501	Cellular protocol stack out of service state
502	CTS unspecified error
800	SIM security unspecified error

14.6. Summary of CMS ERROR Codes

Final result code **+CMS ERROR: <err>** indicates an error related to mobile equipment or network. The operation is similar to ERROR result code. None of the following commands in the same command line is executed. Neither **ERROR** nor **OK** result code shall be returned.

<err> values are mostly used by common message commands:

Table 11: Different Coding Schemes of +CMS ERROR: <err>

Code of <err>	Meaning
1	Unassigned (unallocated) number
8	Operator determined barring
10	Call barred
17	Network failure
21	Short message transfer rejected
22	Memory capacity exceeded
27	Destination out of order (service)
28	Unidentified subscriber
29	Facility rejected
30	Unknown subscriber
38	Network out of order (service)
41	Temporary failure
42	Congestion
47	Resource unavailable unspecified
50	Requested facility not subscribed
69	Requested facility not implemented
81	Invalid short message transfer reference value

95	Semantically incorrect message
96	Invalid Mandatory Information
97	Message-type non-existent or not implemented
98	Message not compatible with short message protocol state
99	Information element non-existent or not implemented
111	Protocol error unspecified
127	Interworking unspecified
128	Telematic interworking not supported (MO)
129	Short message type 0 not supported (MO/MT)
130	Cannot replace short message (MO/MT)
143	Unspecified TP-PID error (MO/MT)
144	Data coding scheme (alphabet) not supported (MO)
145	Message class not supported (MT)
159	Unspecified TP-DCS error (MO/MT)
160	Command cannot be actioned (MO)
161	Command unsupported (MO)
175	Unspecified TP-command error (MO)
176	TPDU not supported (MO/MT)
192	Service center (SC) busy (MO)
193	No SC subscription (MO)
194	SC system failure (MO)
195	Invalid short message entity (SME) address (MO)
196	Destination SME barred (MO)
197	SM rejected duplicated SM (MO)
198	TP-VPF (validity period format) not supported (MO)

199	TP-VP (validity period) not supported (MO)
208	(U)SIM SMS storage full (MT)
209	No SMS storage capability in (U)SIM (MT)
210	Error in MS (MT)
211	Memory capacity exceeded (MT)
212	(U)SIM application toolkit busy (MT)
213	(U)SIM data download error (MT)
255	Unspecified error cause (MO/MT)
287	Network failure unspecified
290	Network no resource
300	ME failure
301	SMS ME reserved
302	Operation not allowed
303	Operation not supported
304	Invalid PDU mode
305	Invalid text mode
310	SIM not inserted
311	SIM pin necessary
312	PH SIM pin necessary
313	SIM failure
314	SIM busy
315	SIM wrong
320	Memory failure
321	Invalid memory index
322	Memory full

330	SMSC address unknown
331	No network
332	Network timeout
340	NO CNMA acknowledgement expected
500	Unknown
512	This and the following codes are manufacturer specific. Relay path acknowledgement
513	SMS timer expired
514	SMS forwarding availability failed
515	SMS forwarding availability aborted
516	Invalid TP-MESSAGE-type indicator
517	No TP-status report in phase 1
518	No TP-reject-duplicate in phase 1
519	No TP-reply-path in phase 1
520	No TP-user-data-header in phase 1
521	Missing TP-validity-Period
522	Invalid TP-service--time-stamp
523	Missing TP-destination-address
524	Invalid TP-destination-address
525	Missing Service--address
526	Invalid Service--address
527	Invalid alphabet
528	Invalid TP-user-data-length
529	Missing TP-user-data
530	TP-User-data too long (large)
531	No command request in phase 1

532	Command request invalid TP-destination address
533	Command request invalid TP-user-Data length
534	Command request invalid TP-user-data
535	Command request invalid TP-command-type
536	MN MNR creation failed
538	MS Network connection lost
539	Pending MO SM transfer
540	MO SMS rejected by SIM MO SMS control
541	RP ERROR OK
542	RP ERROR OK no icon display
543	FDN check failed
544	Service center address (SCA) FDN failed
545	Destination address (DA) FDN failed
546	BDN check failed
547	Unspecified SMS PP error
548	No route to destination
549	Channel unacceptable
555	No circuit/channel available
556	Access information discarded
557	Requested circuit/channel not available by other side
558	Quality of service unavailable
560	Bearer capability not authorized
561	Bearer capability not presently available
562	Service or option not available, unspecified
563	Bearer service not implemented

564	ACM equal to or greater than ACM max
565	Only restricted digital information bearer capability is available
566	Service or option not implemented, unspecified
567	User not member of CUG
568	Incompatible by destination
569	Invalid transit network selection
571	Message not compatible with protocol state
572	Recovery on timer expiry
576	Data call active
577	Speech call active
579	MOC setup rejected due to missing ACM info
580	Temporary forbidden call attempt
581	Called party is blacklisted
583	Temporary forbidden call attempt no service
584	Temporary forbidden call attempt limited service
585	Client temporary barred
586	Dual service call active
587	Atc Fclass not speech
590	Client not registered
591	Active client gone
595	Rejected by call control
601	Invalid ALS line
604	MM no service (out of coverage)
605	MM access class barred (RR_REL_IND During RR Conn. Establishment)
606	ME busy -CM service request already pending

608	Rejected due to SUP timer expiry
609	Rejected due to USSD busy
610	Rejected due to SS busy
612	SIM toolkit request is rejected, because another SIM toolkit request is pending
614	Rejected because SIM toolkit request is not yet answered by The user
615	MN setup SS error
616	Call controller blocked (Other Call Command Pending
618	Environment parameter not set correctly (Fclass/Cmod)
619	Other blocking call present
620	Lower Layer Failure
621	The authentication procedure failed
622	The packet-switched registration procedure failed
623	CM service reject from the network
624	The ABORT message was received from the network
625	Timer expiry
626	IMSI detach was initiated
627	Normal RR connection release (2G)
628	Registration failed
630	Failure due to handover
631	Link establishment failure
632	Random access failure
633	Radio link aborted
634	Lower layer failure in layer 1
635	Immediate assignment reject
636	Failure due to paging

637	Abnormal release unspecified
638	Abnormal release channel unacceptable
639	Abnormal release timer expired
640	Abnormal release no act on radio path
641	Preemptive release
642	UTRAN configuration unknown
643	Handover impossible
644	Channel mode unacceptable
647	Lower layer failure from NW
649	Conditional IE error
650	No cell allocation available
653	Re-establishment reject
654	Directed Sigconn Re-establishment
656	Release of RRC connection without network activity (3G) lower layer failure downlink
657	Lower layer failure uplink
658	Cell barred due to authentication failure
659	Signaling connection release
660	CS connection release triggered by MM
661	RRC connection establishment failure
662	RRC connection establishment reject with redirection
663	Resource conflict
664	Layer failure in layer 2
665	L2 cause T200 expiry N200 plus 1 Times
669	RR connection release due to BAND change (2G)
670	Release of the RRC connection due to out of service in Cell_Fach (3G)

671	Release of the RRC connection due to not matching PLMN in shared networks (3G)
672	Error Happens while call is already disconnected/late error
674	SIM toolkit cannot initiate a call, because MMI is not registered
675	SIM toolkit call setup request is rejected due user did not accept
676	Proactive SIM appl terminated by user
677	SIM toolkit originated SIM reset (Refresh Request)
680	Dial string/number incorrect

14.7. Summary of URC

Table 12: Summary of URC

Index	URC Display	Meaning	Condition
1	RDY	ME initialization is successful	N/A
2	+CFUN: 1	All function of the ME is available	N/A
3	+CPIN: <state>	SIM card pin state	N/A
4	+QUSIM: 0	Use SIM card	N/A
5	+QUSIM: 1	Use USIM card	N/A
6	+QIND: SMS DONE	SMS initialization finished	N/A
7	+QIND: PB DONE	Phonebook initialization finished	N/A
8	POWERED DOWN	Module power down	AT+QPOWD
10	+CREG: <stat>	Indicate registration status of the ME	AT+CREG=1
11	+CREG: <stat>[,<lac>,<ci>[,<Act>]]	After cell neighborhood changing shows whether the network has currently indicated the registration of the ME, with location area code	AT+CREG=2
12	+CGREG: <stat>	Indicate network registration status of the ME	AT+CGREG=1

13	+CGREG: <stat>[,<lac>,<ci>[,<Act>]]	Indicate network registration and location information of the ME	AT+CGREG=2
14	+CMTI: <mem>,<index>	New message is received, and saved to memory	See AT+CNMI
15	+CMT: [<alpha>],<length><CR><LF><pdu>	New short message is received and output directly to TE (PDU mode)	See AT+CNMI
16	+CMT: <oa>[,<alpha>],<scts>[,<tooa>,<fo>,<pid>,<dcs>,<sca>,<tosca>,<length>]<CR><LF><data>	New short message is received and output directly to TE (Text mode)	See AT+CNMI
17	+CBM: <length><CR>	New CBM is received and output directly (PDU mode)	See AT+CNMI
18	+CBM: <sn>,<mid>,<dcs>,<page>,<pages>,<CR>,<LF><data>	New CBM is received and output directly to TE (Text mode)	See AT+CNMI
19	+CDS:<length><CR><LF><pdu>	New CDS is received and output directly (PDU mode)	See AT+CNMI
20	+CDS:<fo>,<mr>,[<ra>],[<tora>],<scts>,<dt>,<st>	New CDS is received and output directly to TE (Text mode)	See AT+CNMI
21	+COLP: <number>,<type>,[<subaddr>],[<satype>],[<alpha>]	The presentation of the COL(connected line) at the TE for a mobile originated call	AT+COLP=1
22	+CLIP: <number>,<type>,[subaddr],[satype],[<alpha>],<CLI validity>	Mobile terminating call indication	AT+CLIP=1
23	+CRING: <type>	An incoming call is indicated to the TE with unsolicited result code instead of the normal RING	AT+CRING=1
24	+CCWA: <number>,<type>,<class>[,<alpha>]	Call waiting indication	AT+CCWA=1,1
25	+CSSI: <code1>	Shows the +CSSI intermediate result code presentation status to the TE	AT+CSSN=1
26	+CSSU: <code2>	Shows the +CSSU unsolicited result code presentation status to the TE	AT+CSSN=<n>,1
27	+CUSD:	USSD response from the network, or a	AT+CUSD=1

	<status>[,<rspstr>[,<dcsg>]]	network initiated operation	
28	+CGEV: NW DETACH	The network has forced a Packet Domain detach	AT+CGEREP=2,1
29	+CGEV: ME DETACH	The mobile equipment has forced a Packet Domain detach	AT+CGEREP=2,1
30	+CGEV: NW CLASS <class>	The network has forced a change of MS class	AT+CGEREP=2,1
31	+CGEV: ME CLASS <class>	The mobile equipment has forced a change of MS class	AT+CGEREP=2,1

14.8. Parameter List of AT+CEER

Table 13: Cause and Description List of AT+CEER

Cause	Description
0	No cause information available
1	Unassigned (unallocated) number
3	No route destination
6	Channel unacceptable
8	Operator determined barring
16	Normal call clearing
17	User busy
18	No user responding
19	User alerting, no answer
21	Call rejected
22	Number changed
26	Non selected user clearing
27	Destination out of order
28	Invalid number format (incomplete number)
29	Facility rejected

30	Response to STATUS ENQUIRY
31	Normal, unspecified
34	No circuit /channel available
38	Network out of order
41	Temporary failure
42	Switching equipment congestion
43	Access information discarded
44	Requested circuit/channel not available
47	Resources unavailable, unspecified
49	Quality of service unavailable
50	Requested facility not subscribed
55	Incoming calls barred with in the CUG
57	Bearer capability not authorized
58	Bearer capability not presently available
63	Service or option not available, unspecified
65	Bearer service not implemented
68	ACM equal to or greater than ACM max
69	Requested facility not implemented
70	Only restricted digital information bearer capability is available
79	Service or option not implemented, unspecified
81	Invalid transaction identifier value
87	user not member of CUG
88	Incompatible destination
91	Invalid transit network selection
95	Semantically incorrect message
96	Invalid mandatory information

97	Message type non-existent or not implemented
98	Message type not compatible with protocol state
99	Information element non-existent or not implemented
100	Conditional IE error
101	Message not compatible with protocol state
102	Recovery on timer expiry
103	Illegal MS
106	Illegal ME
107	GPRS service not allowed
111	protocol error, unspecified
112	Location area not allowed
113	Roaming not allowed in this location area
124	MBMS bearer capabilities insufficient for the service
125	LLC or SMDCP failure
126	Insufficient resources
127	Missing or unknown APN
128	Unknown PDP address or PDP type
129	User authentication failed
130	Activation rejected by GGSN
131	Activation reject, unspecified
132	Service not supported
133	Requested service option not subscribed
134	Service option temporarily out of order
135	NSAPI already used
136	Regular PDP context deactivation
137	QoS not accepted

138	Network failure
139	Reactivation requested
140	Feature not supported
141	Semantic error in the TFT operation
142	Syntactical error in the TFT operation
143	Unknown PDP context
144	Semantic errors in packet filter(s)
145	Syntactical errors in packet filter(s)
146	PDP context without TFT already activated
148	Unspecified GPRS error
149	PDP authentication error
212	APN restriction
256	Internal unspecified
257	Out of memory
258	Invalid parameters
259	Data call active
260	Speech call active
262	Missing ACM information
263	Temporary forbidden
264	Called party is blacklisted
265	Blacklist is full
266	No Service
267	Limited service
268	Client conflict
269	Dual Service call active
271	Unknown SIM error

274	Active client is gone
277	SIM status failure
278	Rejected by call control
279	FDN failed
280	BDN failed
283	CCBS possible
284	Invalid alternate service line
285	LND overview
287	MM network failure unspecified
288	MM no service
289	MM access class barred
290	MM RR no resource
291	MM ME busy
292	MM unspecified
301	MMI not registered
303	Rejected by user
304	Rejected due to time out
306	Disconnected due to SIM TK call setup
307	Pending SIM TK call setup
310	SIM reset
340	MM sapi3 release
341	MM lower layer failure
342	MM authentication failure
343	MM PS reject
344	MM service rejected
345	MM abort by network

346	MM timeout
347	MM detach
348	MM RR connection release
349	MM not registered
350	MM reestablishment failure
351	Failure due to handover
352	Link establishment failure
353	Random access failure
354	Radio link aborted
355	Lower layer failure in Layer 1
356	Immediate Assignment Reject
357	Failure due to paging
358	Abnormal release unspecified
359	Abnormal release channel unacceptable
360	Abnormal release timer expired
361	Abnormal release no act on radio path
362	Preemptive release
363	UTRAN configuration unknown
364	Handover impossible
365	Channel mode unacceptable
366	Frequency not implemented
367	Originator leaving call group area
368	Lower layer failure from network
369	Call already cleared
370	Semantically incorrect message
371	Invalid mandatory info

372	Message type non existing
373	Message type incompatible in state
374	Conditional information element error
375	No cell allocation available
376	Protocol error unspecified
377	Normal event
378	Unspecified
379	Preemptive release
380	Congestion
381	RE establishment reject
382	Directed sig conn establishment
383	User inactivity
384	Lower layer failure downlink
385	Lower layer failure uplink
386	Cell barred due to authentication failure
387	Signaling connection release
388	CS connection release triggered by MM
389	RRC connection establishment failure
390	RRC connection establishment reject with redirection
391	Resource conflict
392	Layer 2 sequence error
393	Layer 2 T200 exp N200 plus 1 times
394	Layer 2 unsolicited DM resp MFES
395	Layer 2 contention resolution
396	Layer 2 normal cause
397	RR connection release due to BAND change (2G)

400	MM RR connection error while release
500	16 Normal call clearing cause extension: user disconnected
510	16 Normal call clearing cause Extension: Remote user/NW disconnected for call status is rather than CALL PROCEEDING
511	16 Normal call clearing cause Extension: Remote user/NW disconnected for call status is CALL PROCEEDING
512	Request rejected, BCM violation

Quectel
Confidential