




扫描二维码
获得更多产品详情



Scan the QR code for more
more product details


风火轮机器人 Flamewheel Robot

安装手册 Instruction Manual

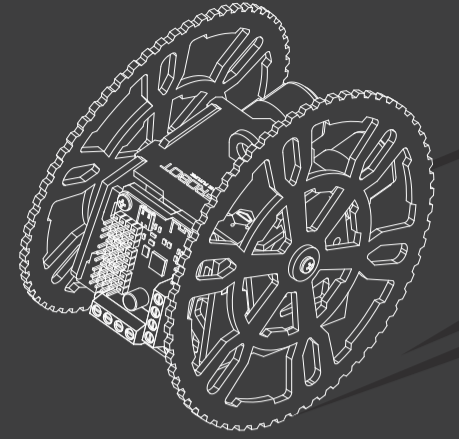



网站: www.dfrobot.com.cn
电话: 86-21-61620183
技术支持: Techsupport@dfrobot.com
地址: 上海市浦东新区亮秀路112号Y1座615室

 Website: www.dfrobot.com
Tel: 86-21-61620183
Service: Techsupport@dfrobot.com
Address: Rm. 615, Bldg Y1, NO.112, Liangxiu Rd., Pudong, China

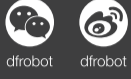

© 本说明书最终解释权归DFRobot所有

© DFRobot has the final authority of interpretation on this manual.

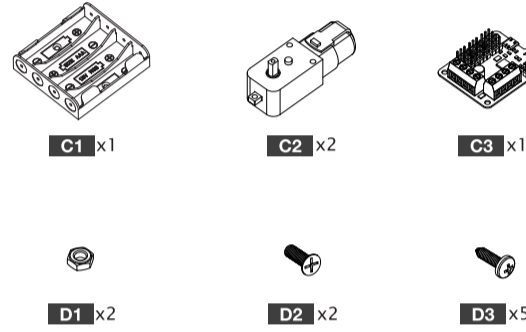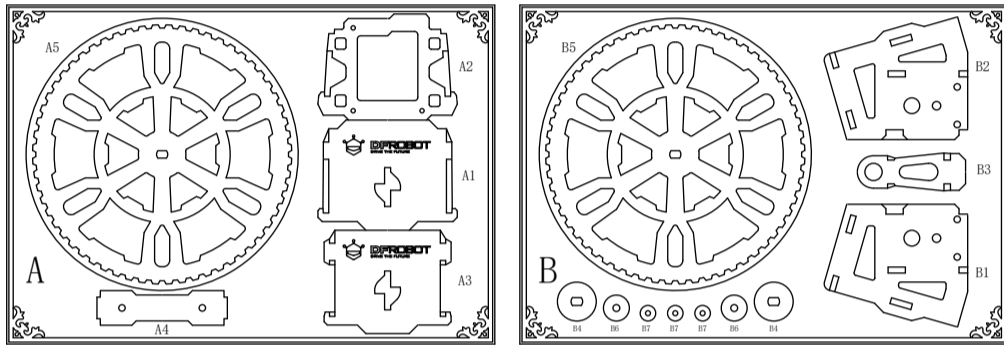

所需工具 / Tools Required

* 套件不含工具和电池
* The suite does not contain tools and batteries.



M3 十字螺丝刀
M3 Cross Screwdriver

请按组装顺序依次拆卸零件。

* 6岁以下儿童请在家长陪同下完成, 避免发生吞食情况。

Please follow the sequence of the assembling to disassemble the parts.


* Children under six years must be in the company of parents to avoid ingestion.

1

2

请按**A1**红色图标位置放置零件。


Please follow the **A1** red instruction to set the part.

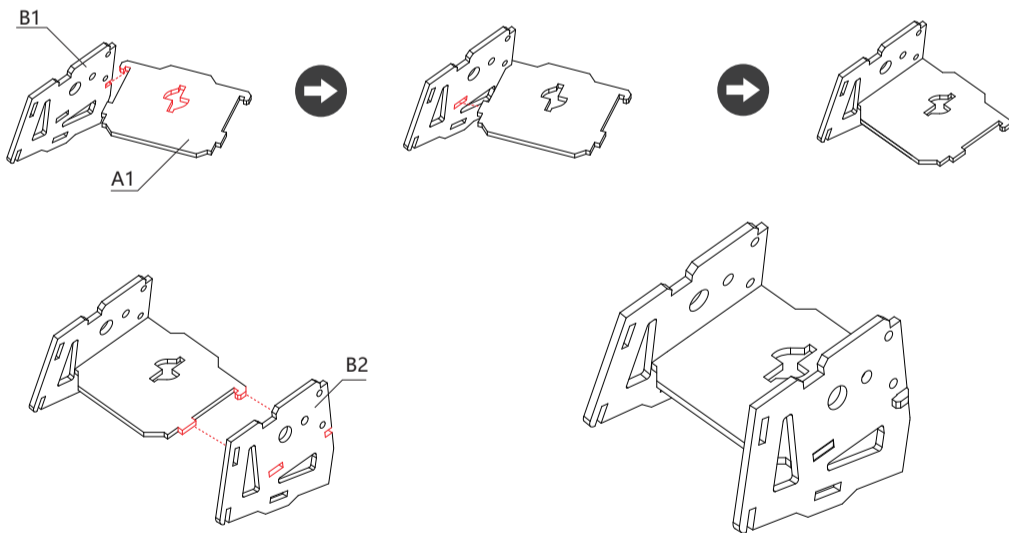

3

请检查**A2**圆孔位置是否正确。

Please check and confirm the position of **A2** circular holds.

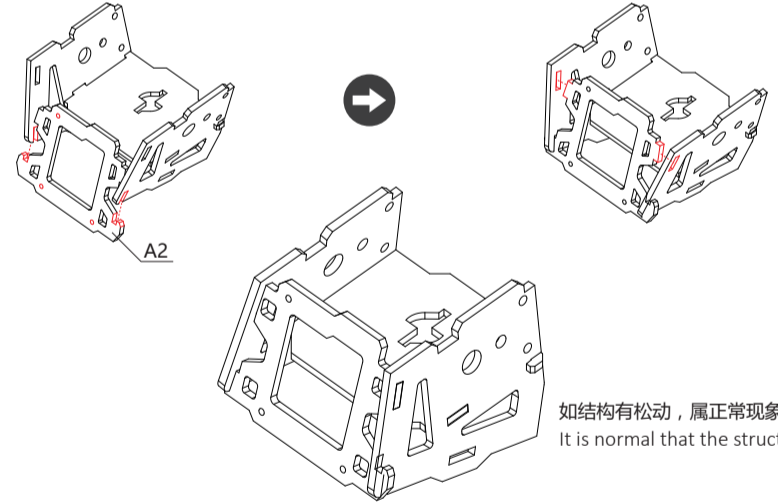


如结构有松动, 属正常现象。
It is normal that the structure is untighten.


4

请按**A3**红色图标位置放置零件。

Please follow the **A3** red icon instruction to set the part.

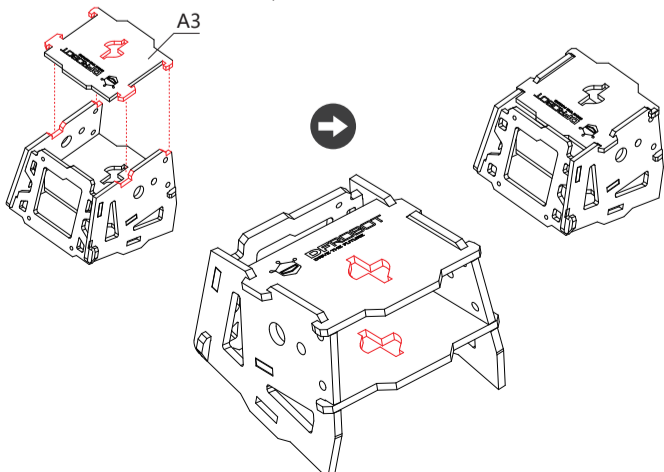


请检查红色图标位置是否一致。
Please check and confirm the position of red icon in accordance.

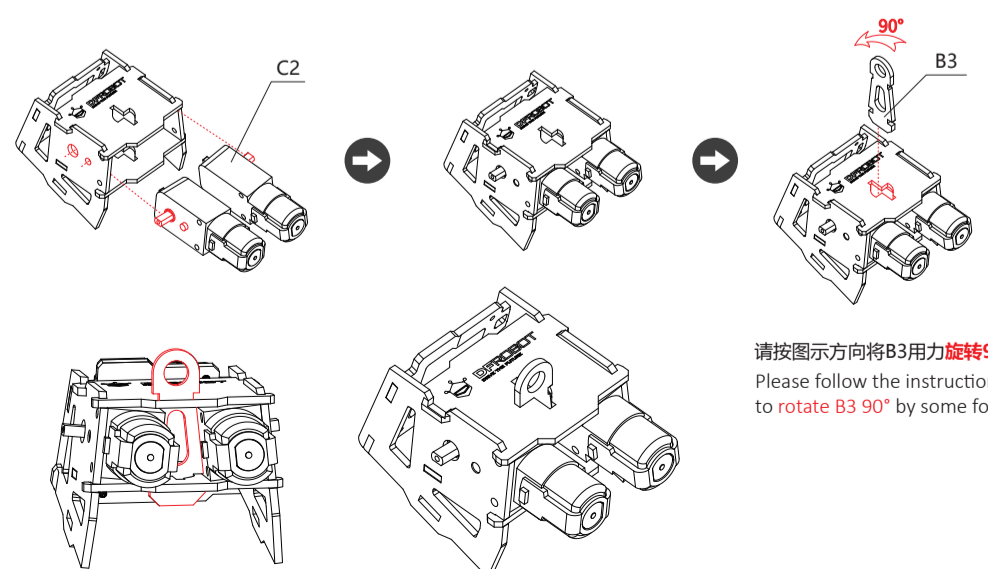


请按图示方向将**B3**用力**旋转90°**。
Please follow the instruction to **rotate B3 90°** by some force.

5

6

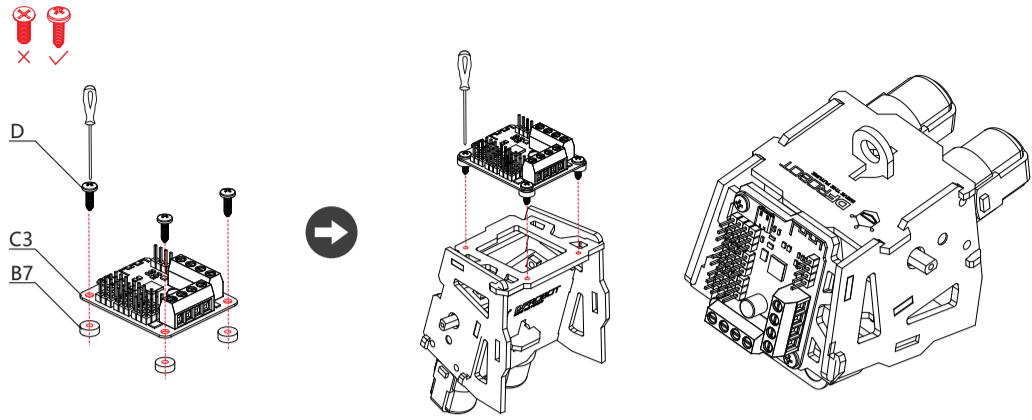

7

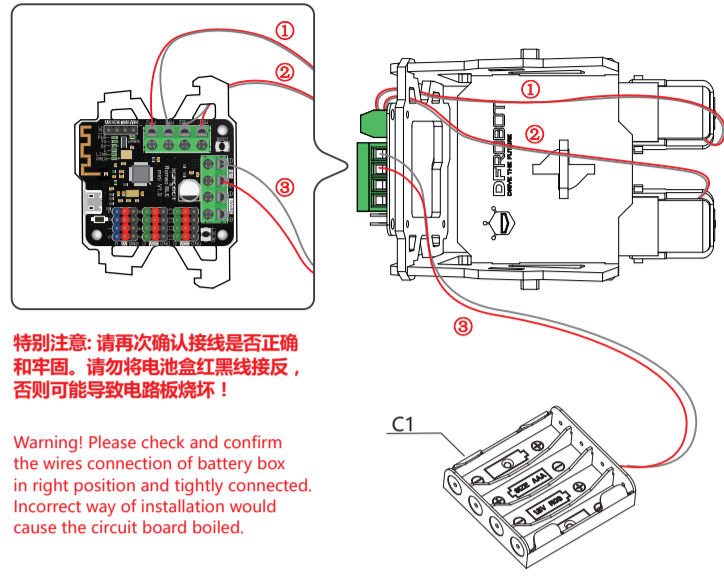

接线柱使用方法:

Instruction of binding post:

(a) 请先拧松螺丝。

(a) Loose the screw.




(b) 插入连接线。

(b) Insert the wire.




(c) 再拧紧螺丝。

(c) Tighten the screw.

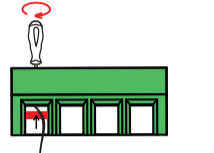


8

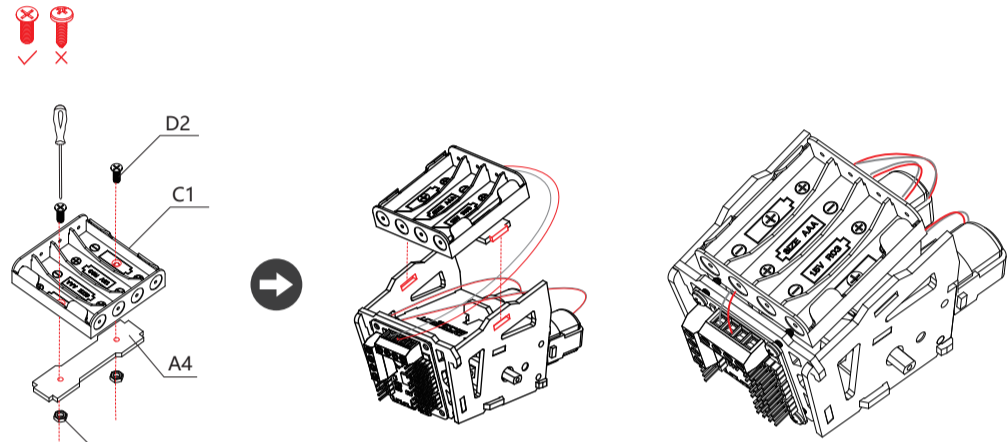


请将线放于电池盒下方。
Please set the wire under the battery box.

9

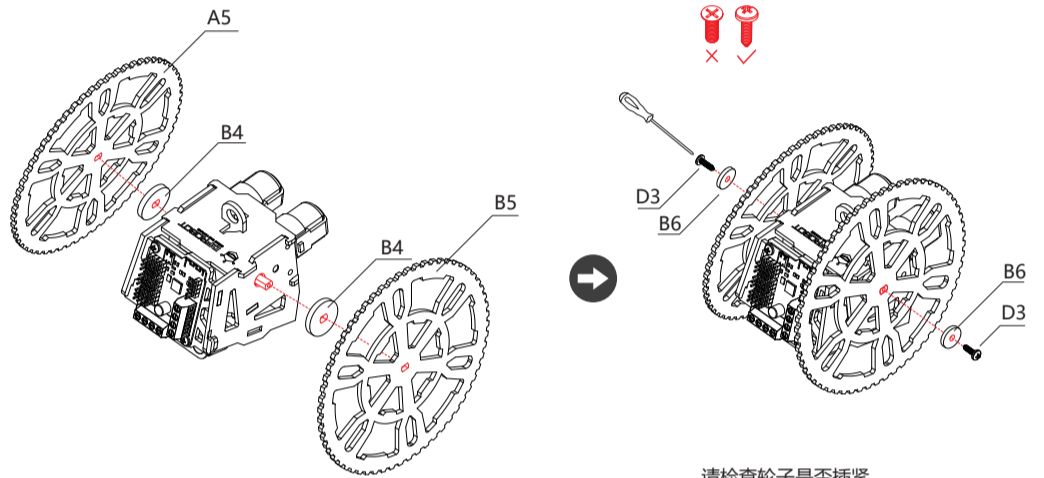

请检查轮子是否插紧。
Please check that the wheels seated.

10

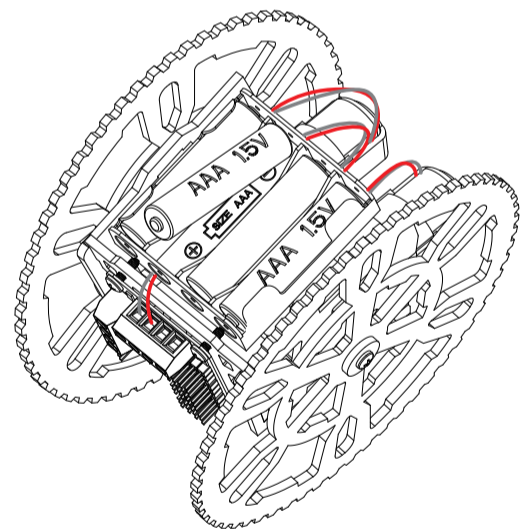

请按正确极性安装电池, 同时电源指示灯点亮。请勿将不同类型或者新旧电池混用。

* 如出现电源指示灯不亮的情况, 请检查电池盒接线是否正确和牢固。或者电池极性是否装反。

Please install batteries in the correct polarity. The power LED will light when power is on. Please do not mix different types or old and new batteries.

* If the Power LED does not light, please check and confirm the wires connection of battery box in right position and tightly connected, or the batteries are in the wrong polarity.

11

STEP 1: 扫描二维码, 下载软件GoBLE。
STEP 1: Scan QR code, download the APP— GoBLE



(仅支持iOS平台)
Only supports iOS platform


STEP 2: 请进入手机的设置界面, 启动蓝牙功能。
STEP 2: Please enter the phone settings interface, turn on the Bluetooth function.



12

STEP 3: 打开APP, 将手机靠近风火轮, 进行蓝牙自动连接。
STEP 3: Open the APP, put the phone close to Flamewheel Robot, process automatic Bluetooth connection.


蓝牙图标呈绿色, 表示蓝牙设备已连接
The Bluetooth icon in green means that the Bluetooth device is online.

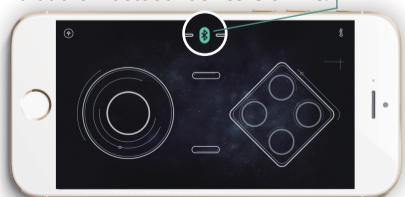

* 如出现蓝牙连接失败或者连接后无法操控的情况, 请先断开设备电源, 重启APP, 重新建立蓝牙连接。目前暂不支持多台设备同时操控。

13

Link 灯亮, 表示蓝牙连接成功
The Link LED lighten means the Bluetooth connection succeeded.

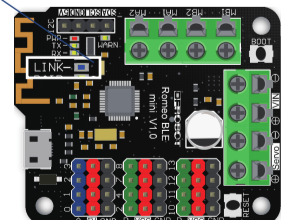

* If Bluetooth connection fails or robot is uncontrollable after connection. Power off the robot, restart the app and reconnect the Bluetooth.
Currently it does not support multiple devices to control at the same time.

STEP 4: 通过摇杆和按键, 操控风火轮运动方向。
STEP 4: Use rocker and buttons to control the direction of the Flamewheel Robot motion.



* 如出现风火轮操控方向与运动方向不一致的情况, 请检查电机C2的红黑两线是否接反。

* If the direction of Flamewheel Robot motion does not accord with direction of control, please check and confirm the red and black wires connection of the motor C2 in the right polarity.

14