


BCM	wPi	3.3V	P4	5V	wPi	BCM
2	8	P SDA	1	5V		
3	9	P SCL	2	GND		
4	7	P4	3	P TX	15	14
		GND	4	P RX	16	15
17	0	P17	5	GND	1	18
27	2	P27	6	P23	4	23
22	3	P22	7	P24	5	24
		3.3V	8	GND		
10	12	P MOSI	9	P25	6	25
9	13	P MISO	10	P CE0	10	8
11	14	P SCK	11	P CE1	11	7
		GND	12	ID SC		
		ID SD	13	GND		
5	21	P5	14	P12	26	12
6	22	P6	15	GND		
13	23	P13	16	P16	27	16
19	24	P19	17	P20	28	20
26	25	P26	18	P21	29	21
		GND	19			
			20			
			21			
			22			
			23			
			24			
			25			
			26			
			27			
			28			
			29			
			30			
			31			
			32			
			33			
			34			
			35			
			36			
			37			
			38			
			39			
			40			

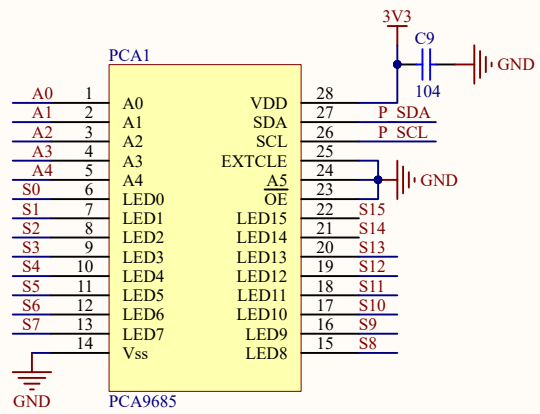

Servo Driver HAT