




MAKER-OBJECT

Simplifying Object Sensor for Beginner

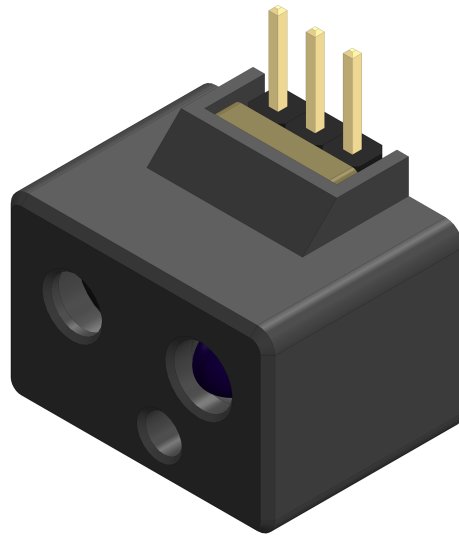


Datasheet

Rev 1.0
December 2019

Information in this publication regarding device applications and the like is intended through suggestion only and may be superseded by updates. It is your responsibility to ensure that your application meets with your specifications. No representation or warranty is given and no liability is assumed by Cytron Technologies Incorporated with respect to the accuracy or use of such information or infringement of patents or other intellectual property rights arising from such use or otherwise. Use of Cytron Technologies's products as critical components in life support system is not authorized except with express written approval by Cytron Technologies. No licenses are conveyed, implicitly or otherwise, under any intellectual property rights.

1. BOARD LAYOUT & FUNCTION

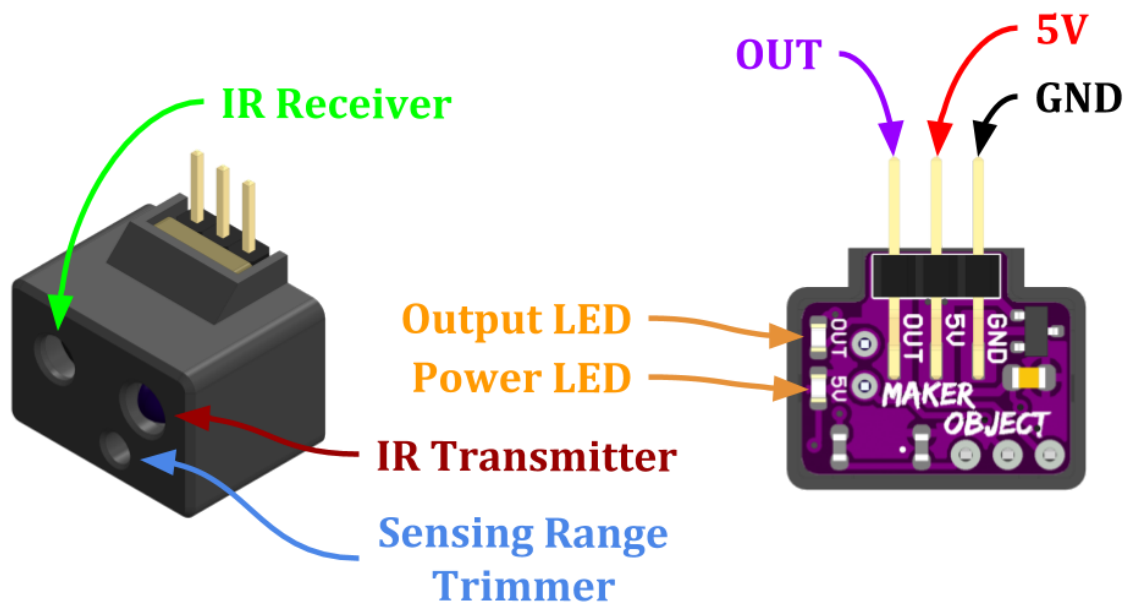


Function	Description
IR Transmitter	Infrared LED that transmits the modulated infrared light.
IR Receiver	Infrared receiver that receives the reflected infrared light from the object. This receiver has a built-in bandpass filter of 38kHz.
Sensing Range Trimmer	Adjust the object detection range.
Power LED	Turn on when the sensor is power up.
Output LED	Turn on when object is detected.
Connector	Connector: <ul style="list-style-type: none"> • 5V : Power input for the Maker Object. • GND : Ground. • OUT : NPN output with internal pull up. Output LOW when object is detected (Active Low). The power input has reversed polarity protection.

2. SPECIFICATIONS


No	Parameters	Min	Max	Unit	
1	VCC Voltage	4.5	5.5	V	
2	Output Voltage (NPN Output with Internal Pull Up)	Object Detected	0	0.8	V
		No Object Detected	VCC - 0.5	VCC	V
3	Sensing Distance (Adjustable)	White Surface (A4 Size)	40	140	cm
		Black Surface (A4 Size)	15	60	cm

3. DIMENSION

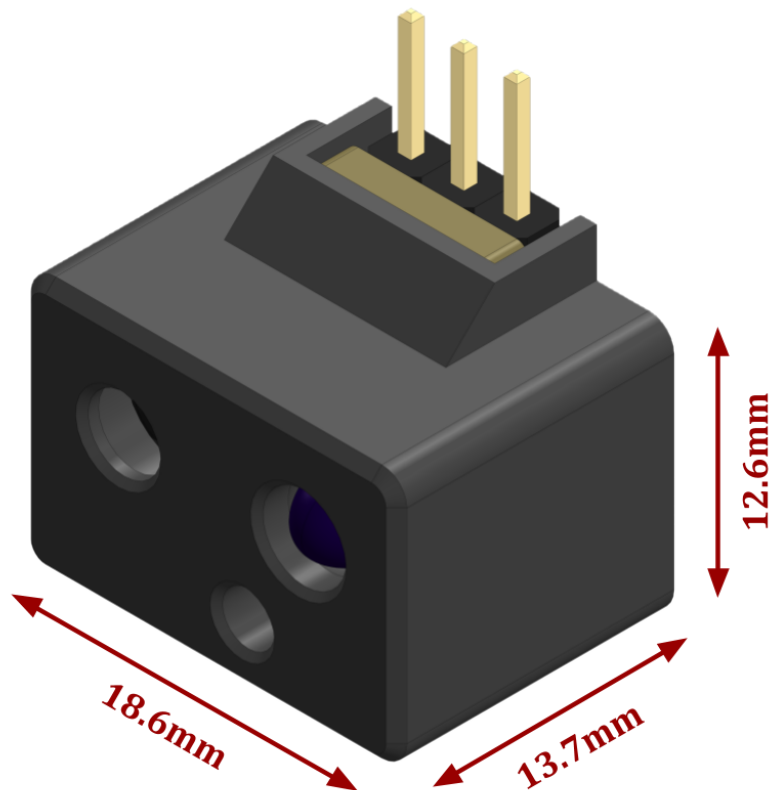

4. ADJUSTING SENSING RANGE

The sensing distance of the Maker Object can be adjusted using a small Phillips head screwdriver via the small opening at the front of the sensor.

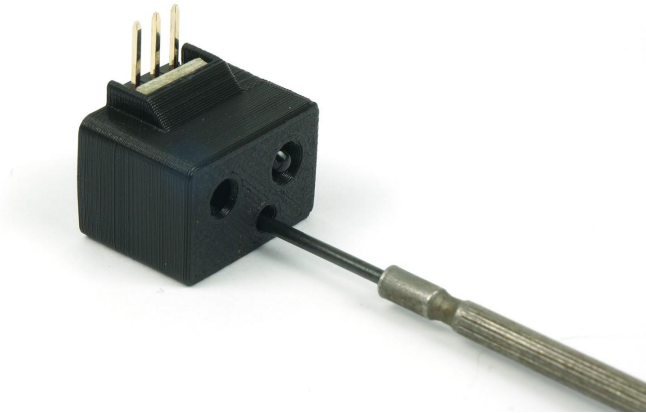

- **Maximum Distance** - To set the range to maximum, power on the sensor and turn the trimmer clockwise until the output LED turn off. Turn back counter-clockwise slowly until the LED just turn on. This will be the maximum sensing distance for the sensor.
- **Minimum Distance** - To set the range to minimum, power on the sensor and turn the trimmer counter-clockwise until the output LED turn off. Turn back clockwise slowly until the LED just turn on. This will be the minimum sensing distance for the sensor.

Prepared by:

Cytron Technologies Sdn Bhd

www.cytron.io

No. 1, Lorong Industri Impian 1,
Taman Industri Impian,
14000 Bukit Mertajam,
Penang, Malaysia.

Tel: +604 - 548 0668

Fax: +604 - 548 0669

Email:

support@cytron.io

sales@cytron.io