



OAK-FFC Kit Assembly Instruction

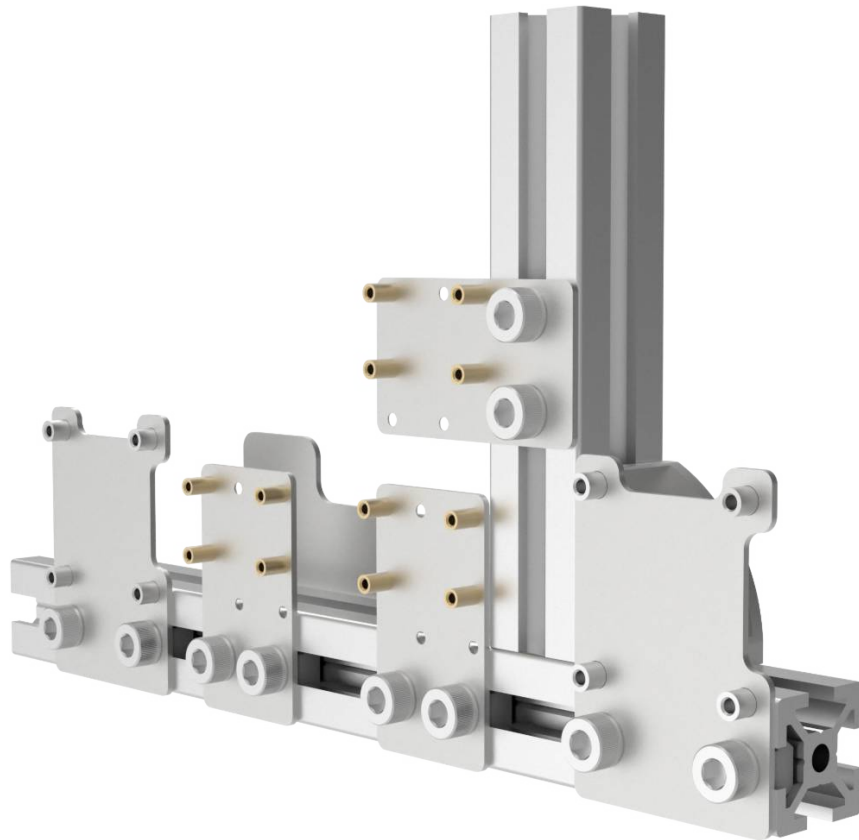


Step 1


Charging port on the marking side

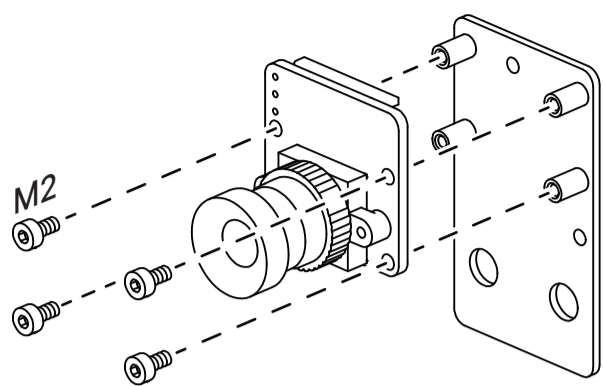

M2 screws for
FFC-small-board-camera-holder



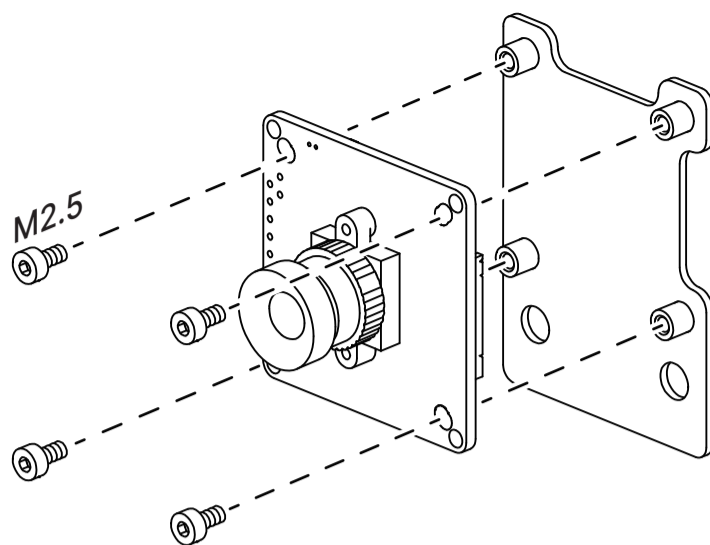


M2.5 screws for
FFC-AR0234 and OAK-FFC-holder

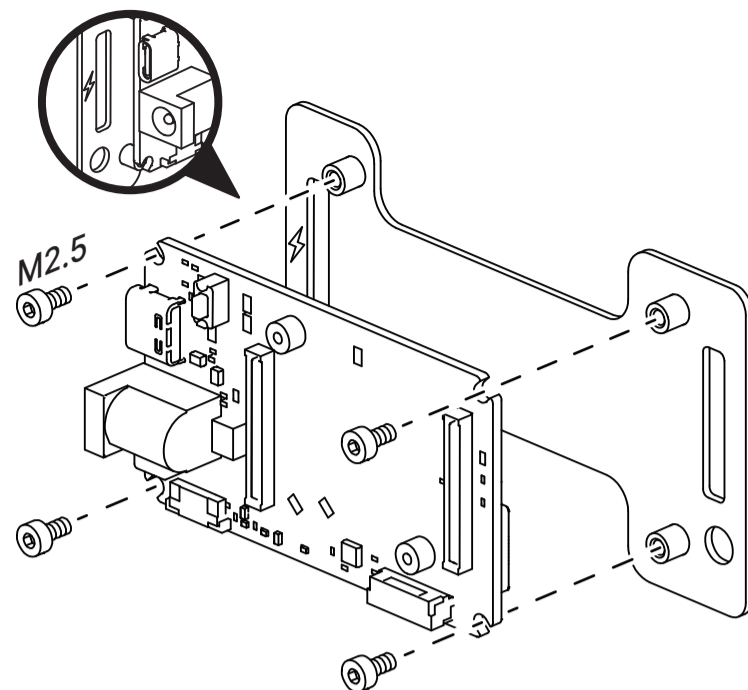

Step 2

For vertical baseline

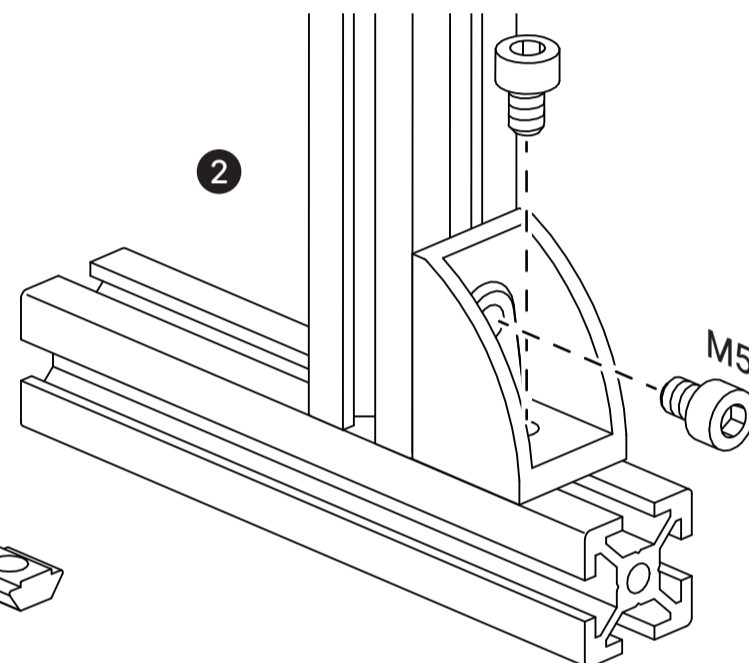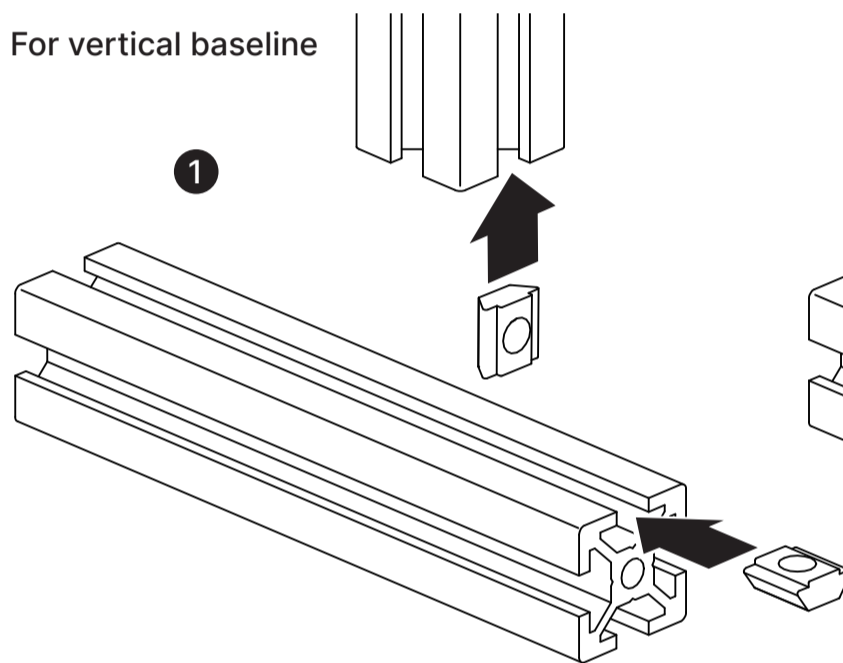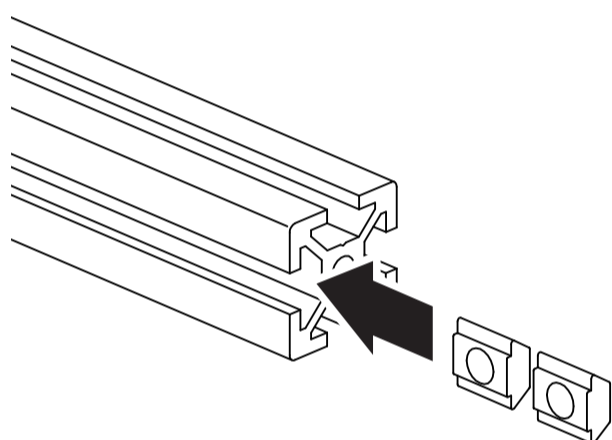

Step 3

3 Connect the boards with FFC cable

