


L10

Quectel GPS Engine

Hardware Design

L10_HD_V1.01

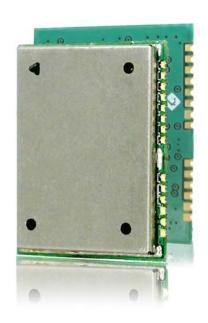



Document Title	L10 Hardware Design
Revision	1.01
Date	2009-11-16
Status	Release
Document Control ID	L10_HD_V1.01

General Notes

Quectel offers this information as a service to its customers, to support application and engineering efforts that use the products designed by Quectel. The information provided is based upon requirements specifically provided for Quectel by the customers. Quectel has not undertaken any independent search for additional relevant information, including any information that may be in the customer's possession. Furthermore, system validation of this product designed by Quectel within a larger electronic system remains the responsibility of the customer or the customer's system integrator. All specifications supplied herein are subject to change.

Copyright

This document contains proprietary technical information which is the property of Quectel Limited, copying of this document and giving it to others and the using or communication of the contents thereof, are forbidden without express authority. Offenders are liable to the payment of damages. All rights reserved in the event of grant of a patent or the registration of a utility model or design. All specification supplied herein are subject to change without notice at any time.

Copyright © Quectel Wireless Solutions Co., Ltd. 2009

L10_HD_V1.01 -1-



Contents

0 Revision history	6
1 Introduction	7
1.1 Related documents	7
1.2 Terms and abbreviations	7
2 Product concept	9
2.1 Key features	9
2.2 Functional diagram	10
2.3 Evaluation board	
2.4 Assisted GPS	11
2.5 Protocol	11
3 Application interface	12
3.1 Pin description	12
3.2 Operating modes	
3.3 Power supply	14
3.4 Turn on and Turn off	14
3.4.1 Turn on	14
3.4.2 Turn off	16
3.5 Power saving	
3.5.1 Enter standby mode	
3.5.2 Exit from standby mode	16
3.6 RTC backup	
3.7 UART interface	
3.8 USB interface	20
3.9 Software upgrade	21
3.10 EXTINT0	21
3.11 AOK	21
3.12 I2C interface	22
4 Antenna interface and supervisor	23
4.1 Antenna	23
4.2 Antenna supply	24
4.2.1 Passive antenna	24
4.2.2 Active antenna	25
5 Electrical, reliability and radio characteristics	27
5.1 PIN assignment of the module	27
5.2 Absolute maximum ratings	28
5.3 Operating conditions	28
5.4 Current consumption	29
5.5 Electro-static discharge	29
5.6 Reliability test	30
6 Mechanics	31
L10_HD_V1.01	- 2 -



6.1 Mechanical dimensions of the module	31
6.2 Footprint of recommendation	33
6.3 Top view of the module	35
6.4 Rottom view of the module	35





Table Index

TABLE 1: RELATED DOCUMENTS	7
TABLE 2: TERMS AND ABBREVIATIONS	7
TABLE 3: MODULE KEY FEATURES	9
TABLE 4: THE MODULE SUPPORTS PROTOCOL	11
TABLE 5: PIN DESCRIPTION	12
TABLE 6: OVERVIEW OF OPERATING MODES	14
TABLE 7: PIN DEFINITION OF THE V_BCKP PIN	17
TABLE 8: PIN DEFINITION OF THE UART INTERFACES	18
TABLE 9: PIN DEFINITION OF USB INTERFACE	20
TABLE 10: PIN DEFINITION OF THE EXTINT0	
TABLE 11: PIN DEFINITION OF THE AOK	21
TABLE 12: PIN DEFINITION OF THE I2C INTERFACE	
TABLE 13: PIN DEFINITION OF THE AADET_N	23
TABLE 14: AADET_N AND ACTIVE ANTENNA	24
TABLE 15: ANTENNA SPECIFICATION FOR L10 MODULE	
TABLE 16: L10 PIN ASSIGNMENT	27
TABLE 17: ABSOLUTE MAXIMUM RATINGS	28
TABLE 18: THE MODULE POWER SUPPLY RATINGS	28
TABLE 19: THE MODULE CURRENT CONSUMPTION (PASSIVE ANTENNA)	29
TABLE 20: THE ESD ENDURANCE TABLE (TEMPERATURE: 25°C, HUMIDITY: 45 %)	30
TARLE 21: DELIARII ITV TEST	30



Figure Index

FIGURE 1: MODULE FUNCTIONAL DIAGRAM	11
FIGURE 2: REFERENCE RESET CIRCUIT USING OC CIRCUIT	15
FIGURE 3: REFERENCE RESET CIRCUIT USING BUTTON	15
FIGURE 4: TIMING OF RESTART SYSTEM	16
FIGURE 5: RTC SUPPLY FROM NON-CHARGEABLE BATTERY OR CAPACITOR	17
FIGURE 6: REFERENCE CHARGING CIRCUIT FOR CHARGEABLE BATTERY	17
FIGURE 7: SEIKO XH414H-IV01E CHARGE CHARACTERISTIC	18
FIGURE 8: CONNECTION OF SERIAL INTERFACES	19
FIGURE 9: RS-232 LEVEL SHIFT CIRCUIT	20
FIGURE 10: USB INTERFACE CIRCUIT	21
FIGURE 11: EXTERNAL DETECT CIRCUIT FOR OPEN-CIRCUIT OF ACTIVE ANTENNA	23
FIGURE 12: REFERENCE DESIGN FOR PASSIVE ANTENNA	24
FIGURE 13: ACTIVE ANTENNA BIASING	25
FIGURE 14: ACTIVE ANTENNA WITH VCC_RF	25
FIGURE 15: ACTIVE ANTENNA WITH EXTERNAL LDO	26



0 Revision history

Revision	Date	Author	Description of change
1.00	2009-07-05	Yong AN/Samuel HONG	Initial
1.01	2009-11-16	Yong AN/Samuel HONG	1. Add NMEA message type of
			module output in default.
			2. Add descriptions about relation
			between USB interface and standby
			mode.

L10_HD_V1.01 - 6 -



1 Introduction

This document defines and specifies the L10 GPS module. It describes L10 hardware interface and its external application reference circuits, mechanical size and air interface.

This document can help you quickly understand module interface specifications, electrical and mechanical details. With the help of this document and other application notes, you can use L10 module to design and set up your applications quickly.

1.1 Related documents

Table 1: Related documents

SN	Document name	Remark
[1]	L10_HD_AN	L10 Hardware Design Application Notes
[2]	L10_EVB_UGD	L10 EVB User Guide
[3]	L10_GPS_Protocol	L10 GPS Protocol Specification

1.2 Terms and abbreviations

Table 2: Terms and abbreviations

Abbreviation	Description
BEE	Broadcast Ephemeris Extension
EMC	Electromagnetic Compatibility
ESD	Electrostatic Discharge
EPO	Extended Prediction Orbit
EGNOS,	European Geostationary Navigation Overlay Service
GPS	Global Positioning System
GNSS	Global Navigation Satellite System
GGA	GPS Fix Data
GLL	Geographic Position – Latitude/Longitude
GSA	GNSS DOP and Active Satellites
GSV	GNSS Satellites in View
HDOP	Horizontal Dilution of Precision
IC	Integrated Circuit
I/O	Input/Output
Kbps	Kilo Bits Per Second

L10_HD_V1.01 -7-



LNA	Low Noise Amplifier	
MSAS	Multi-Functional Satellite Augmentation System	
NMEA	National Marine Electronics Association	
OMA	Open Mobile Alliance	
PDOP	Position Dilution of Precision	
PMTK	MTK Private Protocol	
RMC	Recommended Minimum Specific GNSS Data	
RTCM	Radio Technical Commission for Maritime Services	
SBAS	Satellite-based Augmentation System	
SUPL	Secure User Plane Location	
SAW	Surface Acoustic Wave	
USB	Universal Serial Bus	
UART	Universal Asynchronous Receiver & Transmitter	
VDOP	Vertical Dilution of Precision	
VTG	Course over Ground and Ground Speed, Horizontal Course and Horizontal	
	Velocity	
WAAS	Wide Area Augmentation System	
ZDA	Time & Date	
Inorm	Normal Current	
Imax	Maximum Load Current	
Vmax	Maximum Voltage Value	
Vnorm	Normal Voltage Value	
Vmin	Minimum Voltage Value	
VIHmax	Maximum Input High Level Voltage Value	
VIHmin	Minimum Input High Level Voltage Value	
VILmax	Maximum Input Low Level Voltage Value	
VILmin	Minimum Input Low Level Voltage Value	
VImax	Absolute Maximum Input Voltage Value	
VImin	Absolute Minimum Input Voltage Value	
VOHmax	Maximum Output High Level Voltage Value	
VOHmin	Minimum Output High Level Voltage Value	
VOLmax	Maximum Output Low Level Voltage Value	
VOLmin	Minimum Output Low Level Voltage Value	

L10_HD_V1.01 -8-



2 Product concept

The L10 GPS module brings the high performance of the MTK positioning engine to the industrial standard. The module supports 210 PRN channels. With 66 search channels and 22 simultaneous tracking channels, it acquires and tracks satellites in the shortest time even at indoor signal level. This versatile, stand-alone receiver combines an extensive array of features with flexible connectivity options. The embedded FLASH memory provides capacity for storing user-specific configuration settings and allows for future updates. L10 advanced jamming suppression mechanism and innovative RF architecture provides a high level of immunity for jamming, ensuring maximum GPS performance. The module supports location, navigation and industrial applications including autonomous GPS C/A, SBAS (including WAAS, EGNOS, MSAS), DGPS (RTCM), and AGPS.

The L10 is an SMD type module with the compact 22.4mm x 17.0mm x 3.0 mm form factor, which can be embedded in customer applications through the 28-pin pads. It provides all hardware interfaces between the module and customer's board.

- The UART port can help to develop customer's application easily.
- The USB port is available for faster data transmission and more flexibility
- The antenna interface supports passive and active antenna.

The module is fully RoHS compliant to EU regulation.

2.1 Key features

Table 3: Module key features

Feature	Implementation
Power supply	Single supply voltage: 3.0V – 4.3V typical: 3.3V
Power consumption	Acquisition 43mA
(passive antenna)	• Tracking 38mA
	• Standby 2mA
Receiver Type	• GPS L1 1575.42MHz C/A Code
	66 search channels, 22 simultaneous tracking channels
Sensitivity	Cold Start (Autonomous) -147 dBm
	● Reacquisition -160 dBm
	● Hot start -160 dBm
	● Tracking -165 dBm
Time-To-First-Fix	Cold Start (Autonomous) 35s average
	Warm Start (Autonomous) 35s average
	● Hot Start (Autonomous) <1.2 s
	● EPO, BEE 5 ~10s
	● SUPL 5 ~10s

L10_HD_V1.01 -9-



Position Accuracy	• Without Aid 3.0 m 2D-RMS	
j	● DGPS 2.5 m	
Max Update Rate	● 5Hz	
Accuracy of 1PPS Signal	Typical accuracy 61 ns	
	Time pulse adjustable from 1ms to 999ms, default 100ms	
Velocity Accuracy	• Without Aid 0.1 m/s	
	● DGPS 0.05 m/s	
Acceleration Accuracy	• Without Aid 0.1 m/s ²	
	● DGPS 0.05 m/s²	
Dynamic Performance	Maximum Altitude 18,000 m	
	Maximum Velocity 515 m/s Maximum	
	• Acceleration 4 G	
UART Port	UART Port: two lines TXD1 and RXD1	
	• Supports baud rate from 4800bps to 115200bps.	
	• UART Port is used for NMEA outputting or inputting, PMTK	
	private messages inputting and firmware upgrade	
USB Port	Support USB 2.0 full-speed compatible	
	USB Port is used for NMEA outputting or inputting, PMTK	
	private messages inputting and firmware upgrade	
Temperature range	• Normal operation: -40°C ~ +85°C	
	• Storage temperature: -45°C ~ +125°C	
Physical Characteristics	Size:	
	22.4±0.15 x 17±0.15 x 3.0±0.1mm	
	Weight: about 2.2g	
Firmware Upgrade	Firmware upgrade over UART port or USB port	

2.2 Functional diagram

The following figure shows a block diagram of the L10 module. It consists of single chip GPS IC which includes RF part and Baseband part, LNA and SAW filter as well as antenna supervision.

L10_HD_V1.01 - 10 -



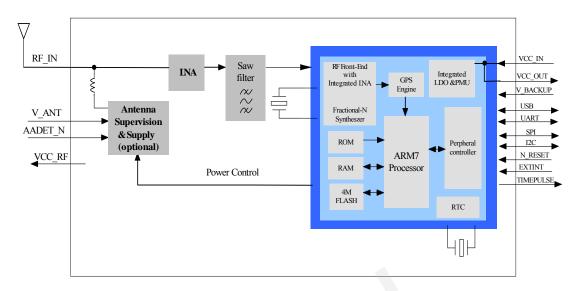


Figure 1: Module functional diagram

2.3 Evaluation board

In order to help customer on the application of L10 module, Quectel supplies an Evaluation Board (EVB) with appropriate power supply, RS-232 serial cable, USB cable, antenna and the module. For more details, please refer to the document [2].

2.4 Assisted GPS

Supply aiding information like ephemeris, almanac, rough last position and time and satellite status and improve the acquisition sensitivity. The L10 module supports the EPO, BEE A-GPS services and OMA SUPL compliant.

2.5 Protocol

The module supports standard NMEA-0813 protocol and MTK private protocol (PMTK messages) that can be used to provide extended capabilities for many applications. The module is capable of supporting the following NMEA formats: *GGA*, *GSA*, *GLL*, *GSV*, *RMC*, *ZDA*, *VTG*

Table 4: The module supports protocol

Protocol	Туре
NMEA	Input/output, ASCII, 0183, 3.01
PMTK	Input/output, MTK private protocol

Note: Please refer to document [3] about NMEA standard protocol and MTK private protocol.

L10_HD_V1.01 - 11 -



3 Application interface

The module is equipped with a 28-pin 1.1mm pitch SMT pad that connects to the user application platform. Sub-interfaces included in these pads are described in details in the following chapters:

- Power supply (<u>refer to Chapter 3.3</u>)
- UART interfaces (<u>refer to Chapter 3.7</u>)
- USB interfaces (<u>refer to Chapter 3.8</u>)

Electrical and mechanical characteristics of the SMT pad are specified in *Chapter 5&Chapter 6*.

3.1 Pin description

Table 5: Pin description

Power Supply					
PIN NAME	I/O	DESCRIPTION	DC	COMMENT	
			CHARACTERISTICS		
VCC	I	Supply voltage	Vmax= 4.3V	Supply current for no less	
			Vmin=3.0V	than 150mA.	
			Vnorm=3.3V		
V_BCKP	I	Backup voltage	Vmax=4.3V	Power supply for RTC	
		supply	Vmin=2.0V	when VCC is not applied	
			Vnorm=3.3V	for the system.	
			Iin=4uA		
VCC_OUT	О	Output voltage	Vmax= 4.3V	If unused, keep this pin	
			Vmin=3.0V	open. This pin is internally	
			Vnorm=3.3V	connected to VCC.	
			Imax=20mA		
VCC_RF	O	Output voltage RF	Vmax=4.3V	If unused, keep this pin	
		section	Vmin=3.0V	open. Usually supply for	
			Vnorm=3.3V	external active antenna.	
			Imax=50mA	VCC_RF≈ VCC-0.1V	
V_ANT	I	Antenna bias voltage	Vmax=5.5V	If unused, keep this pin	
			Vmin=2.7V	open. Using VCC_RF or	
				external voltage source.	
Reset					
PIN NAME	I/O	DESCRIPTION	DC	COMMENT	
			CHARACTERISTICS		
RESET_N	I	System reset, low	VILmin=-0.3V	If unused, keep this pin	
		level active.	VILmax=0.5V	open. Internally pulled up	

L10_HD_V1.01 - 12 -



			VIHmin=2.1V	
			VIHmax=2.8V	
General purp	ose int	ut/outnut	, , , , , , , , , , , , , , , , , , ,	
PIN NAME	I/O	DESCRIPTION	DC	COMMENT
TITYTYTYIL	1/0	DESCRIPTION	CHARACTERISTICS	COMMENT
SDA2	I/O	I2C interface	VILmin=-0.3V	If unused keep these pins
SCL2	I/O		VILmax=0.8V	open. Internally pulled up.
EXTINT0	I	External interrupt	VIHmin=2.0V	If unused keep this pin
		input	VIHmax= 3.6V	open. Internally pulled up.
			VOLmin=-0.3V	
			VOLmax=0.4V	
			VOHmin=2.4V	
			VOHmax=2.9 V	
AADET_N	I	Active antenna	VILmin=-0.3V	If unused keep this pin
		detect	VILmax=0.5V	open.
			VIHmin=2.0V	
			VIHmax=5.5V	
AOK	О	Antenna abnormal	VOLmin=-0.3V	If unused keep this pin
		report	VOLmax=0.4V	open. Internally pulled
			VOHmin=2.4V	down.
			VOHmax=2.9V	
TIMEPULSE	O	Time pulse	VOLmin=-0.3V	1 pulse per second (1PPS).
			VOLmax=0.4V	Synchronized at rising edge,
			VOHmin=2.4V	pulse length 100ms. If
			VOHmax=2.9V	unused keep this pin open.
UART port				
PIN NAME	I/O	DESCRIPTION	DC	COMMENT
			CHARACTERISTICS	
RXD1	I	Receive data	VILmin=-0.3V	If unused keep these pins
TXD1	O	Transmit data	VILmax=0.8V	open.
			VIHmin=2.0V	
			VIHmax= 3.6V	
			VOLmin=-0.3V	
			VOLmax=0.4V	
			VOHmin=2.4V	
			VOHmax=2.9V	
USB Port	1			
PIN NAME	I/O	DESCRIPTION	DC	COMMENT
			CHARACTERISTICS	
VDDUSB	I	Voltage supply for	Vmax= 3.6V	If unused, connect to GND.
		USB port	Vmin=3.0V	
			Vnorm=3.3V	
USB_DM	I/O	USB data negative	Compliant with USB2.0	If unused, keep this pin

L10_HD_V1.01 - 13 -



USB_DP		USB data positive	specification	open. Compatible with USB
				with 27 Ohms series
				resistance.
RF interface				
PIN NAME	I/O	DESCRIPTION	DC	COMMENT
			CHARACTERISTICS	
RF_IN	I/O	GPS signal input	Impedance of 50Ω	Refer to chapter 4

3.2 Operating modes

The table below briefly summarizes the various operating modes referred to in the following chapters.

Table 6: Overview of operating modes

Mode	Function	
Acquisition mode	The module starts to search satellite, determine visible satellites and coarse	
	carrier frequency and code phase of satellite signals. When the acquisition is	
	performed, it switches to tracking mode automatically.	
Tracking mode	The module refines acquisition's message, as well as keeps tracking and	
	demodulating the navigation data from the specific satellites.	
Standby mode	EXTINT0 pin can be used to make the module enter into standby mode. In	
	this case, the UART port and USB port are not accessible, and the current	
	consumption of the module is also minimal. The module could be woken up	
	by EXTINT0 pin.	

3.3 Power supply

The main power supply is fed through the VCC pin. It is important that the system power supply circuitry is able to support the peak power. So the power supply must be able to provide sufficient current up to 150mA.

The circuit design of the power supply depends strongly on the power source where this power is drained. An LDO (Low Dropout Regulator) device, such as Torex (http://www.torex.co.jp/english) XC6219B332MR is recommended. For more details of this power supply application, please refer to document [1].

3.4 Turn on and Turn off

3.4.1 Turn on

The module can be turned on by various ways which are described in the following chapters:

L10_HD_V1.01 - 14 -



- Power on reset (please refer to chapter 3.4.1.1);
- Via RESET N pin: restarts module (please refer to chapter 3.4.1.2)

3.4.1.1 Power on

A built-in reset controller automatically turns on the module when VCC is supplied.

3.4.1.2 Restart module using the RESET_N pin

L10 module can be restarted by driving the RESET_N to low level voltage for a certain time and then releasing it. An open drain driver circuit is suggested in application to control the RESET_N. A simple reference circuit illustrates in Figure 2.

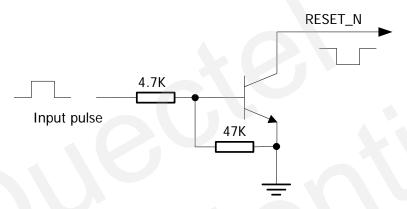


Figure 2: Reference reset circuit using OC circuit

The other way to control the RESET_N is using a button directly. A TVS component needs to be placed nearby the button for ESD protection. While pressing the key, ESD strike may generate from finger. A reference circuit illustrates in Figure 3.

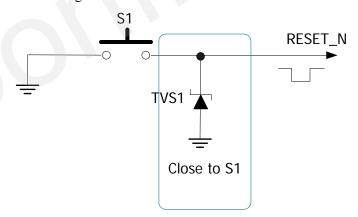


Figure 3: Reference reset circuit using button

The restart timing illustrates in Figure 4.

L10_HD_V1.01 - 15 -



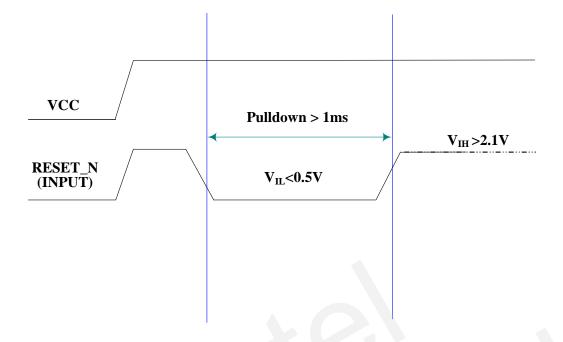


Figure 4: Timing of restart system

3.4.2 Turn off

Shutting down the module's power supply is the only way to turn off the system. For more details of this part application, please refer to document [1].

3.5 Power saving

3.5.1 Enter standby mode

The EXTINTO pin can be used to drive the module into standby mode. When the EXTINTO pin is changed from high to low, the module will enter the standby mode. In this case, the UART port and the USB port are not accessible, and the current consumption of the module is also minimal.

Note: When USB interface of the module is being used, the module could not enter standby mode.

3.5.2 Exit from standby mode

When the EXTINTO pin is changed from low to high, the module will exit from the standby mode.

3.6 RTC backup

The RTC (Real Time Clock) power supply of module can be directly provided by an external capacitor or battery (rechargeable or non-chargeable) through the V_BCKP pin. It can supply power for

L10_HD_V1.01 - 16 -



backed-up memory which contains all the necessary GPS information for quick start-up and a small amount of user configuration variables.

Table 7: Pin definition of the V_BCKP pin

Name	Pin	Function
V_BCKP	11	Backup voltage supply

Note: The VRTC couldn't keep open. The VRTC pin should be connected to a battery or a capacitor for GPS module hot start and AGPS.

Please refer to the following figure for RTC backup:

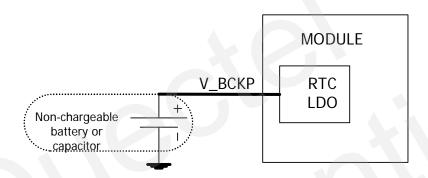


Figure 5: RTC supply from non-chargeable battery or capacitor

The V_BCKP pin does not implement charging for rechargeable battery. It is necessary to add a charging circuit for rechargeable battery, shown as the following figure:

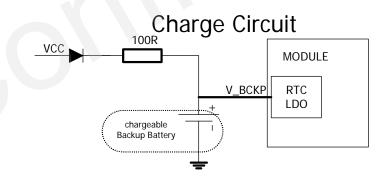


Figure 6: Reference charging circuit for chargeable battery

• Coin-type Capacitor backup

Coin-type Rechargeable Capacitor such as XH414H-IV01E form Seiko can be used.

L10_HD_V1.01 - 17 -



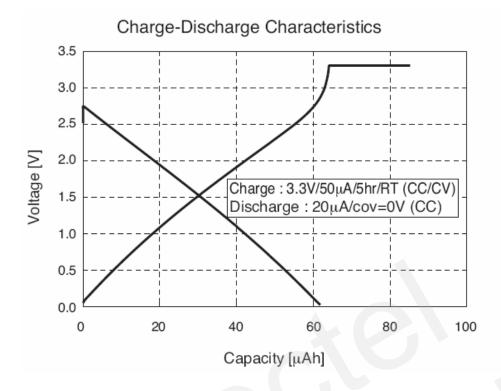


Figure 7: Seiko XH414H-IV01E charge characteristic

3.7 UART interface

The module provides one universal asynchronous receiver & transmitter serial port. The module is designed as a DCE (Data Communication Equipment), following the traditional DCE-DTE (Data Terminal Equipment) connection. The module and the client (DTE) are connected through the following signal (shown as Figure 8). It supports data baud-rate from 4800bps to 115200bps.

UART port

• TXD1: Send data to the RXD signal line of DTE

• RXD1: Receive data from the TXD signal line of DTE

Table 8: Pin definition of the UART interfaces

Interface	Name	Pin	Function
IIADT Doge	TXD1	3	Transmitting data
UART Port	RXD1	4	Receiving data

L10_HD_V1.01 - 18 -



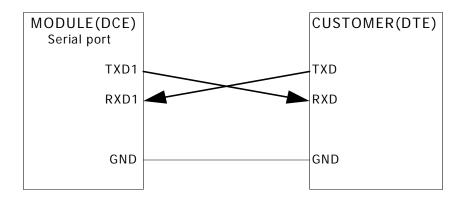


Figure 8: Connection of serial interfaces

This UART port has the following features:

- UART port can be used for firmware upgrade, inputting or outputting NMEA or PMTK private messages.
 - The default output NMEA type setting is RMC, VTG, GGA, GSA, GSV, GLL.
- UART port supports the following data rates:
 4800,9600, 14400, 19200, 28800, 38400, 57600, 115200.
 - The default setting is 9600bps, 8 bits, no parity bit, 1 stop bit, no hardware flow control.
- Hardware flow control and synchronous operation are not supported.

Note: It is strongly recommended that the UART port is used to output NMEA message to serial port of host in design.

The UART port does not support the RS-232 level but only supports the LVTTL level. If the module's UART port is connected to the UART port of a computer, it is necessary to insert a level shift circuit between the DCE and the computer. Please refer to the following figure.

L10_HD_V1.01 - 19 -



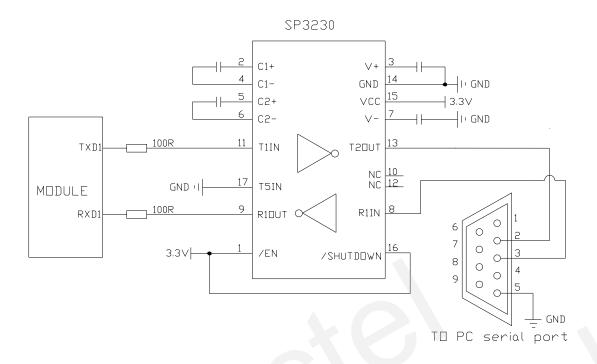


Figure 9: RS-232 level shift circuit

3.8 USB interface

The USB (Universal Serial Bus) port makes the GPS receiver capable of significantly improving data transmission and receiving rate. It is USB 2.0 Full-Speed compatible. This interface is automatically converted to COM port to HOST operating systems and its driver could operate on Windows 98, 2000, XP, and Vista operation system. Customer can update firmware through this port.

The USB port can be used for firmware update, inputting or outputting NMEA or PMTK private messages. It is the same function as serial port.

Plug-and-Play feature provides easier way for customer's data communication with most navigation software. Moreover, flexibility of applications for different USB classes is available.

Table 9: Pin definition of USB interface

Interface	Name	Pin	Function
	VDDUSB	24	USB power supply
USB Port	USB_DM	25	USB data-
	USB_DP	26	USB data+

In order to comply with USB specifications, VDDUSB must be connected to an LDO as shown in Figure 10 when the USB port is used. For more details please refer to document [1].

L10_HD_V1.01 - 20 -



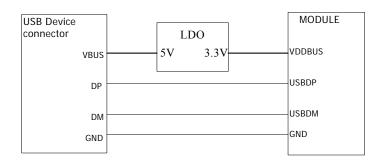


Figure 10: USB interface circuit

Note: The USB interface is not recommended to output NMEA message to USB port of the host, such as ARM processor because the driver of USB may be not reliable. If don't use the USB port, please connect VDDUSB to GND.

3.9 Software upgrade

The UART port and USB port can be used for firmware upgrade, and one of them should be selected.

3.10 EXTINTO

The EXTINT0 pin is an external interrupt input pin. It is an edge trigger interrupt and can be used to wake up the module from the standby mode. When the EXTINT0 pin is changed from high to low, the module will enter the standby mode. When the EXTINT0 pin is changed from low to high, the module will exit from standby mode.

Table 10: Pin definition of the EXTINTO

Name	Pin	Function	
EXTINT0	27	External interrupt input	

3.11 AOK

AOK can output antenna status message. It outputs a low level when the active GPS antenna is assembled and operating normally. When the GPS antenna is not assembled or short-circuited, it outputs a high level to indicate to the host controller.

Table 11: Pin definition of the AOK

Name	Pin	Function
AOK	12	Active GPS antenna status indication

L10_HD_V1.01 - 21 -



3.12 I2C interface

The module has a standard I2C interface, but its driver is not embedded in the default firmware.

Table 12: Pin definition of the I2C interface

Name	Pin	Function
SDA2	1	I2C data
SCL2	2	I2C clock

Note: This interface function is not supported in the default firmware. If customer wants a special firmware, please contact Quectel.

L10_HD_V1.01 - 22 -



4 Antenna interface and supervisor

The L10 module receives L1 band signal from GPS satellites at a nominal frequency of 1575.42MHz. The RF signal is connected to the RF_IN pin. Customer should use a controlled impedance transmission line of 50 Ohm to connect to RF_IN.

4.1 Antenna

The L10 module can be connected to passive or active antenna. In the default operation mode the antenna supervisor is activated and enables the receiver to detect short-circuit at the antenna port by checking the bias voltage level and can shut down the voltage bias immediately when short-circuit happens. NMEA messages are provided to report the condition of the antenna supply. Open-circuit detection can also be supported with an additional external circuit. The reference design of the external circuit is shown in Figure 11.

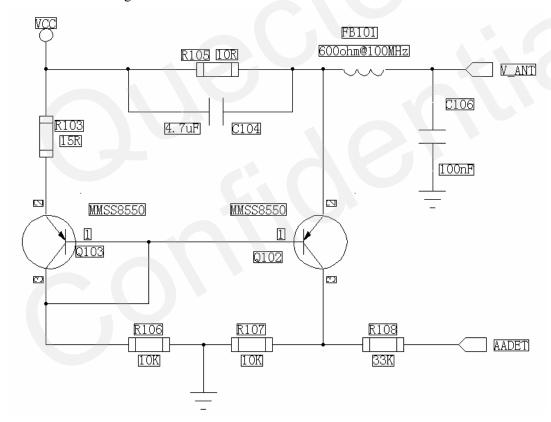


Figure 11: External detect circuit for open-circuit of active antenna

Table 13: Pin definition of the AADET_N

Name	Pin	Function
AADET_N	20	Active antenna detect input

L10_HD_V1.01 - 23 -



Table 14: AADET_N and active antenna

Active antenna state	AADET_N	Description
Open-circuit	High	Active antenna disconnected
OK	Low	Active antenna connected

The specification of active antenna is listed as Table 15.

Table 15: Antenna specification for L10 module

Antenna type	Specification	
Passive antenna	Center frequency:	1575.42 MHz
	Band Width:	>20 MHz
	Gain:	>0 dBi
	Polarization:	RHCP or Linear
Active antenna	Center frequency:	1575.42 MHz
	Band Width:	>5 MHz
	Minimum gain:	15-20dB(compensate signal loss in RF cable)
	Maximum noise figure:	1.5dB
	Maximum gain:	50dB
	Polarization:	RHCP or Linear

4.2 Antenna supply

4.2.1 Passive antenna

Passive antenna doesn't require a DC bias voltage and can be connected to RF_IN pin directly. V_ANT can be connected to GND. It is always beneficial to reserve a passive matching network between the antenna and the RF_IN port of the module. Figure 12 is the reference design.

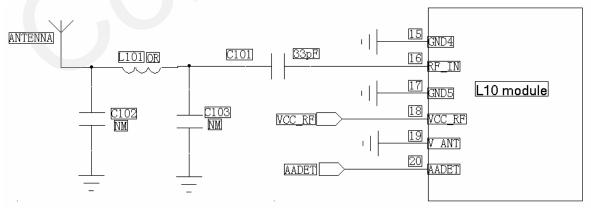


Figure 12: Reference design for passive antenna

L10_HD_V1.01 - 24 -



4.2.2 Active antenna

Active antenna has an integrated low-noise amplifier which could be connected to RF_IN directly. If an active antenna is connected to RF_IN, the integrated low-noise amplifier of the antenna needs to be supplied with the correct voltage through pin V_ANT. Usually, the supply voltage is fed to the antenna through the coaxial RF cable. An active antenna consumes current at 5~20mA. The inductor inside the module can separate the RF signal from the V_ANT pin and routes the bias supply to the active antenna. The block diagram of the supply part for active antenna is shown in Figure 13.

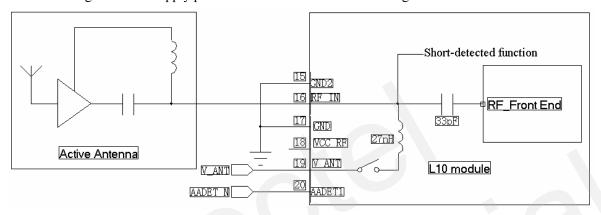


Figure 13: Active antenna biasing

If the active antenna is short-circuited, the module would turn off the power supply to the antenna immediately. Afterwards, the antenna status will be detected every 60 seconds. When the short-circuit problem is removed, it will recover the power supply to the active antenna.

If the VCC_RF voltage is suitable for powering the active antenna, pin VCC_RF could be directly connected to pin V_ANT. A reference circuit is shown in Figure 14.

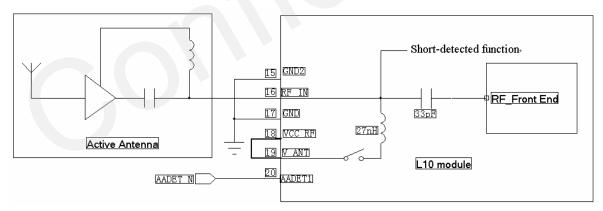


Figure 14: Active antenna with VCC_RF

If the VCC_RF voltage doesn't meet the requirement for powering the active antenna, an external LDO could be used. The output of the external LDO can be connected to pin V_ANT. A reference circuit is shown in Figure 15.

L10_HD_V1.01 - 25 -



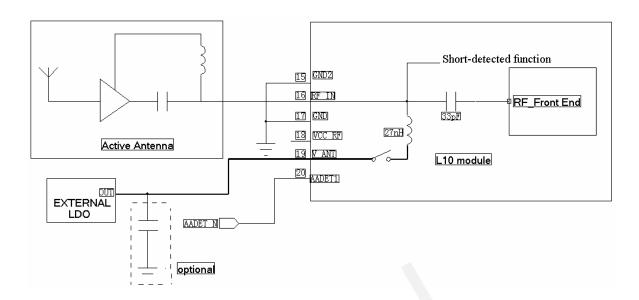


Figure 15: Active antenna with external LDO

If an external power supply and an external inductor are used to power the active antenna, the short-circuit detection function could still work, but it couldn't cut off the external power supply. So customer is not recommended to do in this way.

L10_HD_V1.01 - 26 -



5 Electrical, reliability and radio characteristics

5.1 PIN assignment of the module

Table 16: L10 pin assignment

PIN NO.	PIN NAME	I/O	PIN NO.	PIN NAME	I/O
1	SDA2	I/O	15	GND	
2	SCL2	О	16	RF_IN	I
3	TXD1	О	17	GND	
4	RXD1	I	18	VCC_RF	О
5	RESERVED		19	V_ANT	I
6	VCC	Ι	20	AADET_N	I
7	GND		21	RESERVED	
8	VCC_OUT	О	22	RESERVED	
9	RESERVED		23	RESERVED	
10	RESET_N	I	24	VDDUSB	I
11	V_BCKP	I	25	USB_DM	I/O
12	AOK	O	26	USB_DP	I/O
13	GND		27	EXTINT0	I
14	GND		28	TIMEPULSE	О

Note: Please keep all reserved pins open.

L10_HD_V1.01 - 27 -



5.2 Absolute maximum ratings

Absolute maximum rating for power supply and voltage on digital pins of module are listed in Table 17

Table 17: Absolute maximum ratings

Parameter	Min	Max	Unit
Power supply voltage (VCC)	-0.3	4.3	V
Backup battery voltage (V_BCKP)	-0.3	4.3	V
USB supply voltage (VDDUSB)	-0.3	3.6	V
Input voltage at digital pins		3.6	V
		3.6	V
VCC_RF output current (Ivccrf)		50	mA
Input power at RF_IN (Prfin)		0	dBm
Antenna bias voltage(V_ANT)	0	6	V
Antenna bias current(Iant)		100	mA
Storage temperature	-45	125	°C

Note: Stressing the device beyond the "Absolute Maximum Ratings" may cause permanent damage. These are stress ratings only. The product is not protected against over voltage or reversed voltage. If necessary, voltage spikes exceeding the power supply voltage specification, given in table above, must be limited to values within the specified boundaries by using appropriate protection diodes.

5.3 Operating conditions

Table 18: The module power supply ratings

Parameter	Description	Conditions	Min	Тур	Max	Unit
VCC	Supply voltage	Voltage must stay	3.0	3.3	4.3	V
		within the min/max				
		values, including				
		voltage drop, ripple,				
		and spikes.				
I _{VCCP} *	Peak supply current	VCC=3.3V			150	mA
V_BCKP	Backup voltage		2.0	3.3	4.3	V
	supply					
I_{BCKP}	Backup battery	V_BCKP=3.3V		4		uA
	current					
V_ANT	Antenna bias voltage		2.7		5.5	V
V _{ANT_DROP}	Antenna bias				0.1	V

L10_HD_V1.01 - 28 -



	voltage drop					
I_{ANT}	V_ANT supply	V_ANT=3.3V			100	mA
	current					
VDDUSB	USB supply voltage		3.0	3.3	3.6	V
VCC_RF	Output voltage RF				VCC -0.1	V
	section					
I _{VCC_RF}	VCC_RF output				50	mA
	current					
T_{OPR}	Normal Operating		-40	25	85	$^{\circ}\!\mathbb{C}$
	temperature					

^{*} Use this figure to determine the maximum current capability of power supply.

Note: Operation beyond the "Operating Conditions" is not recommended and extended exposure beyond the "Operating Conditions" may affect device reliability.

5.4 Current consumption

The values for current consumption are shown in Table 19.

Table 19: The module current consumption (passive antenna)

Parameter	Condition	Min	Тур	Max	Unit
Icc Acquisition			43		mA
Icc Tracking	For Cold Start, 10 minutes after First Fix. For Hot Start, 15 seconds after First Fix.		38		mA
Icc Standby	EXTINTO pin is changed from high to low.		2		mA

Note: In the standby mode, the power supply to active antenna through V_ANT is cut off. It will be re-activated when the module exits from the standby mode.

5.5 Electro-static discharge

Although the module is fully protected against ESD strike, ESD protection precautions should still be emphasized. Proper ESD handing and packaging procedures must be applied throughout the processing, handing and operation of any application.

The ESD bearing capability of the module is listed in Table 20.

L10_HD_V1.01 - 29 -



Pin	Contact discharge	Air discharge
Antenna port	±5KV	±10KV
VCC,GND	±4KV	±8KV
Others	±4KV	±8KV

5.6 Reliability test

Table 21: Reliability test

Test term	Condition	Standard
Thermal shock	-30°C+80°C, 144 cycles	GB/T 2423.22-2002 Test
		Na
		IEC 68-2-14 Na
Damp heat, cyclic	+55°C; >90% Rh 6 cycles for 144 hours	IEC 68-2-30 Db Test
Vibration shock	$5\sim20$ Hz, 0.96 m ² /s ³ ; $20\sim500$ Hz, 0.96 m ² /s ³ -3dB/oct,	2423.13-1997 Test Fdb
	1hour/axis; no function	IEC 68-2-36 Fdb Test
Heat test	85° C, 2 hours, Operational	GB/T 2423.1-2001 Ab
		IEC 68-2-1 Test
Cold test	-40° C, 2 hours, Operational	GB/T 2423.1-2001 Ab
		IEC 68-2-1 Test
Heat soak	90° C, 72 hours, Non-Operational	GB/T 2423.2-2001 Bb
		IEC 68-2-2 Test B
Cold soak	-45° C, 72 hours, Non-Operational	GB/T 2423.1-2001 A
		IEC 68-2-1 Test

L10_HD_V1.01 - 30 -



6 Mechanics

This chapter describes the mechanical dimensions of the module.

6.1 Mechanical dimensions of the module

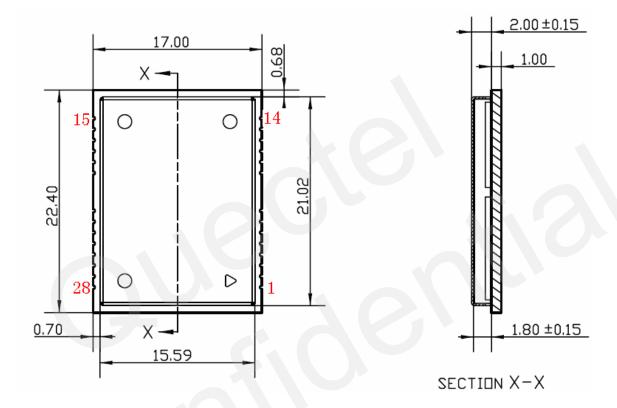


Figure 16: L10 Top view and Side dimensions (Unit:mm)

L10_HD_V1.01 - 31 -



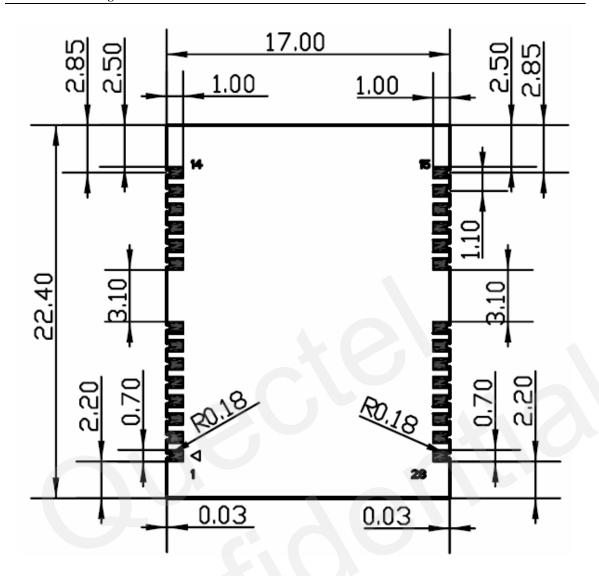


Figure 17: L10 Bottom dimensions (Unit:mm)


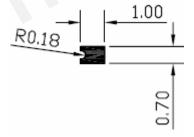



Figure 18: PAD Bottom dimensions (Unit:mm)

L10_HD_V1.01 - 32 -



6.2 Footprint of recommendation

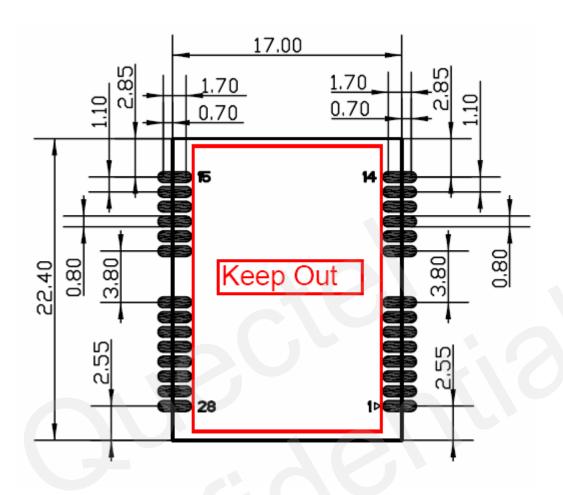

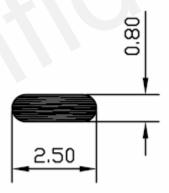

L10_HD_V1.01 - 33 -



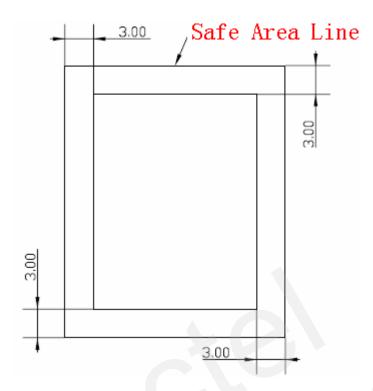


Figure 19: Footprint of recommendation (Unit:mm)

Note1: Keep out on the host board below the module and the keep-out area should be covered by solder mask and top silk layer for isolation between the top layer of host board and the bottom layer of the module.

Note2: For easy maintenance of this module and accessing to these pads, please keep a distance no less than 3mm between the module and other components in host board.

L10_HD_V1.01 - 34 -



6.3 Top view of the module

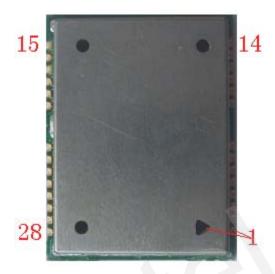


Figure 20: Top view of the module

6.4 Bottom view of the module



Figure 21: Bottom view of the module

L10_HD_V1.01 - 35 -





Shanghai Quectel Wireless Solutions Co., Ltd.

Room 801, Building E, No.1618, Yishan Road, Shanghai, China 201103 Tel: +86 21 5108 2965

Mail: info@quectel.com