





Adafruit GPIO Expander Bonnet for Raspberry Pi

Created by Kattni Rembor

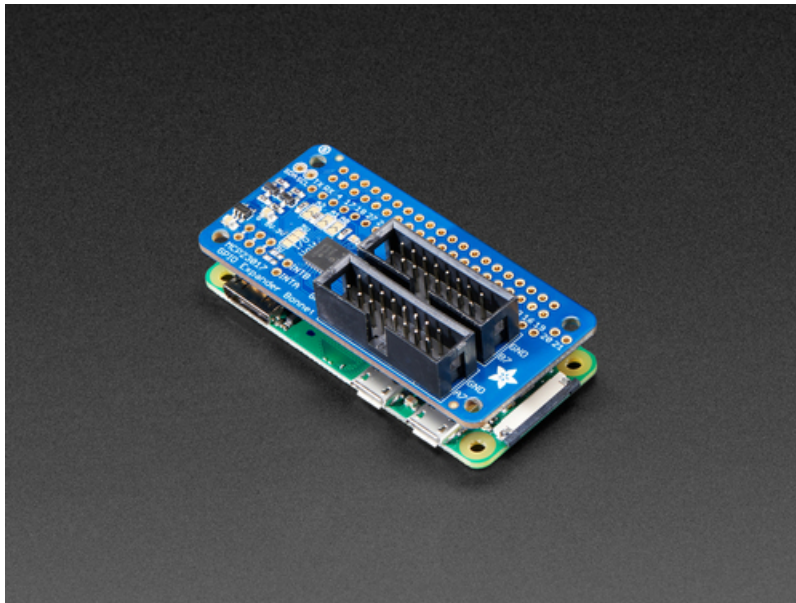


Last updated on 2020-06-03 04:59:51 PM EDT

Overview

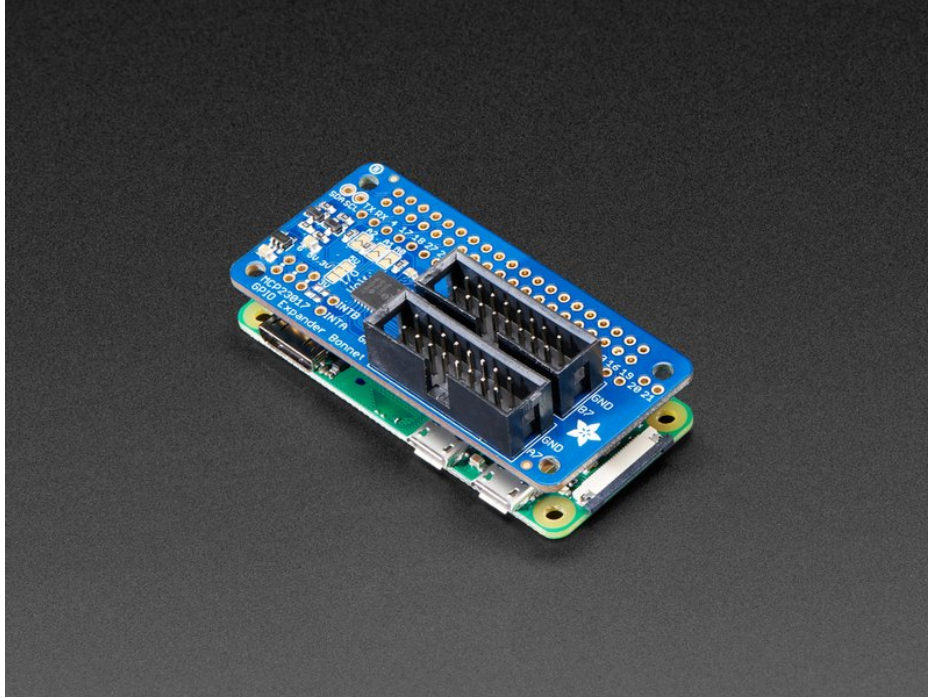


The Raspberry Pi is an amazing single board computer - and one of the best parts is that GPIO connector! 40 pins of digital goodness you can twiddle to control LEDs, sensors, buttons, radios, displays - just about any device you can imagine. This Adafruit GPIO Expander Bonnet will give you *even more* digital deliciousness - 16 more digital input/output pins are yours for any desire you have. The outputs are grouped into two 16-pin connectors that have a matching ground pin. You can set each pin to be a digital output (high or low) or as an input, with an internal pull-up if you like!


Simply pop the Bonnet on top of your Pi, the circuitry connects to the SDA/SCL I2C pins for control. The MCP23017 chip converts our Python commands to pin instructions.

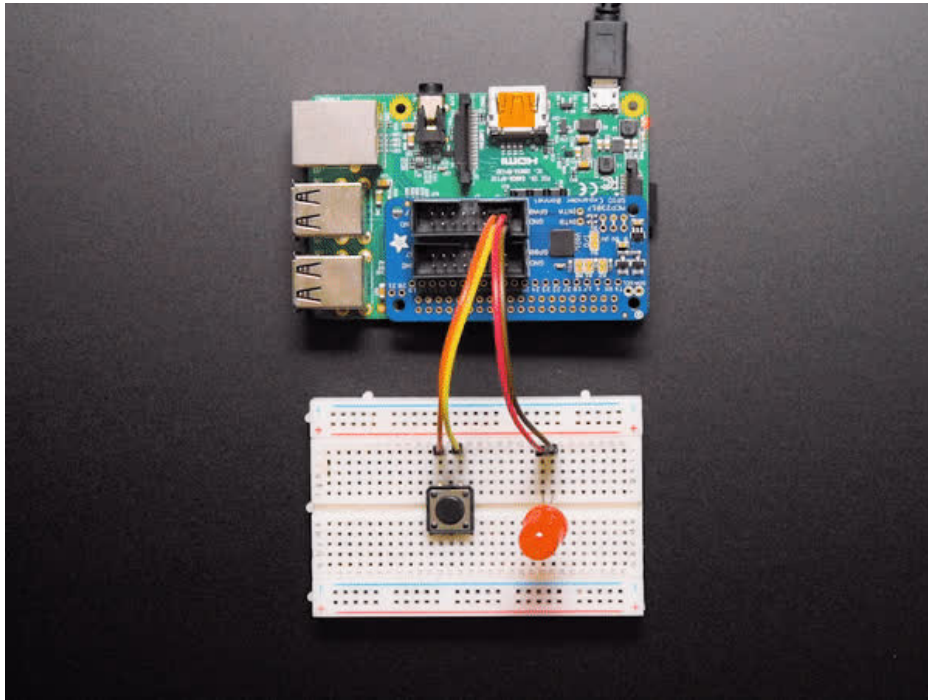

When used as an output, each pin can supply up to 20mA (current clamped) - so you can drive LEDs directly. The datasheet recommends you keep the total current draw to under 125mA for the whole chip. We set up the expander chip for 5V logic by default (the I2C is level shifted so that's 3V logic). We did that so you can drive white, blue or green LEDs that sometimes aren't too happy with 3.3V logic. Or, you can cut/solder a jumper to change it to 3.3V logic.

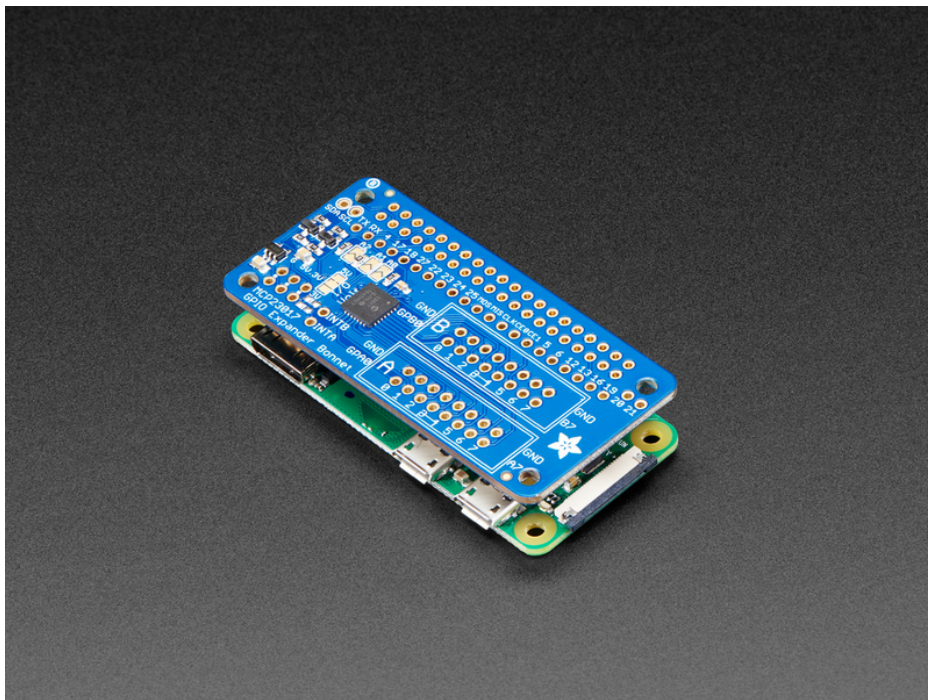


When used as an input, you can set up a pull-up resistor so buttons and switches don't need extra resistors - just wire the pin to one side and ground to the other! There's interrupt capabilities on the chip, and two IRQ pins (INTA and INTB) you can solder a wire to, if you want to have a quick way of telling if any of the GPIOs changed.

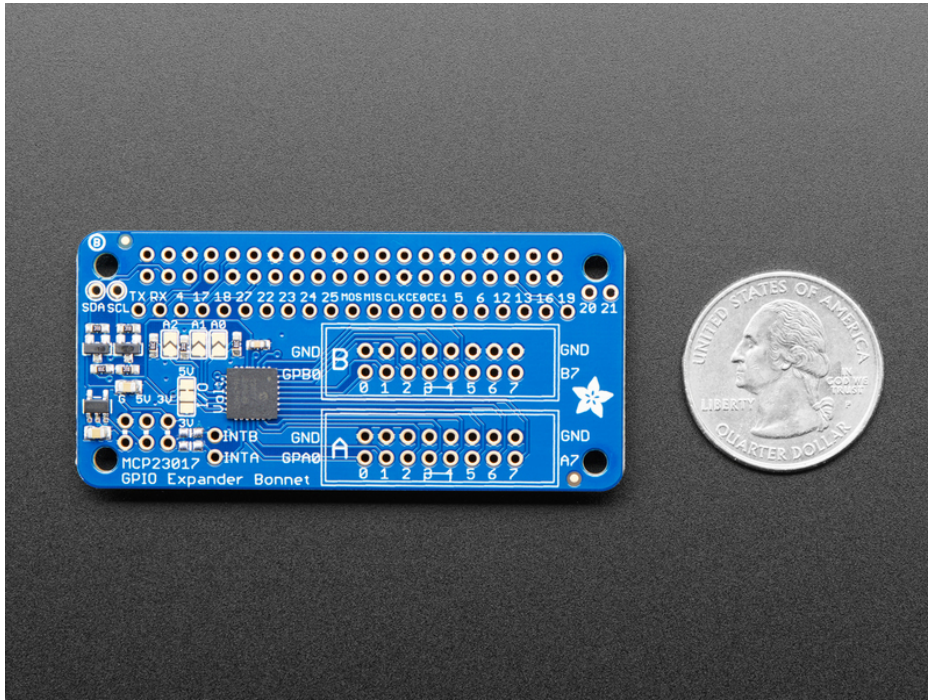


By soldering closed the address select jumpers, you can change the address from 0x20 up to 0x27. So, if you wanted to, you could have up to 8 bonnets for 128 total GPIO.

Comes as an assembled and tested Bonnet with slim 2x20 header connector on the bottom. We provide 2 sets of 16-pin IDC sockets, you can solder these in or leave them off for a slim setup. [Use our CircuitPython library with Python 3 for fast and easy setup and configuration, you'll be running in under 5 minutes. \(https://adafruit.com/Boh\)](https://adafruit.com/products/2512)

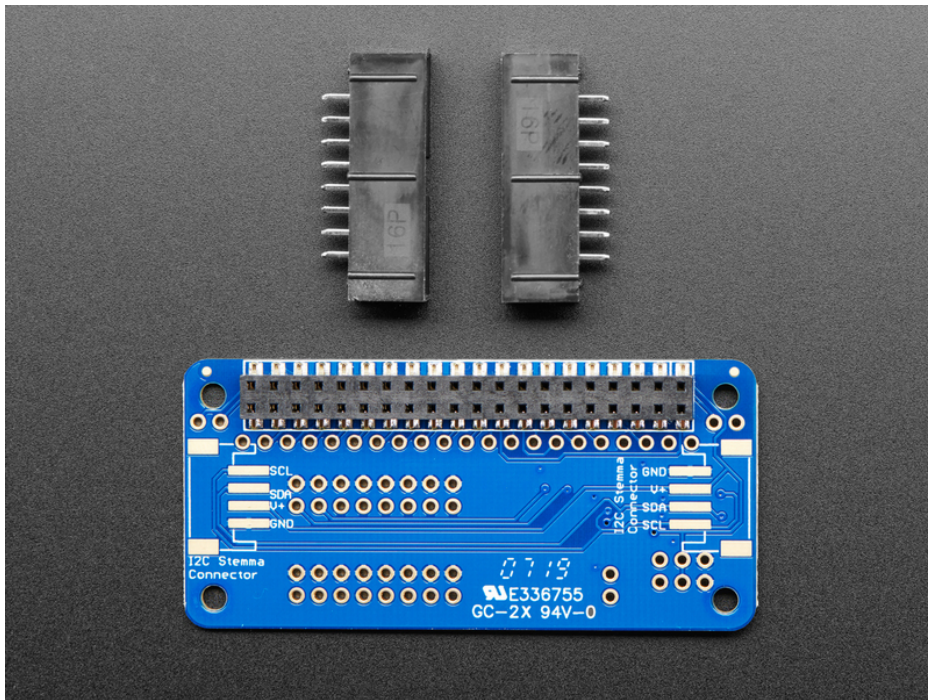


Pinouts

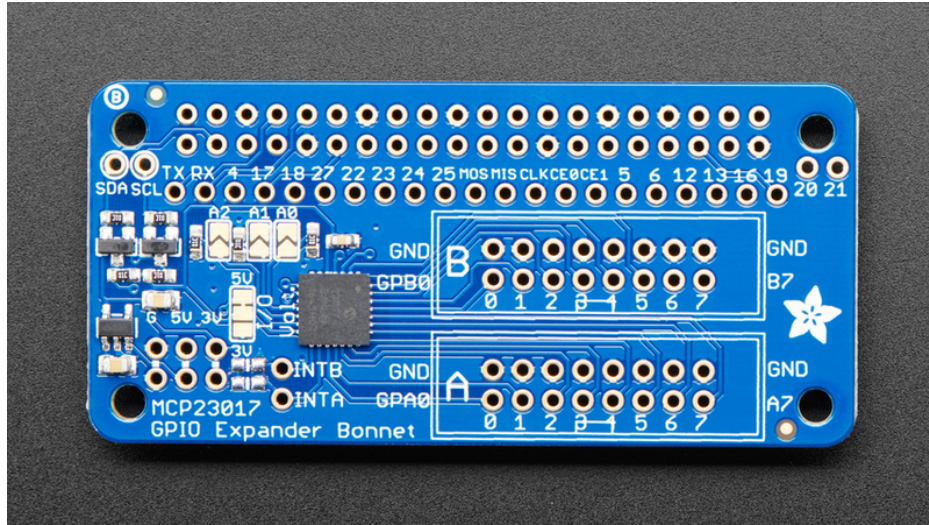


This Bonnet provides you with a number of options. Let's take a look!

MCP23017 GPIO Expander Chip

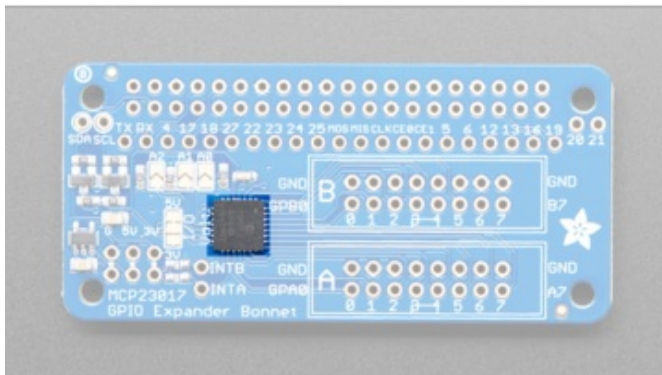

The **MCP23017 GPIO expander chip** converts Python code into pin instructions.


GPIO Expansion Headers

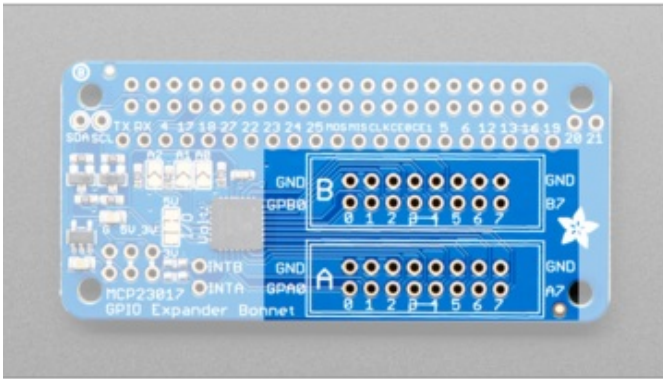

You can solder the included headers onto the Bonnet, or leave them off for a slimmer setup.


- The top section is **GPB0** - header B.
- The bottom set is **GPA0** - header A.
- The top row of each set of headers is **ground**.
- The bottom row, numbered 0-7, is the **8 IO pins**.

Address Select Jumpers

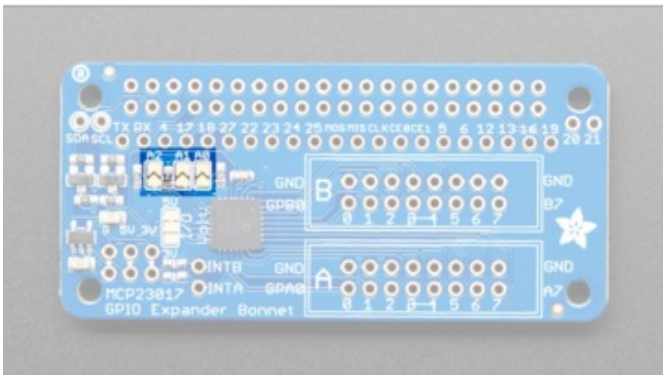


By soldering closed the **address select jumpers**, you can change the address from **0x20 to 0x27**. This allows up to 8 bonnets for 128 total GPIO.

Interrupt Pins

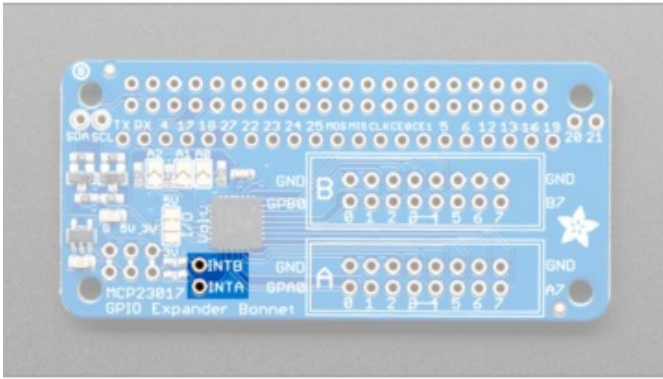

The MCP23017 has interrupt capabilities. There are two **IRQ pins (INTA and INTB)** you can solder a wire to, if you want to have a quick way of telling if any of the GPIO's changed.

3V/5V Jumper

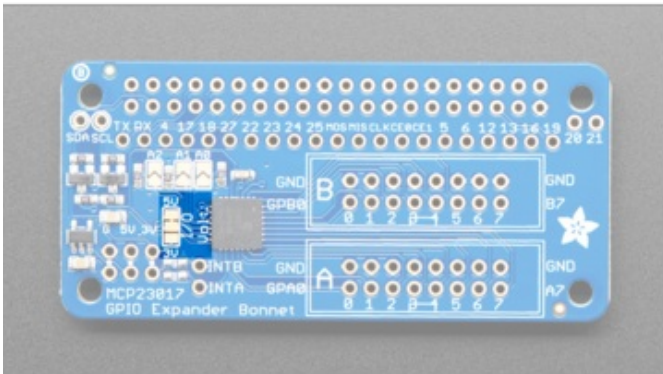

This Bonnet defaults to using 5V. There is a jumper to swap between 3V and 5V. If you want to change it to 3V, you can cut the trace between the top two pads, and solder the bottom two pads.

Python Usage


Make sure you've installed the bonnet onto your single board Linux computer by plugging it in and then restarting.

You will need to have I2C set up and activated - here's how to do it for Raspberry Pi. (<https://adafru.it/dEO>)

Once that's done and the bonnet installed, board rebooted, you should be able to I2C scan to find the device with something like `sudo i2c-detect -y 1` (the number may be different on non-Raspi computers)

The default address for the bonnet is **0x20**

```
pi@devpi:~$ sudo i2cdetect -y 1
 0  1  2  3  4  5  6  7  8  9  a  b  c  d  e  f
00: -- -- -- -- -- -- -- -- -- -- -- -- -- -- --
10: -- -- -- -- -- -- -- -- -- -- -- -- -- -- --
20: 20 -- -- -- -- -- -- -- -- -- -- -- -- -- -- --
30: -- -- -- -- -- -- -- -- -- -- -- -- -- -- --
40: -- -- -- -- -- -- -- -- -- -- -- -- -- -- --
50: -- -- -- -- -- -- -- -- -- -- -- -- -- -- --
60: -- -- -- -- -- -- -- -- -- -- -- -- -- -- --
70: -- -- -- -- -- -- -- -- -- -- -- -- -- -- --
pi@devpi:~$
```

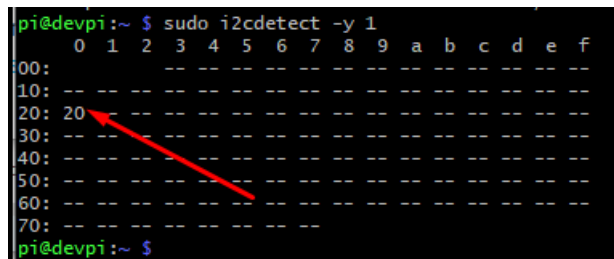

Python Installation of MCP23017 Library

You can use this Bonnet with Python and Raspberry Pi thanks to [Adafruit_Blinka](https://adafru.it/BSN), our [CircuitPython-for-Python compatibility library](https://adafru.it/BSN) (<https://adafru.it/BSN>).

You'll need to install the [Adafruit_Blinka](https://adafru.it/BSN) library that provides the CircuitPython support in Python. This may also require enabling I2C on your platform and verifying you are running Python 3. [Since each platform is a little different, and Linux changes often, please visit the CircuitPython on Linux guide to get your computer ready](https://adafru.it/BSN) (<https://adafru.it/BSN>)!

Once that's done, from your command line run the following command:

- `sudo pip3 install adafruit-circuitpython-mcp230xx`


If your default Python is version 3 you may need to run 'pip' instead. Just make sure you aren't trying to use CircuitPython on Python 2.x, it isn't supported!

Python Usage

To demonstrate the usage, we'll use Python code to read a button and light up an LED from the Python REPL.

Wire up the bonnet as follows:

- LED anode through a resistor (220 to 4.7Kohm) to **GPA0**
- LED cathode (short leg) to one of the **GND** pads (any)
- One side of switch to **GPA1**
- Other side of switch to one of the **GND** pads (any)

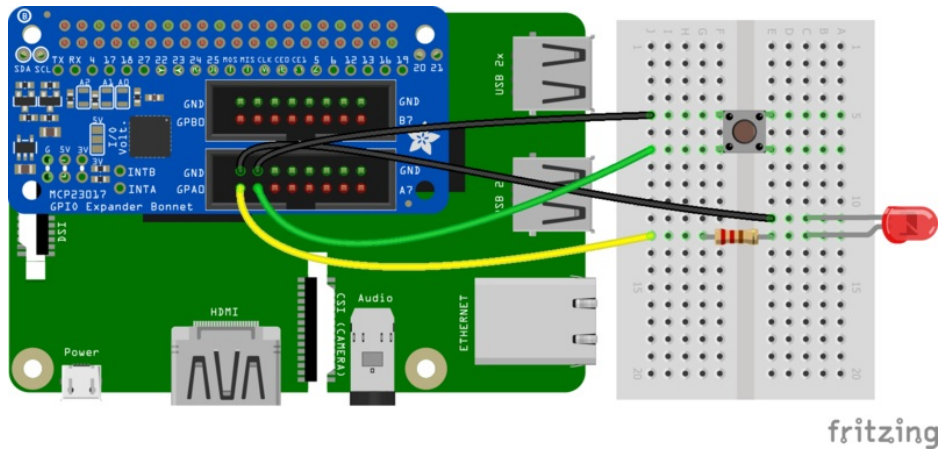

And start up Python3

First you'll need to import the necessary modules, initialize the I2C bus for your board, and create an instance of the class.

```
import time
import board
import busio
import digitalio
from adafruit_mcp230xx.mcp23017 import MCP23017

# Initialize the I2C bus:
i2c = busio.I2C(board.SCL, board.SDA)

mcp = MCP23017(i2c) # MCP23017
```

Now you have the device called `mcp`, you can use that to 'create' `DigitalInOut` pins, by calling `get_pin`. The pins are ordered 0-15. Pin #0 is `GPA0`, #1 is `GPA1`, #8 is `GPB0`, #15 is `GPB7`

```
pin0 = mcp.get_pin(0) # GPA0
pin1 = mcp.get_pin(1) # GPA1
```

Now you can treat these like regular digital inputs and outputs. Set GPA0 to be an output and level high voltage.

The LED should turn on!

```
# Setup pin0 as an output that's at a high logic level.
pin0.switch_to_output(value=True)
```

And set GPA1 to be an input with a pullup

```
# Setup pin1 as an input with a pull-up resistor enabled. Notice you can also
# use properties to change this state.
pin1.direction = digitalio.Direction.INPUT
pin1.pull = digitalio.Pull.UP
```

Finally we can have a loop where we read and write data to the pins


```
# Now loop blinking the pin 0 output and reading the state of pin 1 input.
while True:
    # Blink pin 0 on and then off.
    pin0.value = True
    time.sleep(0.5)
    pin0.value = False
    time.sleep(0.5)
    # Read pin 1 and print its state.
    print('Pin 1 is at a high level: {}'.format(pin1.value))
```

The LED should start blinking. You can also press the button to see the output change for the pin 1 value:

```
>>> # Now loop blinking the pin 0 output and reading the state of pin 1 input.
... while True:
...     # Blink pin 0 on and then off.
...     pin0.value = True
...     time.sleep(0.5)
...     pin0.value = False
...     time.sleep(0.5)
...     # Read pin 1 and print its state.
...     print('Pin 1 is at a high level: {}'.format(pin1.value))
...
Pin 1 is at a high level: True
Pin 1 is at a high level: True
Pin 1 is at a high level: False
Pin 1 is at a high level: False
Pin 1 is at a high level: True
Pin 1 is at a high level: False
```

Type Control-C to quit. Then try this code that will light up the LED when the button is pressed:

```
# Now loop setting the LED when the button is pressed
while True:
    pin0.value = not pin1.value
```

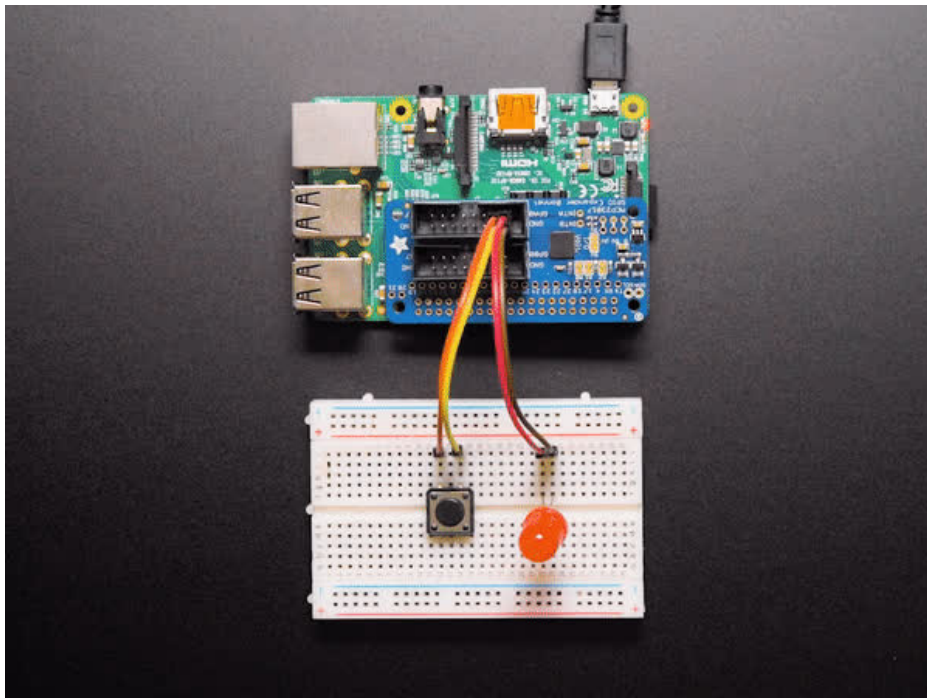

That's pretty much all you need to get started with the bonnet!

The fully commented example is here:



This full sketch uses the MCP23008 by default, change the "mcp = adafruit_mcp230xx.MCP23008" line to the MCP23017 before running this on the bonnet!

```

# Simple demo of reading and writing the digital I/O of the MCP230xx as if
# they were native CircuitPython digital inputs/outputs.
# Author: Tony DiCola
import time

import board
import busio
import digitalio

from adafruit_mcp230xx.mcp23008 import MCP23008

# from adafruit_mcp230xx.mcp23017 import MCP23017

# Initialize the I2C bus:
i2c = busio.I2C(board.SCL, board.SDA)

# Create an instance of either the MCP23008 or MCP23017 class depending on
# which chip you're using:
mcp = MCP23008(i2c) # MCP23008
# mcp = MCP23017(i2c) # MCP23017

# Optionally change the address of the device if you set any of the A0, A1, A2
# pins. Specify the new address with a keyword parameter:
# mcp = MCP23017(i2c, address=0x21) # MCP23017 w/ A0 set

# Now call the get_pin function to get an instance of a pin on the chip.
# This instance will act just like a digitalio.DigitalInOut class instance
# and has all the same properties and methods (except you can't set pull-down
# resistors, only pull-up!). For the MCP23008 you specify a pin number from 0
# to 7 for the GP0...GP7 pins. For the MCP23017 you specify a pin number from
# 0 to 15 for the GPIOA0...GPIOA7, GPIOB0...GPIOB7 pins (i.e. pin 12 is GPIOB4).
pin0 = mcp.get_pin(0)
pin1 = mcp.get_pin(1)

# Setup pin0 as an output that's at a high logic level.
pin0.switch_to_output(value=True)

# Setup pin1 as an input with a pull-up resistor enabled. Notice you can also
# use properties to change this state.
pin1.direction = digitalio.Direction.INPUT
pin1.pull = digitalio.Pull.UP

# Now loop blinking the pin 0 output and reading the state of pin 1 input.
while True:
    # Blink pin 0 on and then off.
    pin0.value = True
    time.sleep(0.5)
    pin0.value = False
    time.sleep(0.5)
    # Read pin 1 and print its state.
    print("Pin 1 is at a high level: {}".format(pin1.value))

```

We have more examples, including interrupt detection so you don't have to constantly query the pin values for buttons. Visit https://github.com/adafruit/Adafruit_CircuitPython_MCP230xx/tree/master/examples (<https://adafru.it/Edj>) to see all the examples

Some of the examples may be set up for an MCP23008 instead of MCP23017 so be sure to update the objection creation at the top!

Python Docs

[Python Docs \(https://adafru.it/CMs\)](https://adafru.it/CMs)

Downloads

Files

- [MCP23017 GPIO Expander Datasheet \(https://adafru.it/EcK\)](https://adafru.it/EcK)
- [Adafruit GPIO Expander Bonnet EagleCAD files on GitHub \(https://adafru.it/EcL\)](https://adafru.it/EcL)
- [Fritzing object in our Fritzing repo \(https://adafru.it/aP3\)](https://adafru.it/aP3)

Schematics and Fab Print

