

EVALSP320SPLC evaluation board for SPEAr320S

Introduction

This user manual describes the implementation of the EVALSP320SPLC evaluation board (order code: EVALSP320SPLC). This evaluation board can be used to evaluate the SPEAr320S microprocessor with a variety of devices and especially its Media Independent Interface (MII) Automation mode.

The EVALSP320SPLC evaluation kit includes a single application board identified as "MII mode".

The SPEAr320S microprocessor is mounted on a separate CPU board, which is not included with the EVALSP320SPLC kit. It must be ordered separately with order code EVALSP320SCPU.

The EVALSP320SCPU board must be plugged on the MII mode application board.


The MII mode application board is equipped with two Ethernet, three RS-232, one RS-485, two CAN, SPI, I²C communication interfaces and MicroSD card socket with SDIO interface. There are also two general-purpose push-buttons, four LEDs, a temperature sensor and a potentiometer available for the user interface.

The application board also includes digital input/output serial/parallel connectors with a pinout compatible to many existing evaluation boards from ST:

- Digital input serial: STEVAL-IFP007V1
- Digital input parallel: STEVAL-IFP004V1 and STEVAL-IFP008V1
- Digital output serial: STEVAL-IFP009V1
- Digital output parallel: STEVAL-IFP002V1, STEVAL-IFP001V1 and STEVAL-IFP006V1

The application board can be powered using a standard DC power supply (7 V to 30 V DC) or directly using a 24 V DC industrial mains supply.

Figure 1. SPEAr320S MII mode application board

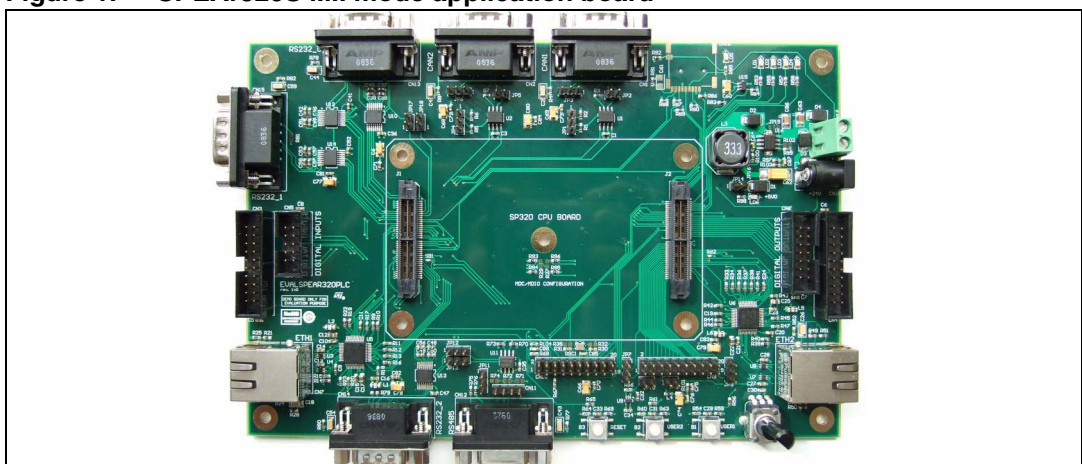

Contents

- 1 Application board features 6**
 - 1.1 Application board block diagram 6
- 2 Application board layout 7**
- 3 Getting started 8**
 - 3.1 Unpacking 8
 - 3.2 Connecting 8
 - 3.3 Booting 8
- 4 Configuration 9**
 - 4.1 Ethernet 9
 - 4.2 Digital input / digital output connectors 10
 - 4.3 Controller–area network bus 11
 - 4.4 RS-232 and RS-485 transceivers 12
 - 4.5 Power supply 13
 - 4.6 Temperature sensor 14
 - 4.7 Potentiometer 14
 - 4.8 General-purpose ADC connector 14
 - 4.9 General-purpose buttons (B1 and B2) 15
 - 4.10 LEDs 15
 - 4.11 Reset button 16
 - 4.12 MicroSD card 16
- 5 Connectors 17**
 - 5.1 CAN DB9 plug connectors (CN1 and CN2) 17
 - 5.2 Digital input serial connector (CN3) 17
 - 5.3 Digital output serial connector (CN4) 18
 - 5.4 Digital input parallel connector (CN5) 18
 - 5.5 Digital output parallel connector (CN6) 19
 - 5.6 Ethernet RJ-45 connectors (CN7 and CN8) 19
 - 5.7 General-purpose ADC connector (CN9) 20

5.8	General-purpose GPIO and I2C connector (CN10)	20
5.9	RS-485 DB9 socket and header connector (CN11 and CN12)	21
5.10	RS-232/UART0 DB9 plug connector (CN13)	21
5.11	RS-232/UART2 DB9 plug connector (CN14)	22
5.12	RS-232/UART1 DB9 plug connector (CN15)	22
5.13	MicroSD card connector (CN16)	23
5.14	Power supply connectors (CN17 and CN18)	24
5.15	SPEAr320S CPU board connectors (J1 and J2)	24
Appendix A Application board bill of materials		27
Appendix B License agreements		30
Revision history		35

List of figures

Figure 1.	SPEAr320S MII mode application board	1
Figure 2.	Block diagram	6
Figure 3.	Application board layout	7
Figure 4.	EVALSP320SPLC board with digital input and digital output cards	10
Figure 5.	8/16 input channel current limiter based on SCLT3-8, STEVAL-IFP007V1	11
Figure 6.	CAN DB9 plug connectors pinout	17
Figure 7.	Digital input serial connector pinout	17
Figure 8.	Digital output serial connector pinout	18
Figure 9.	Digital input parallel connector (CN5) pinout	18
Figure 10.	Digital output parallel connector (CN6) pinout	19
Figure 11.	Ethernet RJ-45 connectors (CN7 and CN8) - Front view	19
Figure 12.	General-purpose ADC connector (CN9) pinout	20
Figure 13.	General-purpose GPIO and I2C connector (CN10) pinout	20
Figure 14.	RS-485 DB9 socket connector CN11 pinout	21
Figure 15.	RS-485 header connector CN12 pinout	21
Figure 16.	RS-232/UART0 DB9 plug connector (CN13) pinout	21
Figure 17.	RS-232/UART2 DB9 plug connector (CN14) pinout	22
Figure 18.	RS-232/UART1 DB9 plug connector (CN15) pinout	22
Figure 19.	MicroSD card connector (CN16) pinout	23
Figure 20.	Power supply connector CN18 diagram	24
Figure 21.	Power supply connector CN17 diagram	24
Figure 22.	86-pin connectors (J1 and J2) pinout	24

List of tables


Table 1.	MII addresses of the Ethernet PHYs (U5 and U6)	9
Table 2.	Default configuration of the Ethernet PHYs (U5 and U6)	9
Table 3.	SMI interface configuration	9
Table 4.	CAN0 transceiver settings	11
Table 5.	CAN1 transceiver settings	12
Table 6.	UART2 RS-232/RS-485 configuration	12
Table 7.	UART0/RS-232 transceiver signals from the CPU board	13
Table 8.	U16 DC/DC converter jumpers	14
Table 9.	ADC conversion settings	15
Table 10.	General-purpose LED configuration	15
Table 11.	CAN DB9 plug connectors description	17
Table 12.	Digital input serial connector description	17
Table 13.	Digital output serial connector description	18
Table 14.	Digital input parallel connector (CN5) description.	18
Table 15.	Digital output parallel connector (CN6) description.	19
Table 16.	Ethernet RJ-45 connectors (CN7 and CN8) description.	19
Table 17.	General-purpose ADC connector (CN9) description.	20
Table 18.	General-purpose GPIO and I2C connector (CN10) pinout description.	20
Table 19.	RS-485 DB9 socket connector CN11 description.	21
Table 20.	RS-485 header connector CN12 description	21
Table 21.	RS-232/UART0 DB9 plug connector (CN13) description	22
Table 22.	RS-232/UART2 DB9 plug connector (CN14) description	22
Table 23.	RS-232/UART1 DB9 plug connector (CN15) description	23
Table 24.	MicroSD card connector (CN16) description	23
Table 25.	Power supply connector CN18 description.	24
Table 26.	Power supply connector CN17 description.	24
Table 27.	86-pin connector (J1) description	24
Table 28.	86-pin connector (J2) description	25
Table 29.	List of components	27
Table 30.	Document revision history	35

1 Application board features

- 2 x Ethernet RJ-45 connectors (ST802RT1A)
- 2 x CAN DB9 plug connectors
- 3 x RS-232 DB9 plug connectors (ST3232EBTR)
- 1 x RS-485 DB9 socket connector (ST3485EBDR)
- Digital input connectors (parallel and serial) compatible with STEVAL-IFP007V1, STEVAL-IFP008V1 and STEVAL-IFP004V1 evaluation boards
- Digital output connectors (parallel and serial) compatible with STEVAL-IFP009V1, STEVAL-IFP001V1, STEVAL-IFP002V1 and STEVAL-IFP006V1 evaluation boards
- On-board temperature sensor (STLM20W87F) and potentiometer (analog input for ADC)
- Analog extension connector featuring 8 ADC lines
- General-purpose extension connector with GPIOs and I²C functionality
- DC/DC converter L7986A (+24 V / +5 V)
- MicroSD card socket
- 4 LEDs, 2 general-purpose buttons and system reset button


1.1 Application board block diagram

Figure 2. Block diagram

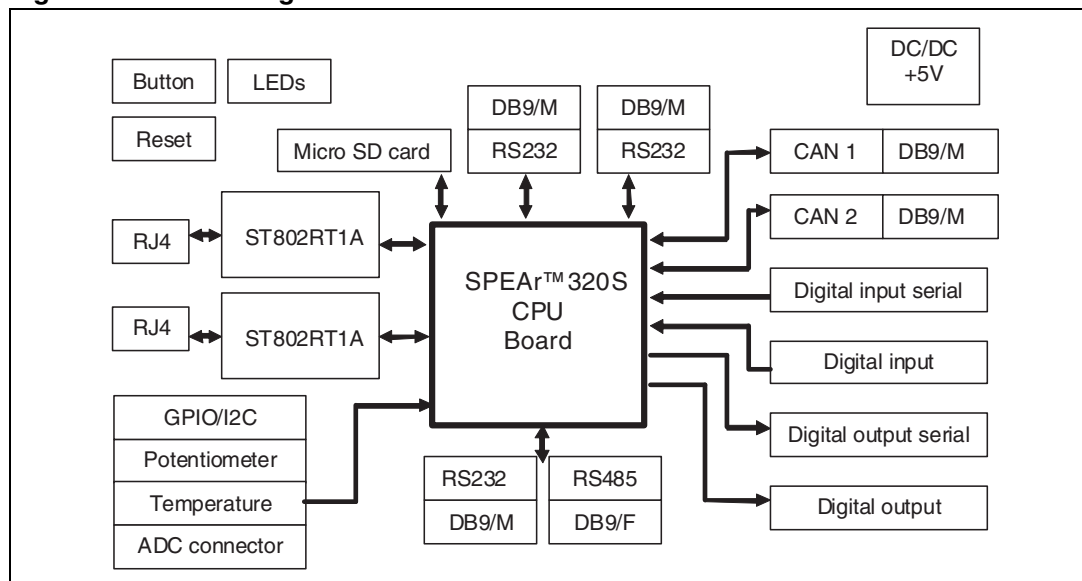

2 Application board layout

Figure 3. Application board layout

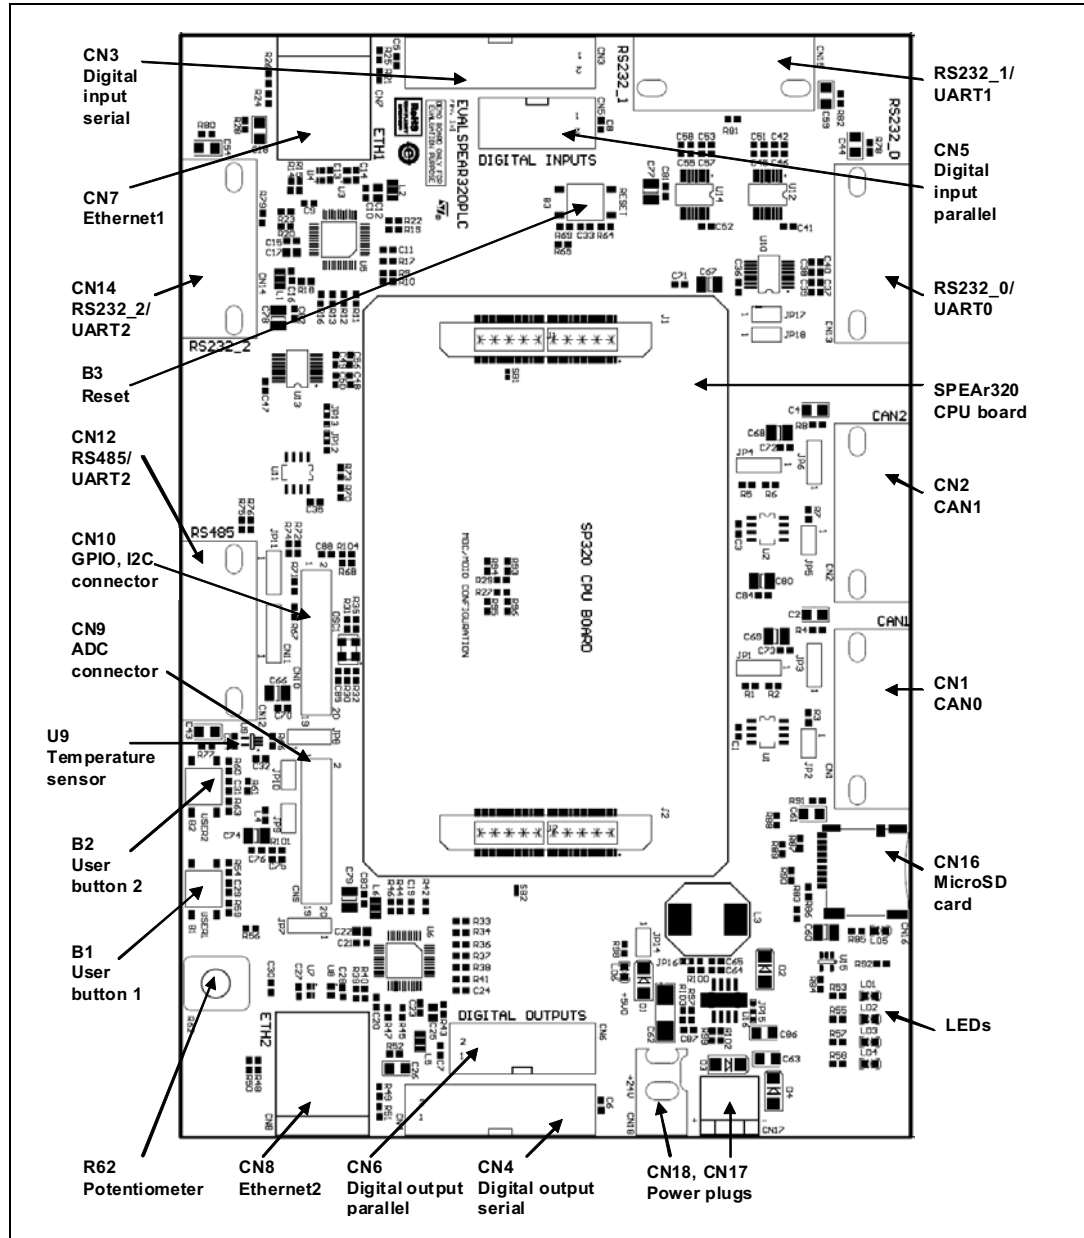

Note: Evaluation boards for SPEAr320S may use the same PCB as SPEAr320 devices. This is why the label "SPEAr320 CPU BOARD" can be found on some SPEAr320S boards.

3 Getting started

3.1 Unpacking

Warning: This board contains static sensitive devices.

The EVALSP320SPLC evaluation board is shipped in protective anti-static packaging. Do not submit the board to high electrostatic potentials, and follow good practices for working with static sensitive devices.

- **Wear an anti-static wristband.** Wearing a simple anti-static wristband can help prevent ESD from damaging the board.
- **Zero potential.** Always touch a grounded conducting material before handling the board, and periodically while handling it.
- **Use an anti-static mat.** When configuring the board, place it on an anti-static mat to reduce the possibility of ESD damage.
- **Handle only the edges.** Handle the board by its edges only, and avoid touching board components.

3.2 Connecting

1. Connect a serial cable from the application board (connector CN13: RS232_0/UART0) to a host PC (see [Figure 3: Application board layout](#)).
2. On a host PC running Windows or Linux, start the Terminal program.
3. Connect a power supply to the EVALSP320SPLC evaluation board as described in [Section 4.5: Power supply on page 13](#).
4. Power on the board. The Terminal program displays a sequence of boot messages followed by the Linux console prompt.

For more information, refer to user manual UM0844 "Getting started with Linux for SPEAr" available at www.st.com/spear.

3.3 Booting

The EVALSP320SPLC evaluation board can boot a Linux kernel pre-installed in the serial NOR Flash.

At power on, the serial port outputs a brief header message with some uBoot information (uBoot version, SDK version, and some internal hardware information). At this point you can choose to:

- **Stop the system directly in uBoot:** Press the spacebar on the host computer keyboard *before* the boot delay time expires (default is 3 seconds).
- **Boot Linux:** The system logs you in automatically as super user and the Linux shell prompt displays on the screen.

4 Configuration

4.1 Ethernet

There are two Ethernet PHYs (U5 and U6) available on the board that are connected through the media independent interfaces (MII) to the Ethernet MACs on the CPU board processor.

By default the MII addresses of the Ethernet PHYs are selected as shown in [Table 1](#).

Table 1. MII addresses of the Ethernet PHYs (U5 and U6)

Ethernet PHY	MII address
U5	0x01
U6	0x02

By default the initial configuration of the Ethernet PHYs is selected as shown in [Table 2](#).

Table 2. Default configuration of the Ethernet PHYs (U5 and U6)

Function	Default configuration
Auto negotiation	Enabled
10/100 Mbits	100 Mbits selected for auto negotiation advertisement
Half/Full duplex	Full duplex selected for auto negotiation advertisement
Internal Loopback	Disabled
Power down	Disabled (PHY is not in Power down state)
MII/RMII mode	MII selected

There are two LEDs embedded in each RJ-45 connector (CN7 and CN8) that indicate the status of the line:

- The green LED in the connector is driven on continuously when the Ethernet link is established with the counterpart.
- The yellow LED in the connector blinks when there is TX or RX activity.

The Serial Management Interface (SMI) is part of the MII interface and is used to transfer management information between the MAC and PHY (access of the PHY registers). There are two SMI interfaces coming from each Ethernet MAC. It is possible to use only one of them to control both Ethernet PHYs or each SMI can be used separately for each PHY.

Table 3. SMI interface configuration

Function	Default configuration
MII1_MDC, MII1_MDIO used for PHY1 (U5) and MII2_MDC, MII2_MDIO used for PHY2 (U6)	R93, R94, R95, R96 loaded R27, R29 not loaded (Default)

Table 3. SMI interface configuration (continued)

Function	Default configuration
MII1_MDC, MII1_MDIO used for both PHYs (U5, U6)	R93, R94, R27, R29 loaded R95, R96 not loaded
MII2_MDC, MII2_MDIO used for both PHYs (U5, U6)	R95, R96, R27, R29 loaded R93, R94 not loaded

For the two Ethernet PHYs (U5 and U6 in MII mode) to function correctly, it is necessary to clock them using a 25-MHz clock. There are two ways to deliver the 25-MHz clock signal to the devices.

4.2 Digital input / digital output connectors

The digital input and digital output connectors are used to extend the EVALSP320SPLC board with the industrial input and output cards.

The input sensors (for example, proximity switches) of the controlled industrial process are normally decoupled and connected by the current limiters based on the CLT and SCLT devices of the microcontroller. The digital outputs, also electrically decoupled, are based on high-side drivers which are used in industrial environments to switch industrial loads (valves, relays, ...) and process control. For both the inputs and outputs, we can use either serial (SPI) or parallel (GPIO) IN/OUT cards.

The EVALSP320SPLC board is compatible with the following cards:

- Digital input serial (CN3): STEVAL-IFP007V1
- Digital output serial (CN4): STEVAL-IFP009V1
- Digital input parallel (CN5): STEVAL-IFP004V1 and STEVAL-IFP008V1
- Digital output parallel (CN6): STEVAL-IFP002V1, STEVAL-IFP001V1 and STEVAL-IFP006V1

Figure 4. EVALSP320SPLC board with digital input and digital output cards

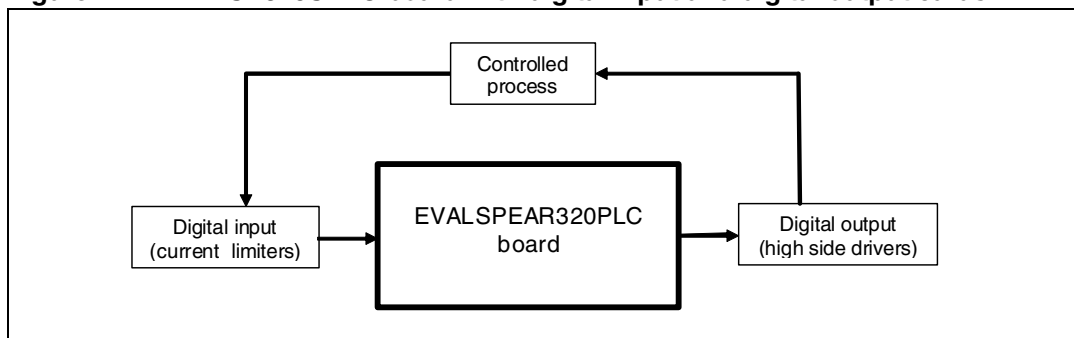


Figure 5. 8/16 input channel current limiter based on SCLT3-8, STEVAL-IFP007V1



4.3 Controller–area network bus

The EVALSP320SPLC evaluation board supports two channels of CAN2.0A/B compliant controller–area network (CAN) bus communication based on a 3.3 V CAN transceiver. High-speed mode, standby mode and slope control mode are available and can be selected by setting jumper JP1 for CAN0 and jumper JP4 for CAN1.

Table 4. CAN0 transceiver settings

Jumper	Description	Configuration						
JP1	CAN0 transceiver works in Standby mode when JP1 is set.	<table border="0"> <tr><td>1</td><td>2</td><td>3</td></tr> <tr><td>●</td><td>●</td><td>●</td></tr> </table>	1	2	3	●	●	●
	1	2	3					
	●	●	●					
CAN0 transceiver works in High-speed mode when JP1 is set (Default).	<table border="0"> <tr><td>1</td><td>2</td><td>3</td></tr> <tr><td>●</td><td>●</td><td>●</td></tr> </table>	1	2	3	●	●	●	
1	2	3						
●	●	●						
CAN0 transceiver works in Slope control mode when JP1 is open.	<table border="0"> <tr><td>1</td><td>2</td><td>3</td></tr> <tr><td>●</td><td>●</td><td>●</td></tr> </table>	1	2	3	●	●	●	
1	2	3						
●	●	●						
JP2	CAN0 terminal 120 Ω resistor is enabled when JP2 is loaded. Default setting: loaded	<table border="0"> <tr><td>1</td><td>2</td></tr> <tr><td>●</td><td>●</td></tr> </table>	1	2	●	●		
1	2							
●	●							

Table 5. CAN1 transceiver settings

Jumper	Description	Configuration
JP4	CAN1 transceiver works in standby mode when JP4 is set.	
	CAN1 transceiver works in high-speed mode when JP4 is set (Default).	
	CAN1 transceiver works in slope control mode when JP4 is open.	
JP5	CAN1 terminal 120Ω resistor is enabled when JP5 is loaded. Default setting: loaded	

4.4 RS-232 and RS-485 transceivers

There are three RS-232 DB9 plug connectors and one RS-485 DB9 socket connector with a Profibus DP compliant pinout available on the board.

UART0 features the full modem control signals and fully utilizes U10, U12 and partly U14 RS-232 transceivers. The RS232_0 signals are available through the CN13 connector. Optionally when the U10 RS-232 transceiver is not soldered on the board, it is possible to line in RS232_TXD and RS232_RXD signals from the CPU board to the CN13 connector.

UART1 features only RX/TX functionality and is connected to the U14 RS-232 transceiver which RS232_1 signals are then available from the CN15 connector.

UART2 features only RX/TX functionality and uses U13 RS232 transceiver which RS232_2 signals are available from the CN14 connector. Optionally by setting jumpers JP12 and JP13, the UART2 RX/TX lines can be connected to the RS-485 transceiver U11 whose outputs are then available from connectors CN11 and CN12. The RS-485 transceiver U11 can be controlled through GPIO pins PL_GPIO77 (receiver enable, R70 - pull up) and PL_GPIO78 (driver output enable, R73 pull down). Check the ST3485 datasheet for further details about all possible transceiver configurations.

Table 6. UART2 RS-232/RS-485 configuration

Jumper	Description	Configuration
JP11	Connects +5.0 V to the RS-485 (R71, R72 and R74) termination network.	
	Connects +3.3 V to the RS-485 (R71, R72 and R74) termination network (Default).	

Table 6. UART2 RS-232/RS-485 configuration (continued)

Jumper	Description	Configuration						
JP12 (SMD resistor) ⁽¹⁾	UART2_TX line is connected to the RS-485 transceiver U11.	<table style="border-collapse: collapse; margin: auto;"> <tr> <td style="padding: 0 5px;">1</td> <td style="padding: 0 5px;">2</td> <td style="padding: 0 5px;">3</td> </tr> <tr> <td style="text-align: center;">■</td> <td style="text-align: center;">■</td> <td style="text-align: center;">■</td> </tr> </table>	1	2	3	■	■	■
	1	2	3					
■	■	■						
UART2_TX line is connected to the RS-232 transceiver U13 (Default).	<table style="border-collapse: collapse; margin: auto;"> <tr> <td style="padding: 0 5px;">1</td> <td style="padding: 0 5px;">2</td> <td style="padding: 0 5px;">3</td> </tr> <tr> <td style="text-align: center;">■</td> <td style="text-align: center;">■</td> <td style="text-align: center;">■</td> </tr> </table>	1	2	3	■	■	■	
1	2	3						
■	■	■						
JP13 (SMD resistor) ⁽¹⁾	UART2_RX line is connected to the RS-485 transceiver U11.	<table style="border-collapse: collapse; margin: auto;"> <tr> <td style="padding: 0 5px;">1</td> <td style="padding: 0 5px;">2</td> <td style="padding: 0 5px;">3</td> </tr> <tr> <td style="text-align: center;">■</td> <td style="text-align: center;">■</td> <td style="text-align: center;">■</td> </tr> </table>	1	2	3	■	■	■
	1	2	3					
■	■	■						
UART2_RX line is connected to the RS-232 transceiver U13 (Default).	<table style="border-collapse: collapse; margin: auto;"> <tr> <td style="padding: 0 5px;">1</td> <td style="padding: 0 5px;">2</td> <td style="padding: 0 5px;">3</td> </tr> <tr> <td style="text-align: center;">■</td> <td style="text-align: center;">■</td> <td style="text-align: center;">■</td> </tr> </table>	1	2	3	■	■	■	
1	2	3						
■	■	■						

1. The configuration of this JP is done loading a 0 ohm resistance between two different positions.

Table 7. UART0/RS-232 transceiver signals from the CPU board

Jumper	Description
JP17	Connects the RS232_TXD signal of the CPU board RS-232 transceiver to CN13 (UART0) Default setting: Not loaded
JP18	Connects the RS232_RXD signal of the CPU board RS-232 transceiver to CN13 (UART0) Default setting: Not loaded

Caution: Do not fit the jumpers when the U10 RS-232 transceiver is soldered on the evaluation board.

4.5 Power supply

There are two options to supply the EVALSP320SPLC evaluation board:






1. Connecting the +5 V voltage adapter (delivered in the EVALSP320SPLC package) to the J11 power voltage connector on the CPU board.
2. Connecting a 7 V to 30 V DC power source (not included in the EVALSP320SPLC package) to either connectors CN17 or CN18 on the application board.

The input voltage is connected to the DC/DC converter U16 (L7986A or optionally L5973A).

The board is protected against overvoltages by the D4 transil diode (SM6T33A) and against possible reverse polarity voltage from an incorrect power plug-in by the D3 Schottky diode (STPS3L40U).

Warning: Do not use both Power supply options at the same time. Doing this may destroy the boards.

Table 8. U16 DC/DC converter jumpers

Jumper	Description	Configuration
JP14	Can be used to disconnect the +5 V delivered from the DC/DC converter U16 (Default - loaded).	
JP15 (SMD resistor) ⁽¹⁾	For L7986A the jumper must be set (Default).	
	Optional when L5973A would be assembled, the jumper must be set as shown at right.	
JP16 (SMD resistor) ⁽¹⁾	For L7986A the jumper must be set as shown at right. (Default)	
	Optional when L5973A would be assembled, the jumper must be set as shown at right.	

1. The configuration of this JP is done loading a 0 ohm resistance between two different positions.

4.6 Temperature sensor

There is an analog temperature sensor (STLM20) available on the board that is connected to the analog input AIN0 of the CPU board. It is possible to disconnect it by removing jumper JP10. The jumper is loaded by default.

4.7 Potentiometer

There is a 10 kΩ potentiometer available on the board connected to the analog input AIN1 of the CPU board. It is possible to disconnect it by removing jumper JP9. The jumper is loaded by default.

4.8 General-purpose ADC connector

Eight analog input lines are available on connector CN9. Inside the connector it is also possible to determine the range of the conversion by setting the conversion limits on the pin CN9-19 (lower limit) and CN9-1 (upper limit) via jumpers JP7 and JP8.

Table 9. ADC conversion settings

Jumper	Description	Configuration						
JP7	Connects the +2.5 V ADC evaluation board ADC supply voltage to the ADC_VREFP pin of the CPU board (Default).	<table style="border-collapse: collapse; margin: auto;"> <tr> <td style="padding: 0 5px;">1</td> <td style="padding: 0 5px;">2</td> <td style="padding: 0 5px;">3</td> </tr> <tr> <td style="text-align: center;">●</td> <td style="text-align: center;">●</td> <td style="text-align: center;">●</td> </tr> </table>	1	2	3	●	●	●
	1	2	3					
●	●	●						
Connects the external ADC application supply voltage to the ADC_VREFP pin of the CPU board.	<table style="border-collapse: collapse; margin: auto;"> <tr> <td style="padding: 0 5px;">1</td> <td style="padding: 0 5px;">2</td> <td style="padding: 0 5px;">3</td> </tr> <tr> <td style="text-align: center;">●</td> <td style="text-align: center;">●</td> <td style="text-align: center;">●</td> </tr> </table>	1	2	3	●	●	●	
1	2	3						
●	●	●						
JP8	Connects the evaluation board GND of the ADC supply voltage domain to the ADC_VREFN pin of the CPU board (Default).	<table style="border-collapse: collapse; margin: auto;"> <tr> <td style="padding: 0 5px;">1</td> <td style="padding: 0 5px;">2</td> <td style="padding: 0 5px;">3</td> </tr> <tr> <td style="text-align: center;">●</td> <td style="text-align: center;">●</td> <td style="text-align: center;">●</td> </tr> </table>	1	2	3	●	●	●
	1	2	3					
●	●	●						
Connects the external ADC application GND (lower limit) supply voltage to the ADC_VREFN pin of the CPU board.	<table style="border-collapse: collapse; margin: auto;"> <tr> <td style="padding: 0 5px;">1</td> <td style="padding: 0 5px;">2</td> <td style="padding: 0 5px;">3</td> </tr> <tr> <td style="text-align: center;">●</td> <td style="text-align: center;">●</td> <td style="text-align: center;">●</td> </tr> </table>	1	2	3	●	●	●	
1	2	3						
●	●	●						

The following relation between the pins should be guaranteed in the application:

$$\begin{aligned}
 0\text{ V} &\leq \text{CN9-1} \leq \text{CN9-3 - CN9-17} \leq \text{CN9-19} \leq +2.5\text{ V} \\
 \text{GND} &\leq \text{ADC_VREFN} \leq \text{AIN0 -AIN7} \leq \text{ADC_VREFP} \leq +2.5\text{ V ADC}
 \end{aligned}$$

4.9 General-purpose buttons (B1 and B2)

There are two general-purpose buttons (B1 and B2) available on the top side of the board. Button B1 can be disconnected from the input CPU board by soldering out resistor R56 and button B2 by soldering out resistor R61.

4.10 LEDs

There are 4 general-purpose LEDs (LD1-LD4) available on the top side of the board. All LEDs are driven on when the related GPIO pin is driven high.

Table 10. General-purpose LED configuration

GPIO pin	LED
PL_GPIO47	LD1
PL_GPIO49	LD2
PL_GPIO58	LD3
PL_GPIO64	LD4

4.11 Reset button

A manual reset button (B3) is available on the board's top side. It resets the microprocessor on the core board. It can be disconnected from the input reset signal of the core board by soldering out resistor R65. In order to perform a hardware reset of the first Ethernet PHY U5 (ETH1), it is necessary to drive low pin PL_GPIO66 of the microprocessor. In order to perform a hardware reset of the second Ethernet PHY U6 (ETH2), it is necessary to drive low pin PL_GPIO76 of the microprocessor.

4.12 MicroSD card

The MicroSD card connector connected to the SDIO interface of the EVALSP320SPLC is available on the board. MicroSD card detection is managed by the standard SDIO signal SDCD when the card is inserted. In order to power-up the MicroSD card properly, it is necessary to detect the card insertion and then to enable the single channel power switch U15 by means of PL_GPIO61 (active low).

Using the thermal and short-circuit protection of the power switch, it is possible to detect overcurrent conditions (> 500 mA) on the MicroSD card connector by pin PL_GPIO57 which is connected to the overcurrent pin of U15. By default the U15 power output is disabled by the R83 pull-up resistor connected to the Enable pin of the power switch.

5 Connectors

5.1 CAN DB9 plug connectors (CN1 and CN2)

Figure 6. CAN DB9 plug connectors pinout

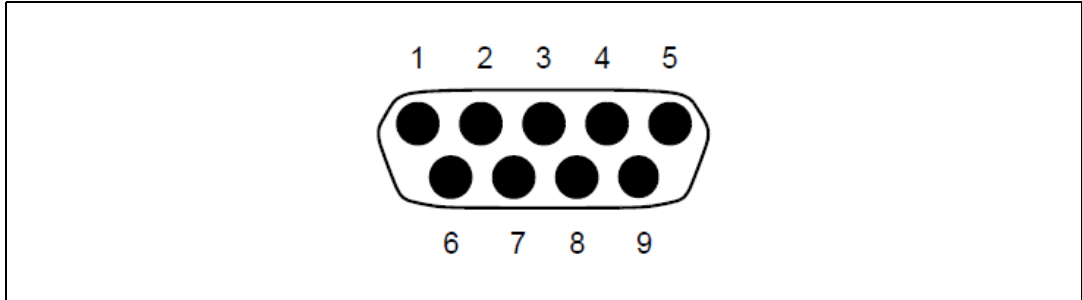


Table 11. CAN DB9 plug connectors description

Pin	Description	Pin	Description
1, 4, 8	NC	7	CANH
2	CANL	3, 6	GND
5	Chassis	9	Optional supply voltage (+3.3 V or +5.0 V)

5.2 Digital input serial connector (CN3)

This connector enables connection of industrial output card STEVAL-IFP007V1.

Figure 7. Digital input serial connector pinout

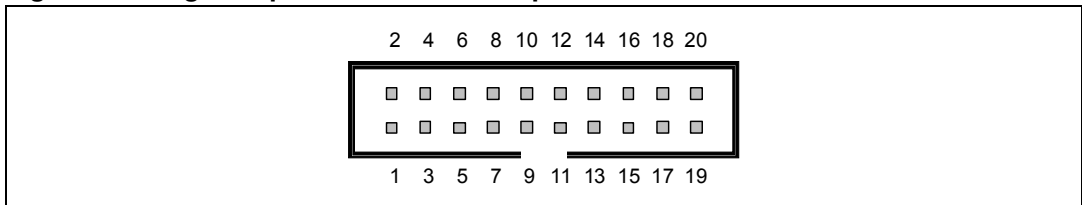


Table 12. Digital input serial connector description

Pin	Signal	Pin	Signal	Pin	Signal	Pin	Signal
1	NC	6	NC	11	SSP_MOSI (PL_GPIO9)	16	NC
2	NC	7	NC	12	SSP_CLK (PL_GPIO8)	17	+3.3 V
3	NC	8	NC	13	SSP_SS0 (PL_GPIO7)	18	GND
4	NC	9	NC	14	SSP_MISO (PL_GPIO6)	19	+3.3 V
5	NC	10	NC	15	NC	20	GND

5.3 Digital output serial connector (CN4)

This connector enables connection of industrial output card STEVAL-IFP009V1.

Figure 8. Digital output serial connector pinout

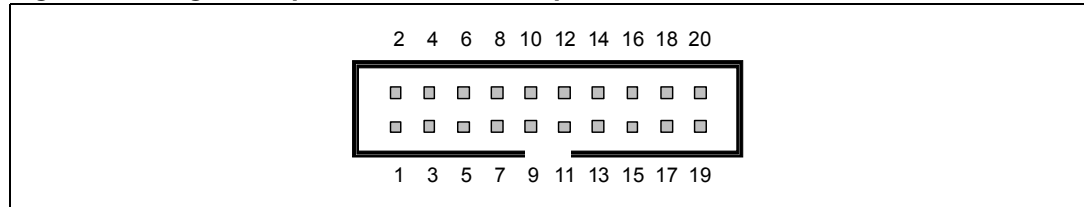


Table 13. Digital output serial connector description

Pin	Signal	Pin	Signal	Pin	Signal	Pin	Signal
1	NC	6	NC	11	NC	16	NC
2	NC	7	NC	12	SSP_MOSI (PL_GPIO9)	17	+3.3 V
3	NC	8	NC	13	SSP_MISO (PL_GPIO6)	18	GND
4	NC	9	SSP_CLK (PL_GPIO8)	14	SSP_SS3 (PL_GPIO35)	19	+3.3 V
5	NC	10	PL_GPIO56	15	NC	20	GND

5.4 Digital input parallel connector (CN5)

This connector enables connection of industrial input cards based on CLT, PCLT devices - STEVAL-IFP004V1 and STEVAL-IFP008V1.

Figure 9. Digital input parallel connector (CN5) pinout

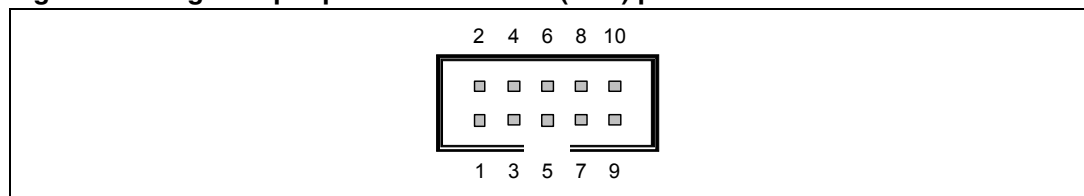


Table 14. Digital input parallel connector (CN5) description

Pin	Signal	Pin	Signal
1	+3.3 V	6	PL_GPIO71
2	GND	7	PL_GPIO70
3	PL_GPIO74	8	PL_GPIO73
4	PL_GPIO79	9	PL_GPIO72
5	PL_GPIO75	10	PL_GPIO69

5.5 Digital output parallel connector (CN6)

This connector enables connection of industrial output cards: STEVAL-IFP002V1, STEVAL-IFP001V1, STEVAL-IFP006V1.

Figure 10. Digital output parallel connector (CN6) pinout

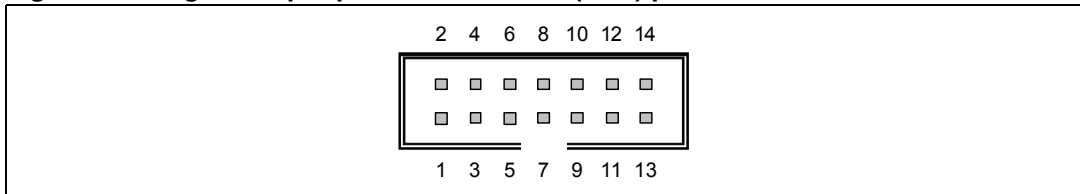


Table 15. Digital output parallel connector (CN6) description

Pin	Signal	Pin	Signal	Pin	Signal
1	+3.3 V	6	PL_GPIO52	11	PL_GPIO55
2	GND	7	PL_GPIO65	12	NC
3	PL_GPIO53	8	PL_GPIO62	13	NC
4	PL_GPIO54	9	PL_GPIO59	14	NC
5	PL_GPIO68	10	PL_GPIO60		

5.6 Ethernet RJ-45 connectors (CN7 and CN8)

Figure 11. Ethernet RJ-45 connectors (CN7 and CN8) - Front view

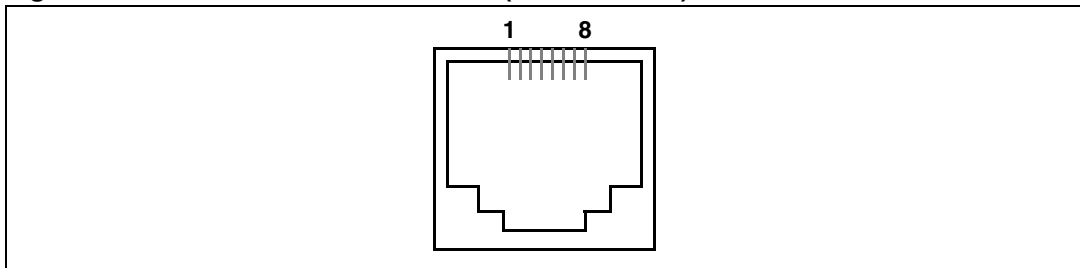


Table 16. Ethernet RJ-45 connectors (CN7 and CN8) description

Pin	Description	Pin	Description
1	TxData+	2	TxData-
3	RxData+	4	NC
5	NC	6	RxData-
7	NC	8	NC

5.7 General-purpose ADC connector (CN9)

Figure 12. General-purpose ADC connector (CN9) pinout

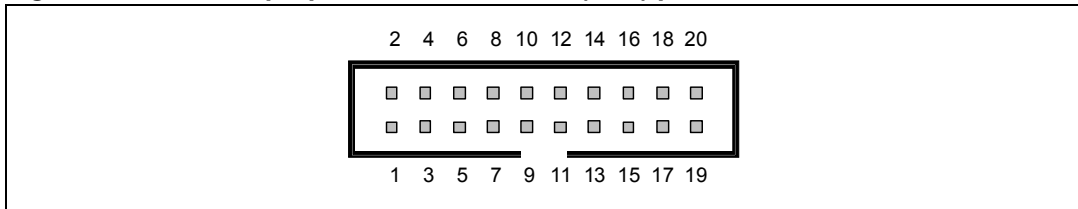


Table 17. General-purpose ADC connector (CN9) description

Pin	Signal	Pin	Signal	Pin	Signal	Pin	Signal
1	ADC VREF Negative or GND by JP8	6	GND	11	AIN4	16	GND
2	GND	7	AIN2	12	GND	17	AIN7
3	AIN0	8	GND	13	AIN5	18	GND
4	GND	9	AIN3	14	GND	19	ADC VREF Positive or +2.5 V by JP7
5	AIN1	10	GND	15	AIN6	20	+2.5 V

5.8 General-purpose GPIO and I²C connector (CN10)

Figure 13. General-purpose GPIO and I²C connector (CN10) pinout

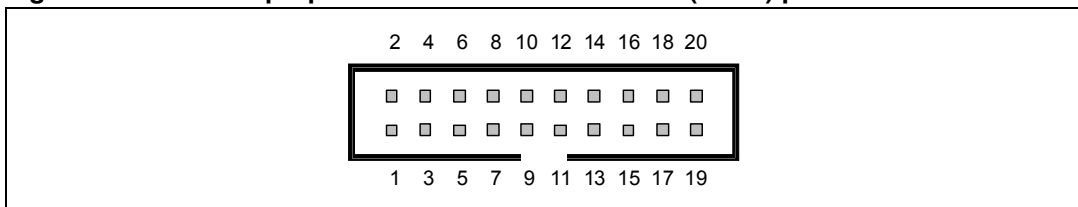


Table 18. General-purpose GPIO and I²C connector (CN10) pinout description

Pin	Signal	Pin	Signal	Pin	Signal	Pin	Signal
1	+3.3 V	6	PL_GPIO5 (I2C_SDA) ^{(1) (2)}	11	PL_CLK3	16	NC
2	NC	7	PL_GPIO34	12	NC	17	NC
3	NC	8	PL_GPIO63	13	NC	18	+2.5 V
4	GND	9	PL_GPIO67	14	NC	19	+5.0 V
5	PL_GPIO4 (I2C_SCK) ⁽²⁾	10	NC	15	NC	20	NC

1. RC filter (R104 and C80) for the SDA line.
2. R67 and R68 are pull-ups for the SCLK and SDA line.

5.9 RS-485 DB9 socket and header connector (CN11 and CN12)

Figure 14. RS-485 DB9 socket connector CN11 pinout

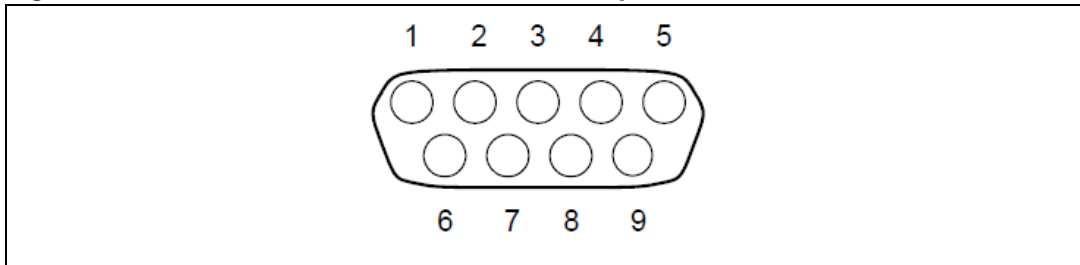


Table 19. RS-485 DB9 socket connector CN11 description

Pin	Description	Pin	Description
1	NC	6	+5.0 V
2	NC	7	NC
3	A	8	B
4	NC	9	NC
5	GND		

Figure 15. RS-485 header connector CN12 pinout

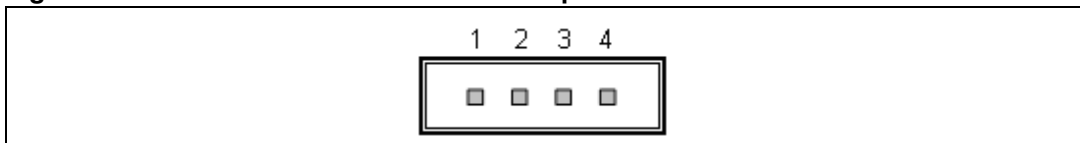


Table 20. RS-485 header connector CN12 description

Pin	Description	Pin	Description
1	+3.3 V	3	A
2	B	4	GND

5.10 RS-232/UART0 DB9 plug connector (CN13)

Figure 16. RS-232/UART0 DB9 plug connector (CN13) pinout

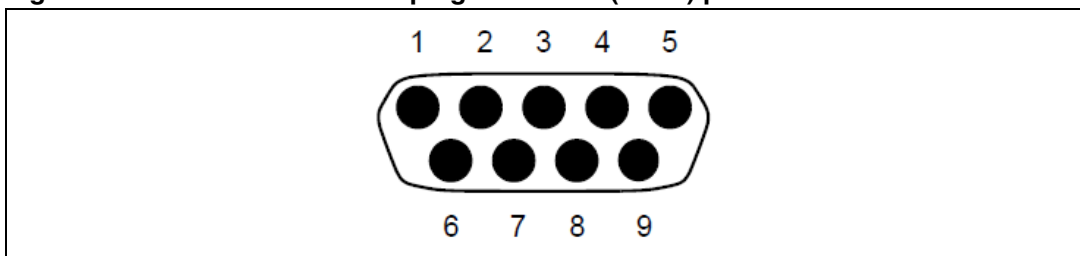


Table 21. RS-232/UART0 DB9 plug connector (CN13) description

Pin	Description	Pin	Description
1	UART0_DCD	6	UART0_DSR
2	UART0_RX	7	UART0_RTS
3	UART0_TX	8	UART0_CTS
4	UART0_DTR	9	UART0_RI
5	GND		

5.11 RS-232/UART2 DB9 plug connector (CN14)

Figure 17. RS-232/UART2 DB9 plug connector (CN14) pinout

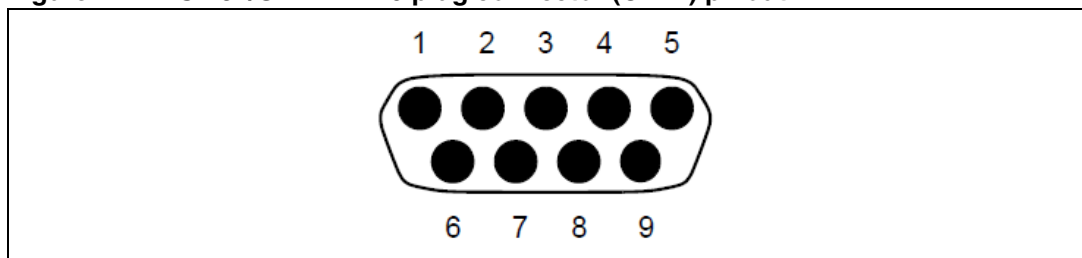


Table 22. RS-232/UART2 DB9 plug connector (CN14) description

Pin	Description	Pin	Description
1	NC (R79 can interconnect this pin with pins 4 and 6)	6	Connected to pin 4
2	UART2_RX	7	Connected to pin 8
3	UART2_TX	8	Connected to pin 7
4	Connected to pin 6	9	NC
5	GND		

5.12 RS-232/UART1 DB9 plug connector (CN15)

Figure 18. RS-232/UART1 DB9 plug connector (CN15) pinout

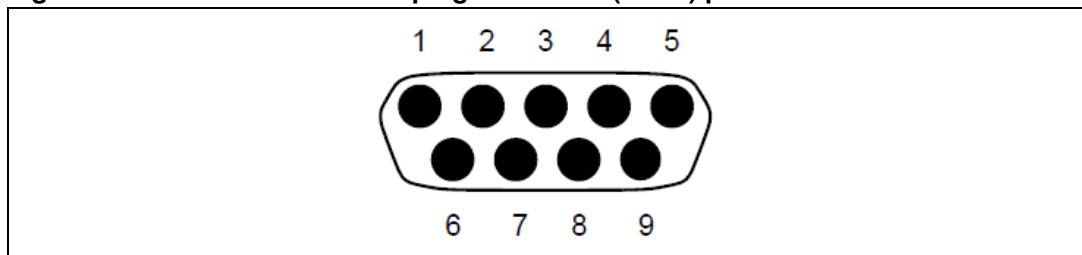


Table 23. RS-232/UART1 DB9 plug connector (CN15) description

Pin	Description	Pin	Description
1	NC (R81 can interconnect this pin with pins 4 and 6)	6	Connected to pin 4
2	UART1_RX	7	Connected to pin 8
3	UART1_TX	8	Connected to pin 7
4	Connected to pin 6	9	NC
5	GND		

5.13 MicroSD card connector (CN16)

See also: [MicroSD card on page 16](#).

Figure 19. MicroSD card connector (CN16) pinout

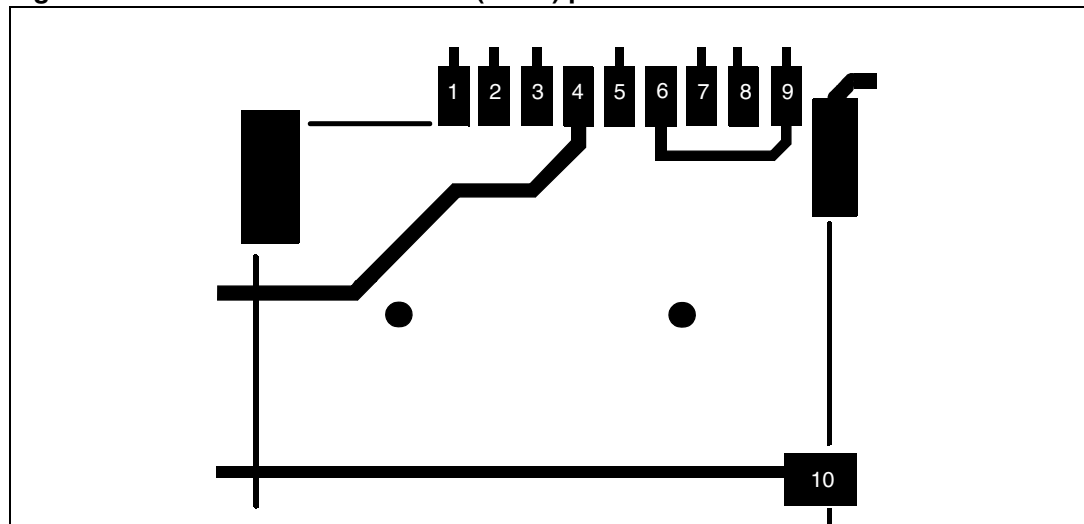


Table 24. MicroSD card connector (CN16) description

Pin	Description	Pin	Description
1	SDAT2 (PL_GPIO45)	6	GND
2	SDAT3 (PL_GPIO46)	7	SDAT0 (PL_GPIO43)
3	SDCMD (PL_CLK4)	8	SDAT1 (PL_GPIO44)
4	+3.3 V (from U15 -single channel power switch)	9	GND
5	SDCLK (PL_CLK2)	10	SDCD (PL_GPIO51)

5.14 Power supply connectors (CN17 and CN18)

Figure 20. Power supply connector CN18 diagram

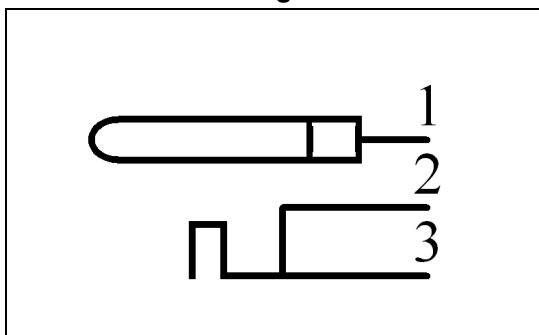


Figure 21. Power supply connector CN17 diagram

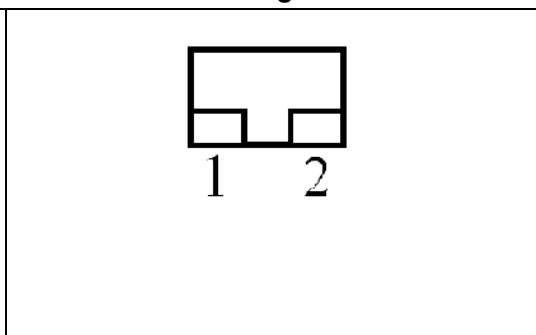


Table 25. Power supply connector CN18 description

Pin	Signal	Pin	Signal
1	24 V DC	3	GND
2	GND		

Table 26. Power supply connector CN17 description

Pin	Signal
1	24 V DC
2	GND

5.15 SPEAr320S CPU board connectors (J1 and J2)

There are two 86-pin connectors (J1 and J2) which are used to extend the evaluation board with the SPEAr320S CPU board.

Figure 22. 86-pin connectors (J1 and J2) pinout

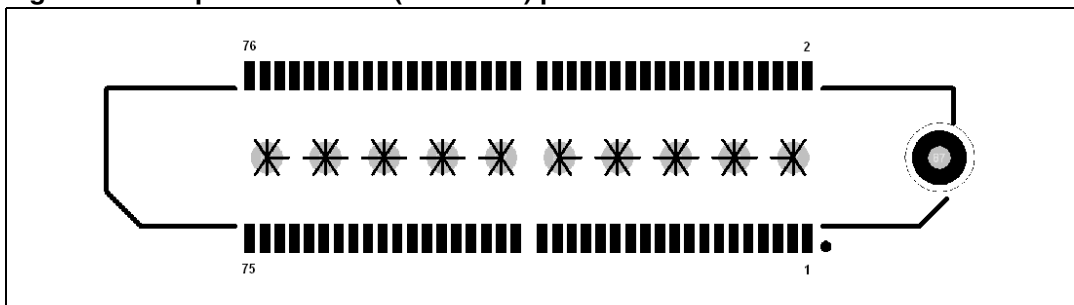


Table 27. 86-pin connector (J1) description

Pin	Description	Pin	Description	Pin	Description
1	NC	30	SSP_MOSI	59	MII1_RXD0
2	+5.0 V	31	MII1_TXD3	60	nRESET

Table 27. 86-pin connector (J1) description (continued)

Pin	Description	Pin	Description	Pin	Description
3	NC	32	MII1_COL	61	MII1_CRS
4	+5.0 V	33	MII1_RXER	62	NC
5	NC	34	SSP_CLK	63	MII1_MDIO
6	+5.0 V	35	MII1_MDC	64	NC
7	NC	36	SSP_MISO	65	SSP_SS0
8	+5.0 V	37	MII1_RXDV	66	NC
9	UART0_TX	38	I2C_SCL / PL_GPIO4	67	UART2_TX
10	SDAT1 / MicroSD card data 1	39	MII1_RXD2	68	NC
11	UART0_RX	40	I2C_SDA/ PL_GPIO5	69	UART2_RX
12	UART0_DCD	41	MII1_RXD3	70	+3.3 V
13	RS232_TXD	42	NC	71	NC
14	UART0_DSR	43	SSP_CS4	72	+3.3 V
15	RS232_RXD	44	NC	73	NC
16	UART0_RTS	45	UART0_RI	74	+3.3 V
17	UART0_DTR	46	NC	75	NC
18	UART1_TX	47	SSP_CS3	76	+3.3 V
19	SDAT0 / MicroSD card data 0	48	NC	77	GND
20	UART0_CTS	49	CAN1_TX	78	GND
21	GPIO34	50	+2.5 V	79	GND
22	CAN1_RX	51	CAN0_RX	80	GND
23	CAN0_TX	52	+2.5 V	81	GND
24	UART1_RX	53	MII1_TXD1	82	GND
25	MII1_RXD1	54	+3.3 V	83	GND
26	MII1_TXD0	55	MII1_TXEN	84	GND
27	MII1_TXD2	56	+2.5 V	85	GND
28	MII1_TXCLK	57	MII1_TXER	86	GND
29	MII1_RXCLK	58	INRESET		

Table 28. 86-pin connector (J2) description

Pin	Description	Pin	Description	Pin	Description
1	LED1 / PL_GPIO47	30	PL_GPIO76	59	MII2_RXER
2	+3.3 V	31	DIDO53 / PL_GPIO53	60	AIN4
3	LED2 / PL_GPIO49	32	MII2_RXD2	61	MII2_RXDV

Table 28. 86-pin connector (J2) description (continued)

Pin	Description	Pin	Description	Pin	Description
4	PL_GPIO63	33	SDCD / MicroSD card detect	62	GND
5	PL_GPIO56	34	MII2_RXD0	63	MII2_TXEN
6	SDAT3 / MicroSD card data 3	35	DIDO54 / PL_GPIO54	64	AIN5
7	LED3 / PL_GPIO58	36	MII2_TXD1	65	MII2_TXD3
8	PL_GPIO57 / MicroSD card over current	37	DIDO74 / PL_GPIO74	66	GND
9	LED4 / PL_GPIO64	38	DIDO79 / PL_GPIO79	67	MII2_TXCLK
10	PL_GPIO61 / MicroSD Power Enable	39	ST3485_RE / PL_GPIO77	68	AIN6
11	SDAT2 / MicroSD data 2	40	MII2_TXD2	69	SDCMD / MicroSD command line
12	PL_GPIO66	41	ST3485_DE / PL_GPIO78	70	GND
13	Button 1 / PL_GPIO48	42	ADC_VREFN	71	PL_CLK3 (PLL3)
14	DIDO69 / PL_GPIO69	43	MII2_MDIO	72	AIN7
15	Button 2 / PL_GPIO50	44	AIN0 / Temperature sensor	73	SDCLK
16	DIDO72 / PL_GPIO72	45	MII2_MDC	74	GND
17	DIDO55 / PL_GPIO55	46	GND	75	PL_CLK1 (PLL1)
18	DIDO73 / PL_GPIO73	47	MII2_RXD3	76	ADC_VREFP
19	DIDO59 / PL_GPIO59	48	AIN0 / Potentiometer	77	GND
20	DIDO70 / PL_GPIO70	49	MII2_COL	78	GND
21	DIDO60 / PL_GPIO60	50	GND	79	GND
22	PL_GPIO67	51	MII2_RXD1	80	GND
23	DIDO65 / PL_GPIO65	52	AIN2	81	GND
24	DIDO71 / PL_GPIO71	53	MII2_TXER	82	GND
25	DIDO62 / PL_GPIO62	54	GND	83	GND
26	DIDO75 / PL_GPIO75	55	MII2_RXCLK	84	GND
27	DIDO68 / PL_GPIO68	56	AIN3	85	GND
28	MII2_CRS	57	MII2_TXD0	86	GND
29	DIDO52 / PL_GPIO52	58	GND		

Note: *DIDO stands for Digital Input / Digital Output.*

Appendix A Application board bill of materials

Table 29. List of components

Designator	Qty.	Description	Value	Order number	Not assembled
B1, B2, B3	3	SE Push button	B3S-1000		
C1, C3, C5, C6, C7, C8, C9, C10, C11, C13, C15, C16, C19, C20, C21, C23, C24, C29, C31, C32, C33, C34, C35, C36, C37, C38, C39, C40, C41, C42, C45, C46, C47, C48, C49, C50, C51, C52, C53, C55, C56, C57, C58, C70, C71, C72, C73, C81, C82, C83, C84 and C89	52	Capacitor (0603)	100 nF		
C2, C4, C18, C26, C43, C44, C54, C59 and C61	9	Capacitor (1206)	10 nF / 500 V		
C12, C17, C22 and C25	4	Capacitor (0805)	10 μ F / X5R ceramic / JMK212BJ106KG		
C30, C64, C75, C76 and C85	5	Capacitor (0603)	10 nF		
C62	1	Polarized Capacitor (CDE)	100 μ F / 10 V / TPSC107M010R0075		
C63	1	Capacitor (1206)	10 μ F / ceramic / 35 V / GMK316F106ZL		
C65 and C88	2	Capacitor (0603)	47 pF		
C60, C66, C67, C68, C69, C74, C77, C78, C79 and C80	10	Polarized Capacitor (B)	22 μ F / 6.3 V / TAJB226K006R		
C86	1	Capacitor (1206)	470 nF / 50 V / C1206C474K5RAC		
C87	1	Capacitor (0603)	1 nF		
CN1, CN2, CN13, CN14 and CN15	5	DB9-male connector	DB9-male		
CN3 and CN4	2	Header, 20-Pin, Dual row, With key			
CN5 and CN6	2	Header, 14-Pin, Dual row, With key			
CN7 and CN8	2	RJ45 Ethernet connector with integrated magnetic, Pulse: J00-0086	J00-0086	Pulse: J00-0086NL	
CN9 and CN10	2	Header, 20-Pin, Dual row			
CN11	1	Header, 4-Pin, Single row			
CN12	1	DB9-female connector	DB9-female Profibus DP		

Table 29. List of components (continued)

Designator	Qty.	Description	Value	Order number	Not assembled
CN16	1	MicroSD card socket	PJS008-2003	YAMAICHI: PJS008-2003 (www.manudax.fr)	
CN17	1	2-pin terminal block, 5.08 mm pitch	Terminal block		
CN18	1	Input power connector, 4.4 V-36 V	DC10A socket		
D1, D2 and D3	3	Schottky Diode	STPS3L40UF	ST: STPS3L40UF	
D4	1	Transil diode	SM6T33A	ST: SM6T33A	
J1 and J2	2	SAMTEC-MIT-038	MIT-38-01-F-D	Samtec: MIT-38-01-F-D	
JP1, JP3, JP4, JP6, JP7, JP8, JP11, JP12 and JP13	9	3-pin Jumper Wire			
JP2, JP5, JP9, JP10, JP14, JP17 and JP18	7	2-pin Jumper Wire			
JP15 and JP16	2	3-pin Jumper Resistor			
L1, L2, L5 and L6	4	Ferrite bead	NFE31PT222Z1E9L		
L3	1	Inductor	MSS1260-333	CoilCraft: MSS1260-333	
L4	1	Inductor	BLM18BA05OSN1D		
LD1 and LD3	2	Typical RED, GREEN, YELLOW, AMBER GaAs LED	Green / LGR971-Z		
LD2 and LD4	2	Typical RED, GREEN, YELLOW, AMBER GaAs LED	Yellow / LYR971-Z		
LD5 and LD6	2	Typical RED, GREEN, YELLOW, AMBER GaAs LED	Red / LSR976		
OSC1	1	25 MHz oscillator SG-210SCB or CFPS-69IB	EPSON SG-210SCB or IQD Frequency Products CFPS-69IB		
R1, R5, R22, R30, R32, R46, R70, R73, R83, R84, R86, R87, R88, R89, R90, R92 and R97	17	Resistor (0603)	10 k Ω		R32
R2, R6, R10, R11, R12, R13, R16, R17, R18, R19, R20, R34, R36, R37, R38, R41, R42, R43, R44 and R45	20	Resistor (0603)	2.2 k Ω		
R3 and R7	2	Resistor (0603)	120 Ω		
R4, R8, R28, R52, R77, R78, R80, R82 and R91	9	Resistor (0603)	1 M Ω		

Table 29. List of components (continued)

Designator	Qty.	Description	Value	Order number	Not assembled
R9, R23, R33, R47 and R99	5	Resistor (0603)	1.2 k Ω		
R14 and R39	2	Resistor (0603)	5.6 k Ω		
R15 and R40	2	Resistor (0603)	91 k Ω		
R21, R26, R48 and R51	4	Resistor (0603)	2 k Ω		
R24, R25, R49, R50 and R72	5	Resistor (0603)	220 Ω		R72
R27, R29, R35, R56, R61, R65, R75, R76, R79, R81, R93, R94, R95 and R96	14	Resistor (0603)	0 Ω		R27, R29, R35, R79, R81
R31	1	Resistor (0603)	33 Ω		
R53, R55, R57, R58, R85 and R104	6	Resistor (0603)	1 k Ω		
R54, R60, R64, R67, R68, R105 and R107	7	Resistor (0603)	4.7 k Ω		
R59, R63, R69, R103, R106 and R108	5	Resistor (0603)	100 Ω		
R62	1	Variable Resistor	10 k Ω , potentiometer RK09K11310KB		
R66	1	Resistor (0603)	470 Ω		
R71 and R74	2	Resistor (0603)	390 Ω NA		R71, R74
R98	1	Resistor (0603)	1.5 k Ω		
R100	1	Resistor (0603)	47 k Ω		
R101	1	Resistor (0603)	47 Ω		
R102	1	Resistor (0603)	102.5 k Ω (91K115K6)		R102
SB1vSB2	2	Soldering Bridge			
U1 and U2	2	CAN transceiver	SN65HVD230		
U5 and U6	2	10/100 Fast Ethernet 3.3 V Transceiver	ST802RT1A	ST: ST802RT1A	
U9	1	Precision Analog Temperature Sensor	STLM20W87F	ST: STLM20W87F	
U10, U12, U13 and U14	4	3.3 V/5 V Dual RS232 Transceiver w/ Int. Cap.	ST3232EBTR	ST: ST3232EBTR	
U11	1	RS485 transceiver	ST3485EBDR	ST: ST3485EBDR	
U15	1	Single channel power switch	STMPS2141STR	ST: STMPS2141STR	
U16	1	DC/DC converter	L7986A	ST: L7986A	

Appendix B License agreements

DEMO PRODUCT LICENSE AGREEMENT

By using this Demonstration Product, You are agreeing to be bound by the terms and conditions of this agreement. Do not use this Demonstration Product until You have read and agreed to the following terms and conditions. The use of the Demonstration Product implies automatically the acceptance of the following terms and conditions.

LICENSE. STMicroelectronics ("ST") grants You the right to use the enclosed demonstration board offering limited features only to evaluate and test ST products, including any incorporated and/or accompanying demo software, components and documentation identified with the order code "EVALSP320SPLC" (collectively, the "Demo Product") solely only for your evaluation and testing purposes. The Demo Product shall not be, in any case, directly or indirectly assembled as a part in any production of Yours as it is solely developed to serve demonstration purposes and has no direct function and is not a finished product. Certain demo software included with the Demo Product may be covered under a separate accompanying end user license agreement, in which case the terms and conditions of such end user license agreement shall apply to that demonstration software.

DEMO PRODUCT STATUS. The Demo Product is offering limited features allowing You only to evaluate and test the ST products. You are not authorized to use the Demo Product in any production system, and may not be offered for sale or lease, or sold, leased or otherwise distributed. If the Demo Product is incorporated in a demonstration system, the demonstration system may be used by You solely for your evaluation and testing purposes. Such demonstration system may not be offered for sale or lease or sold, leased or otherwise distributed and must be accompanied by a conspicuous notice as follows: "This device is not, and may not be, offered for sale or lease, or sold or leased or otherwise distributed".

OWNERSHIP AND COPYRIGHT. Title to the Demo Product, demo software, related documentation and all copies thereof remain with ST and/or its licensors. You may not remove the copyrights notices from the Demo Product. You may make one (1) copy of the software for back-up or archival purposes provided that You reproduce and apply to such copy any copyright or other proprietary rights notices included on or embedded in the demonstration software. You agree to prevent any unauthorized copying of the Demo Product, demonstration software and related documentation.

RESTRICTIONS. You may not sell, assign, sublicense, lease, rent or otherwise distribute the Demo Product for commercial purposes (unless you are an authorized ST distributor provided that all the other clauses of this DEMO PRODUCT LICENSE AGREEMENT shall apply entirely), in whole or in part, or use Demo Product in production system. Except as provided in this Agreement or in the Demo Product's documentation, You may not reproduce the demonstration software or related documentation, or modify, reverse engineer, de-compile or disassemble the demonstration software, in whole or in part.

You warrant to ST that the Demo Product will be used and managed solely and exclusively in a laboratory by skilled professional employees of Yours with proven expertise in the use and management of such products and that the Demo Product shall be used and managed according to the terms and conditions set forth in the related documentation provided with the Demo Product.

According to European Semiconductor Industry Association (ESIA) letter, "ESIA Response on WEEE Review (May 2008) of the Directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE)"; Semiconductor products and evaluation & demonstration boards are not in the scope of the Directive 2002/96/EC of the European Parliament and of the Council on waste electrical and electronic equipment (WEEE). Consequently aforementioned products do not have to be registered nor are they subject to the subsequent obligations.

NO WARRANTY. The Demo Product is provided "as is" and "with all faults" without warranty of any kind expressed or implied. ST and its licensors expressly disclaim all warranties, expressed, implied or otherwise, including without limitation, warranties of merchantability, fitness for a particular purpose and non-infringement of intellectual property rights. ST does not warrant that the use in whole or in part of the Demo Product will be interrupted or error free, will meet your requirements, or will operate with the combination of hardware and software selected by You. You are responsible for determining whether the Demo Product will be suitable for your intended use or application or will achieve your intended results.

ST shall not have any liability in case of damages, losses, claims or actions anyhow caused from combination of the Demo Product with another product, board, software or device.

ST has not authorized anyone to make any representation or warranty for the Demo Product, and any technical, applications or design information or advice, quality characterization, reliability data or other services provided by ST shall not constitute any representation or warranty by ST or alter this disclaimer or warranty, and in no additional obligations or liabilities shall arise from ST's providing such information or services. ST does not assume or authorize any other person to assume for it any other liability in connection with its Demo Products.

All other warranties, conditions or other terms implied by law are excluded to the fullest extent permitted by law.

LIMITATION OF LIABILITIES. In no event ST or its licensors shall be liable to You or any third party for any indirect, special, consequential, incidental, punitive damages or other damages (including but not limited to, the cost of labour, re-qualification, delay, loss of profits, loss of revenues, loss of data, costs of procurement of substitute goods or services or the like) whether based on contract, tort, or any other legal theory, relating to or in connection with the Demo Product, the documentation or this Agreement, even if ST has been advised of the possibility of such damages. In no event shall ST's

aggregate liability to You or any third party under this agreement for any cause action, whether based on contract, tort, or any other legal theory, relating to or in connection with the Demo Product, the documentation or this agreement shall exceed the purchase price paid for the Demo Product if any.

TERMINATION. ST may terminate this license at any time if You are in breach of any of its terms and conditions. Upon termination, You will immediately destroy or return all copies of the demo software and documentation to ST.

APPLICABLE LAW AND JURISDICTION. In case of dispute and in the absence of an amicable settlement, the only competent jurisdiction shall be the Courts of Geneva, Switzerland. The applicable law shall be the law of Switzerland. The UN Convention on contracts for the International Sales of Goods shall not apply to these General Terms and Conditions of Sale.

SEVERABILITY. If any provision of this agreement is or becomes, at any time or for any reason, unenforceable or invalid, no other provision of this agreement shall be affected thereby, and the remaining provisions of this agreement shall continue with the same force and effect as if such unenforceable or invalid provisions had not been inserted in this Agreement.

WAIVER. The waiver by either party of any breach of any provisions of this Agreement shall not operate or be construed as a waiver of any other or a subsequent breach of the same or a different provision.

RELATIONSHIP OF THE PARTIES. Nothing in this Agreement shall create, or be deemed to create, a partnership or the relationship of principal and agent or employer and employee between the Parties. Neither Party has the authority or power to bind, to contract in the name of or to create a liability for the other in any way or for any purpose.

RECYCLING. The Demo Product is not to be disposed as an urban waste. At the end of its life cycle, differentiated waste collection must be followed, as stated in the directive 2002/96/EC.

In all the countries belonging to the European Union (EU Dir. 2002/96/EC) and those following differentiated recycling, the Demo Product is subject to differentiated recycling at the end of its life cycle, therefore:

It is forbidden to dispose the Demo Product as an undifferentiated waste or with other domestic wastes. Consult the local authorities for more information on the proper disposal channels.

It is mandatory to sort the demo product and deliver it to the appropriate collection centers, or, when possible, return the demo product to the seller.

An incorrect Demo Product disposal may cause damage to the environment and is punished by the law.

10-Nov-2008

SOFTWARE LICENSE AGREEMENT

This Software License Agreement ("Agreement") is displayed for You to read prior to downloading and using the Licensed Software. If you choose not to agree with these provisions, do not download or install the enclosed Licensed Software and the related documentation and design tools. By using the Licensed Software, You are agreeing to be bound by the terms and conditions of this Agreement. Do not use the Licensed Software until You have read and agreed to the following terms and conditions. The use of the Licensed Software implies automatically the acceptance of the following terms and conditions.

DEFINITIONS

Licensed Software: means the enclosed demonstration software and all the related documentation and design tools licensed in the form of object and/or source code as the case may be.

Product: means a product or a system that includes or incorporates solely and exclusively an executable version of the Licensed Software and provided further that such Licensed

Software executes solely and exclusively on ST products.

LICENSE

STMicroelectronics ("ST") grants You a non-exclusive, worldwide, non-transferable (whether by assignment, law, sublicense or otherwise), revocable, royalty-free limited license to:

(i) make copies, prepare derivatives works, display internally and use internally the source code version of the Licensed Software for the sole and exclusive purpose of developing executable versions of such Licensed Software only for use with the Product;

(ii) make copies, prepare derivatives works, display internally and use internally object code versions of the Licensed Software for the sole purpose of designing, developing and manufacturing the Products;

(iii) make, use, sell, offer to sell, import or otherwise distribute Products.

OWNERSHIP AND COPYRIGHT

Title to the Licensed Software, related documentation and all copies thereof remain with ST and/or its licensors. You may not remove the copyrights notices from the Licensed Software.

You may make one (1) copy of the Licensed Software for back-up or archival purposes provided that You reproduce and apply to such copy any copyright or other proprietary rights notices included on or embedded in the Licensed Software. You agree to prevent any unauthorized copying of the Licensed Software and related documentation.

RESTRICTIONS

Unless otherwise explicitly stated in this Agreement, You may not sell, assign, sublicense, lease, rent or otherwise distribute the Licensed for commercial purposes, in whole or in part purposes (unless you are an authorized ST distributor provided that all the other clauses of this DEMO PRODUCT LICENSE AGREEMENT shall apply entirely).

You acknowledge and agree that any use, adaptation translation or transcription of the

Licensed Software or any portion or derivative thereof, for use with processors manufactured by or for an entity other than ST is a material breach of this Agreement and requires a separate license from ST. No source code and/or object code relating to and/or based upon Licensed Software is to be made available by You to any third party for whatever reason.

You acknowledge and agrees that the protection of the source code of the Licensed Software warrants the imposition of security precautions and You agree to implement reasonable security measures to protect ST's proprietary rights in the source code of the Licensed Software. You shall not under any circumstances copy, duplicate or otherwise reproduce the source code of the Licensed Software in any manner, except as reasonably necessary to exercise Your rights hereunder and make one back-up copy. You are granted the right to make one archival or backup copy of the source code of the Licensed Software, which copy shall be marked as an archival copy and as the confidential information of ST. Access to the source code of the Licensed Software shall be restricted to only those of Your employees with a need-to-know for the purpose of this Agreement.

You will not under any circumstances permit the source code of the Licensed Software in any form or medium (including, but not limited to, hard copy or computer print-out) to be removed from your official premises as you have informed us. The source code of the Licensed Software must remain inside your official premises, as you have informed us. You will lock the source code of the Licensed Software and all copies thereof in a secured storage inside your official premises at all times when the source code of the Licensed Software is not being used as permitted under this Agreement.

You will inform all Your employees who are given access to the source code of the Licensed Software of the foregoing requirements, and You will take all reasonable precautions to ensure and monitor their compliance with such requirements. You agree to promptly notify ST in the event of a violation of any of the foregoing, and to cooperate with ST to take any remedial action appropriate to address the violation. You shall keep accurate records with respect to its use of the source code of the Licensed Software. In the event ST demonstrates to You a reasonable belief that the source code of the Licensed Software has been used or distributed in violation of this Agreement, ST may by written notification request certification as to whether such unauthorized use or distribution has occurred. You shall reasonably cooperate and assist ST in its determination of whether there has been unauthorized use or distribution of the source code of the Licensed Software and will take appropriate steps to remedy any unauthorized use or distribution.

You agree that ST shall have the right (where ST reasonably suspects that the terms and conditions of this Agreement with reference to Restriction clause have not been complied with) upon reasonable notice to enter Your official premises in order to verify your compliance with this Restriction clause.

NO WARRANTY

The Licensed Software is provided "as is" and "with all faults" without warranty of any kind expressed or implied. ST and its licensors expressly disclaim all warranties, expressed, implied or otherwise, including without limitation, warranties of merchantability, fitness for a particular purpose and non-infringement of intellectual property rights. ST does not warrant that the use in whole or in part of the Licensed Software will be interrupted or error free, will meet your requirements, or will operate with the combination of hardware and software selected by You.

You are responsible for determining whether the Licensed Software will be suitable for your intended use or application or will achieve your intended results. ST has not authorized anyone to make any representation or warranty for the Licensed Software, and any technical, applications or design information or advice, quality characterization, reliability data or other services provided by ST shall not constitute any representation or warranty by ST or alter this disclaimer or warranty, and in no additional obligations or liabilities shall arise from ST's providing such information or services. ST does not assume or authorize any other person to assume for it any other liability in connection with its Licensed Software.

Nothing contained in this Agreement will be construed as:

- (i) a warranty or representation by ST to maintain production of any ST device or other hardware or software with which the Licensed Software may be used or to otherwise maintain or support the Licensed Software in any manner; and
- (ii) a commitment from ST and/or its licensors to bring or prosecute actions or suits against

third parties for infringement of any of the rights licensed hereby, or conferring any rights to bring or prosecute actions or suits against third parties for infringement. However, ST has the right to terminate this Agreement immediately upon receiving notice of any claim, suit or proceeding that alleges that the Licensed Software or your use or distribution of the Licensed

Software infringes any third party intellectual property rights.

All other warranties, conditions or other terms implied by law are excluded to the fullest extent permitted by law.

LIMITATION OF LIABILITIES

In no event ST or its licensors shall be liable to You or any third party for any indirect, special, consequential, incidental, punitive damages or other damages (including but not limited to, the cost of labour, re-qualification, delay, loss of profits, loss of revenues, loss of data, costs of procurement of substitute goods or services or the like) whether based on contract, tort, or any other legal theory, relating to or in connection with the Licensed Software, the documentation or this Agreement, even if ST has been advised of the possibility of such damages.

In no event shall ST's liability to You or any third party under this Agreement, including any claim with respect of any third party intellectual property rights, for any cause of action exceed

100 US\$. This section does not apply to the extent prohibited by law. For the purposes of this section, any liability of ST shall be treated in the aggregate.

TERMINATION

ST may terminate this license at any time if You are in breach of any of its terms and conditions. Upon termination, You will immediately destroy or return all copies of the software and documentation to ST.

APPLICABLE LAW AND JURISDICTION

In case of dispute and in the absence of an amicable settlement, the only competent jurisdiction shall be the Courts of Geneva, Switzerland. The applicable law shall be the law of Switzerland.

SEVERABILITY

If any provision of this agreement is or becomes, at any time or for any reason, unenforceable or invalid, no other provision of this agreement shall be affected thereby, and the remaining provisions of this agreement shall continue with the same force and effect as if such unenforceable or invalid provisions had not been inserted in this Agreement.

WAIVER

The waiver by either party of any breach of any provisions of this Agreement shall not operate or be construed as a waiver of any other or a subsequent breach of the same or a different provision.

RELATIONSHIP OF THE PARTIES

Nothing in this Agreement shall create, or be deemed to create, a partnership or the relationship of principal and agent or employer and employee between the Parties. Neither Party has the authority or power to bind, to contract in the name of or to create a liability for the other in any way or for any purpose.

Revision history

Table 30. Document revision history

Date	Revision	Changes
01-Mar-2012	1	Initial release.
21-Mar-2012	2	Modified introduction to indicate that the CPU board is ordered separately and removed CPU board hardware description sections.

Please Read Carefully:

Information in this document is provided solely in connection with ST products. STMicroelectronics NV and its subsidiaries ("ST") reserve the right to make changes, corrections, modifications or improvements, to this document, and the products and services described herein at any time, without notice.

All ST products are sold pursuant to ST's terms and conditions of sale.

Purchasers are solely responsible for the choice, selection and use of the ST products and services described herein, and ST assumes no liability whatsoever relating to the choice, selection or use of the ST products and services described herein.

No license, express or implied, by estoppel or otherwise, to any intellectual property rights is granted under this document. If any part of this document refers to any third party products or services it shall not be deemed a license grant by ST for the use of such third party products or services, or any intellectual property contained therein or considered as a warranty covering the use in any manner whatsoever of such third party products or services or any intellectual property contained therein.

UNLESS OTHERWISE SET FORTH IN ST'S TERMS AND CONDITIONS OF SALE ST DISCLAIMS ANY EXPRESS OR IMPLIED WARRANTY WITH RESPECT TO THE USE AND/OR SALE OF ST PRODUCTS INCLUDING WITHOUT LIMITATION IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE (AND THEIR EQUIVALENTS UNDER THE LAWS OF ANY JURISDICTION), OR INFRINGEMENT OF ANY PATENT, COPYRIGHT OR OTHER INTELLECTUAL PROPERTY RIGHT.

UNLESS EXPRESSLY APPROVED IN WRITING BY TWO AUTHORIZED ST REPRESENTATIVES, ST PRODUCTS ARE NOT RECOMMENDED, AUTHORIZED OR WARRANTED FOR USE IN MILITARY, AIR CRAFT, SPACE, LIFE SAVING, OR LIFE SUSTAINING APPLICATIONS, NOR IN PRODUCTS OR SYSTEMS WHERE FAILURE OR MALFUNCTION MAY RESULT IN PERSONAL INJURY, DEATH, OR SEVERE PROPERTY OR ENVIRONMENTAL DAMAGE. ST PRODUCTS WHICH ARE NOT SPECIFIED AS "AUTOMOTIVE GRADE" MAY ONLY BE USED IN AUTOMOTIVE APPLICATIONS AT USER'S OWN RISK.

Resale of ST products with provisions different from the statements and/or technical features set forth in this document shall immediately void any warranty granted by ST for the ST product or service described herein and shall not create or extend in any manner whatsoever, any liability of ST.

ST and the ST logo are trademarks or registered trademarks of ST in various countries.

Information in this document supersedes and replaces all information previously supplied.

The ST logo is a registered trademark of STMicroelectronics. All other names are the property of their respective owners.

© 2012 STMicroelectronics - All rights reserved

STMicroelectronics group of companies

Australia - Belgium - Brazil - Canada - China - Czech Republic - Finland - France - Germany - Hong Kong - India - Israel - Italy - Japan - Malaysia - Malta - Morocco - Philippines - Singapore - Spain - Sweden - Switzerland - United Kingdom - United States of America

www.st.com